



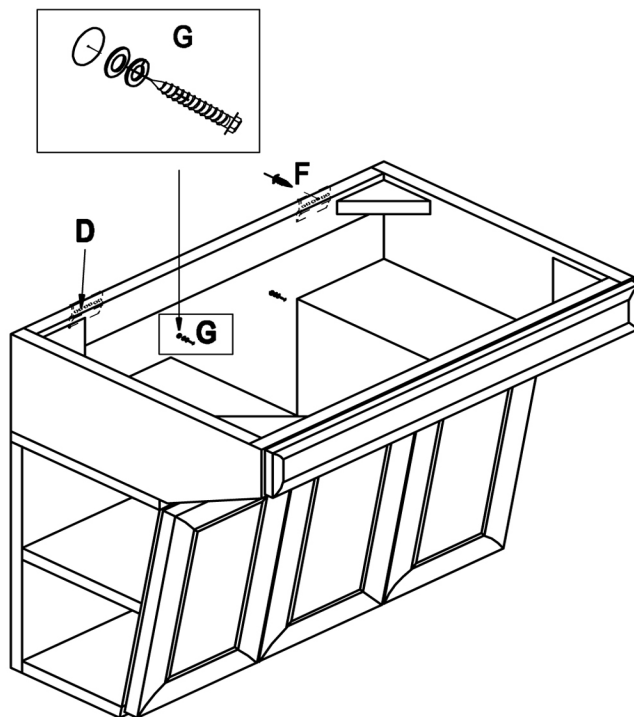

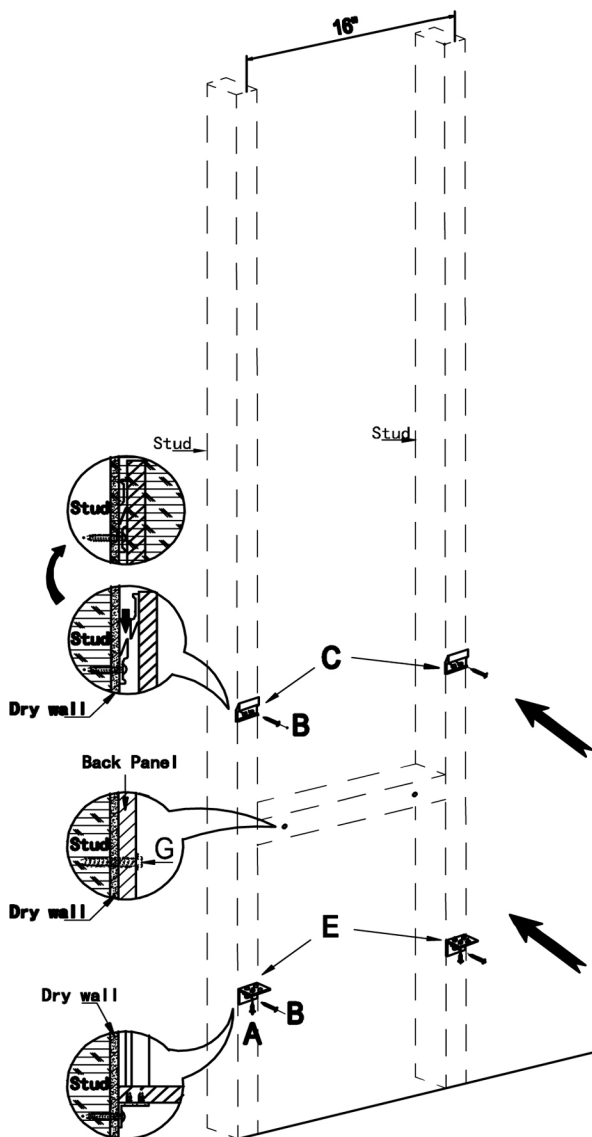





 
 


Shaker 185-ADW3621

*USE TC-3722W8, TC-3722W1 or TC-3722B8



PARTS LIST			TOOLS AND MATERIALS	
A		8PCS	 Electric drill	 Tape measure
B		6PCS		
C		2PCS		
D		2PCS		
E		2PCS	 Screwdriver	 Pencil
F		8PCS		
G	 	2SET		

Fairmont Designs highly recommends that you seek a professional installation specialist if you are unsure of installation. Please note: Fairmont Designs is not responsible for any installation error, damages or injuries, actual or consequential, resulting from possible printing error in instruction