

 
 
 


Exhilarating by Design

Volkano Erupt Soap Dish Holder

Installation Guide

Code: V1513, V1514, V1515

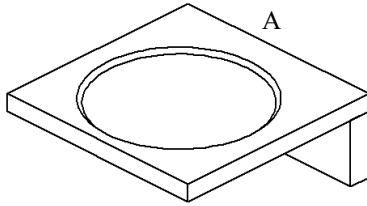

Parts Included	QTY
A - Soap Dish Holder	1
B - Screw	2
C - Set Screw	1
D - Allen Key	1
E - Bracket	1

Model #	Description	Finish	Weight (lb)	WxHxD (mm)	WxHxD (Inches)	Metal Type
V1513	Erupt Soap Dish Holder	Chrome	1.8	100 x 30 x 100	4 x 1.1 x 4	Brass
V1514	Erupt Soap Dish Holder	Brushed Nickel	1.8	100 x 30 x 100	4 x 1.1 x 4	Brass
V1515	Erupt Soap Dish Holder	Matte Black	1.8	100 x 30 x 100	4 x 1.1 x 4	Brass

Warranty: 2 Years

Care & Maintenance: A periodic wash using warm water and a soft cloth will retain the high quality finish of your Volkano product for many years to come. ON NO ACCOUNT should any household bleaches, detergents, abrasive polishes, steel wool or other cleaning agents be used on this item.

