



Installation Instructions

Important: Please read these instructions before starting work.

1. Check that there are no buried pipes or cables before drilling and holes. Take extreme care when using electrical equipment near water.
2. Do not fix accessories onto newly painted surfaces as chemical reactions could cause discoloration to the products. (Please refer to the manufactures instructions.)
3. We recommend the use of a specialized drill bit when fixing accessories to tiled areas.

Supplied Mounting hardware:

Allen key, screws and wall plugs.

Mounting Instructions:

1. Establish the position for the accessories, making sure there is sufficient room.
2. Using the enclosed Allen key, remove the decorative cover, and the mounting plate, by loosening the set screw found on the post.
3. Hold the backplate in the required position onto the wall and mark through with a pencil. If two backplates are necessary, measure the distance between the two post centers, ensuring the marks are horizontal by use of a carpenter's level.
4. Drill holes to a minimum depth of 1" inch using a 3/16" inch drill bit. Gently insert the wall plugs into the hole either by hand, or by gently tapping with a rubber mallet, until they are flush with the wall. If need be, carefully increase the diameter of the hole to accommodate the anchor. The anchor must fit snugly into the wall to assure a secure fixation of the mounting plate.
5. Fix the mounting plate to the wall by screwing the supplied screws through the oblong holes and into the anchors. Replace the decorative cover, then the post, making sure that the set screw points directly downward before tightening.

Care Instructions:

We recommend regular cleaning with a mild soap and dried with a soft cloth. The use of abrasive cleaners or bleaches will damage the finish.

If further assistance is required, please contact Customer Service at 1-888-825-7266 (9am-5pm EST)