#### 170130

# THE **Rubinet** FAUCET COMPANY

## **ASSEMBLY INSTRUCTION**

### 4R-4SRTL or Q

TEMPERATURE CONTROL VALVE WITH BUILT-IN STOPS AND VOLUME CONTROL VALVE



**4RRTL or 4SRTL** 




### **4RRTQ or 4SRTQ**


#### **REMOVAL OF FIXTURE:**


Always turn the water supply off before removing the existing fixture or disassembling a valve. Open both fixture handles to relieve water pressure and to ensure that the water has been successfully turned off.

#### CARE OF FIXTURE:


The use of warm water and a soft cloth is all that is required to clean Rubinet products. The patina of our living finishes (Oil Rubbed Bronze & Tuscan Brass) will change as a result of normal use. Applying Mineral Oil on occasion will create a softer look, subtle color changes and character.

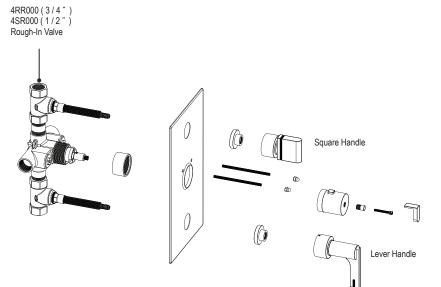

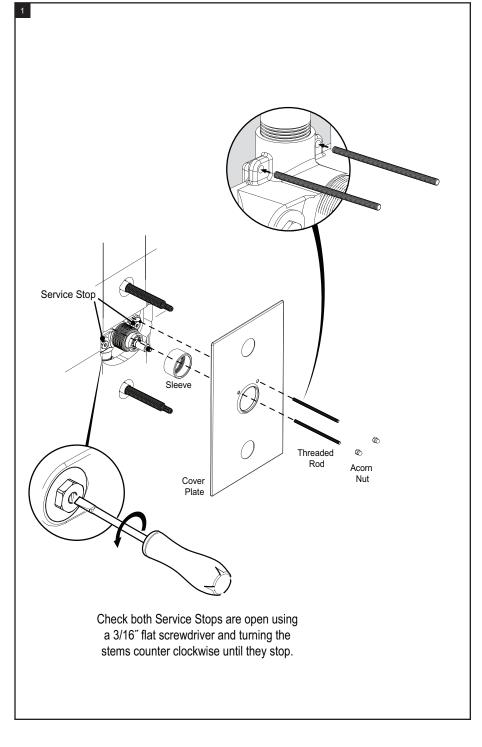


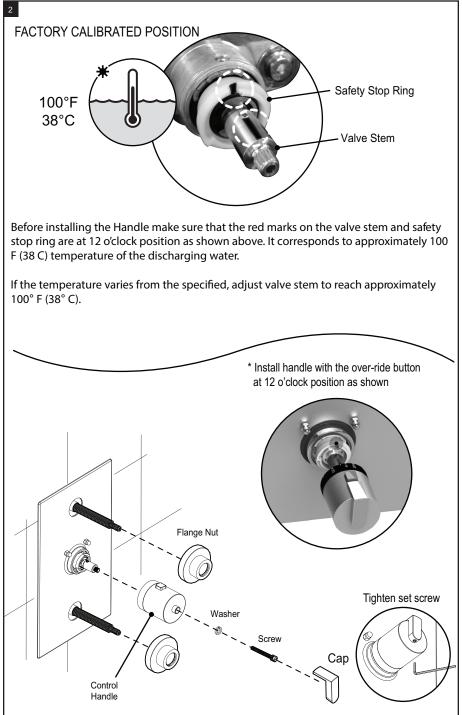


## TEMPERATURE CONTROL VALVE WITH BUILT-IN STOPS WITH TWO VOLUME CONTROL VALVE

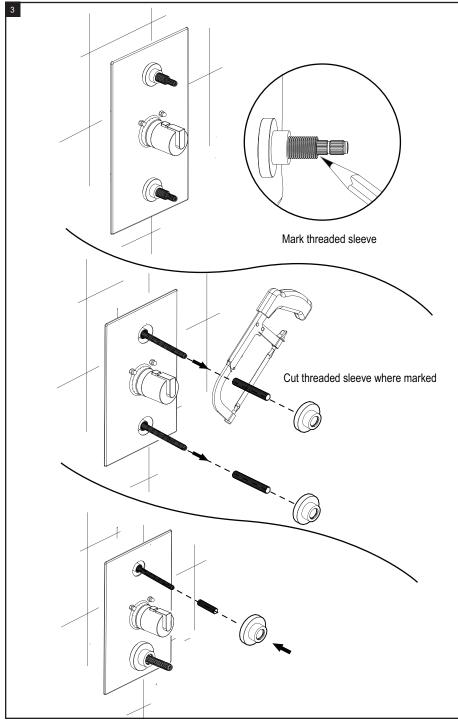


## TEMPERATURE CONTROL VALVE WITH BUILT-IN STOPS WITH TWO VOLUME CONTROL VALVE

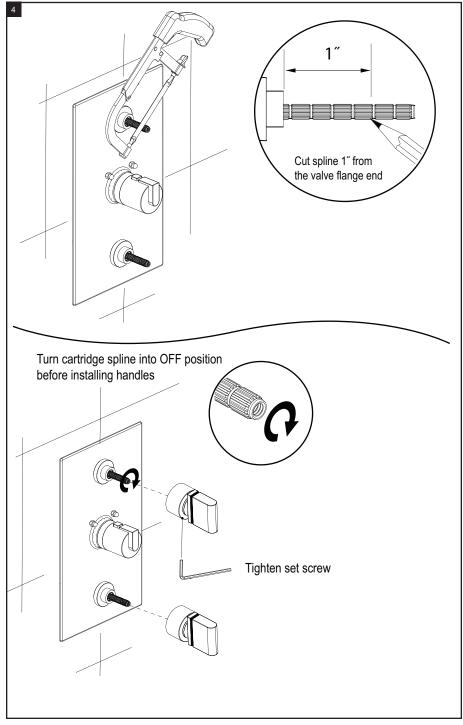

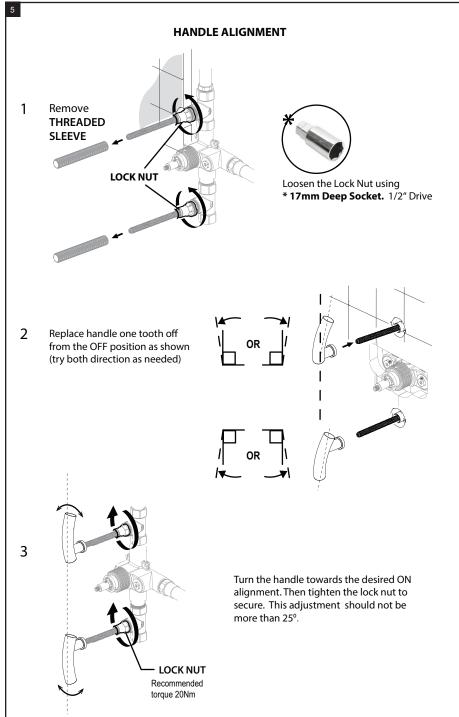

#### FEATURES:

- Brass construction with choice of 21 finishes
- Lever or square handles for Shut-Off Volume Control Valves
- Single handle Mixer control
- Factory preset at 38°C (100.4°F)
- Temperature range from 15°C (59°F) to 60°C (140°F)
- Safety stop with override function

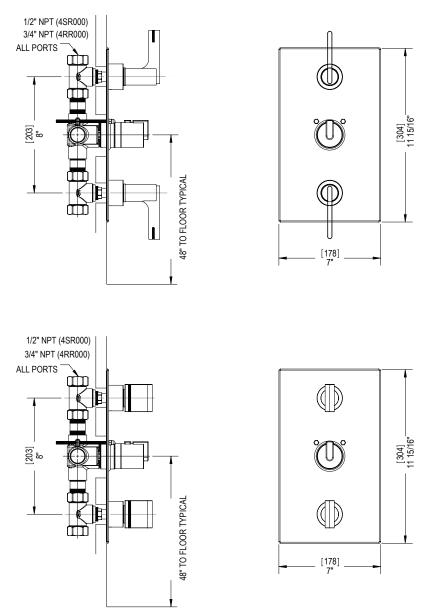

#### CONTACT US:

If you need assistance with installation, replacement parts or have any questions regarding your Rubinet product, please call a Customer Service representative at: 905-851-6781 toll free 1-800-461-5901 or visit **www.rubinet.com**