ASSEMBLY INSTRUCTION

4E/4KICL or Q

VOLUME CONTROL VALVE






REMOVAL OF FIXTURE:


Always turn the water supply off before removing the existing fixture or disassembling a valve. Open all handles to relieve water pressure and to ensure that the water has been successfully turned off.


CARE OF FIXTURE:


The use of warm water and a soft cloth is all that is required to clean Rubinet products. The patina of our living finishes (Oil Rubbed Bronze & Tuscan Brass) will change as a result of normal use. Applying Mineral Oil on occasion will create a softer look, subtle color changes and character.

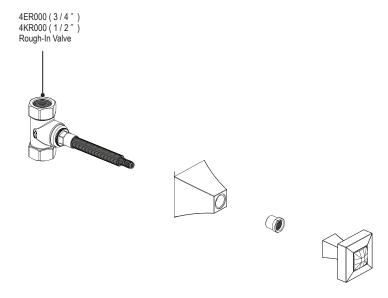




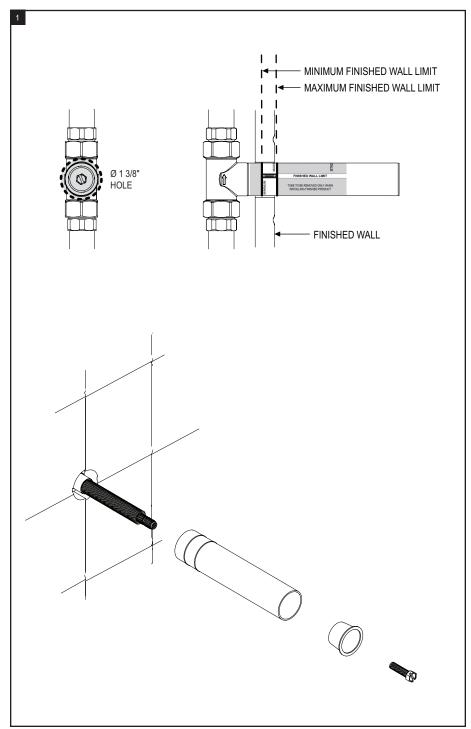


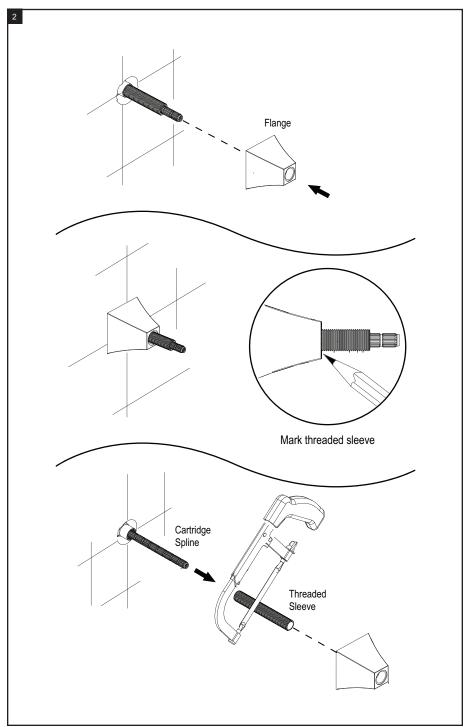

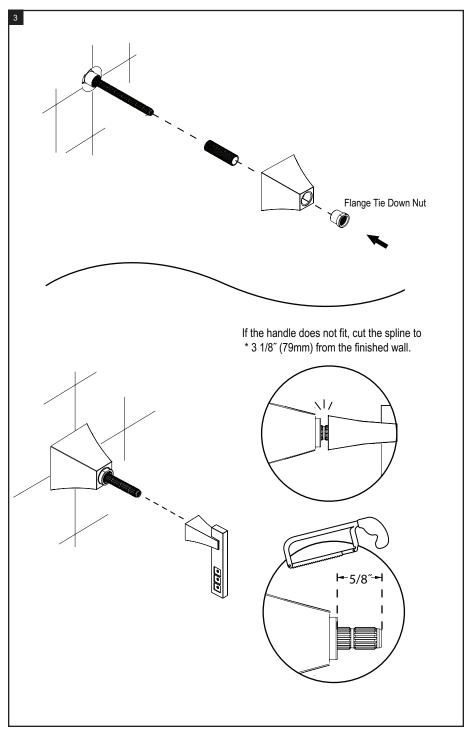

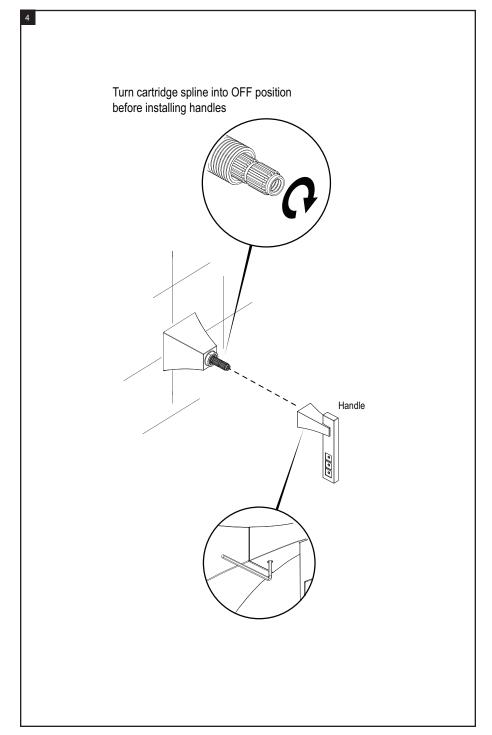


HANDLE ALIGNMENT (4E/4K)

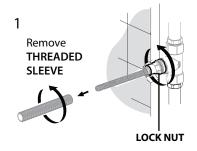



Loosen the Lock Nut using
* 17mm Deep Socket. 1/2" Drive

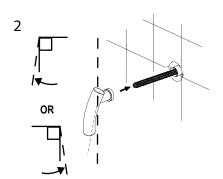

Replace handle one tooth off from the OFF position as shown (try both direction as needed)


3

 


Turn the handle towards the desired ON alignment. Then tighten the lock nut to secure. This adjustment should not be more than 25°.

FEATURES:

- Brass construction with choice of 21 finishes
- Lever or Square handle: Plain or with Swarovski* Crystal inlay
- Quarter turn, ceramic disc cartridge
- 2.5 gpm @ 60 psi

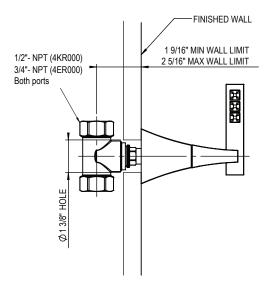



CONTACT US:

If you need assistance with installation, replacement parts or have any questions regarding your Rubinet product, please call a Customer Service representative at: 905-851-6781 toll free 1-800-461-5901 or visit **www.rubinet.com**