THE **Rubinet** FAUCET COMPANY

ASSEMBLY INSTRUCTION

4P-4QICL or Q

TEMPERATURE CONTROL VALVE WITH BUILT-IN STOPS AND VOLUME CONTROL VALVE



4PICL (1/2" valve) 4QICL (3/4" valve)




4PICC (1/2" valve) 4QICC (3/4" valve)


REMOVAL OF FIXTURE:


Always turn the water supply off before removing the existing fixture or disassembling a valve. Open all fixture handles to relieve water pressure and to ensure that the water has been successfully turned off.

CARE OF FIXTURE:


The use of warm water and a soft cloth is all that is required to clean Rubinet products. The patina of our living finishes (Oil Rubbed Bronze & Tuscan Brass) will change as a result of normal use. Applying Mineral Oil on occasion will create a softer look, subtle color changes and character.

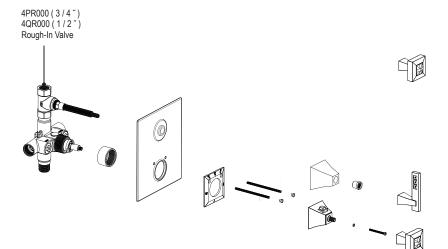

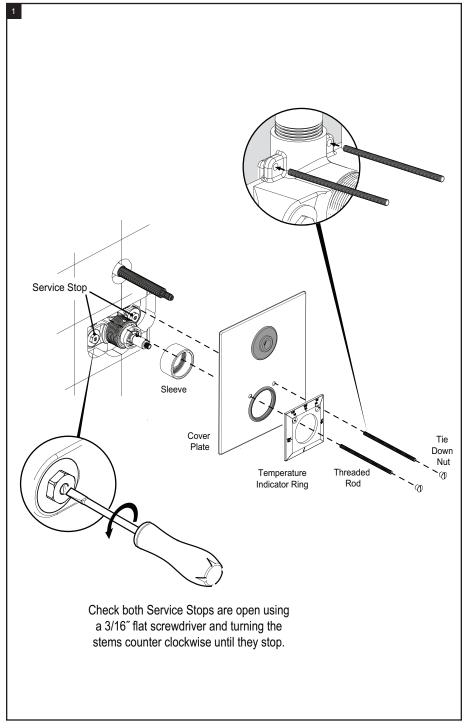


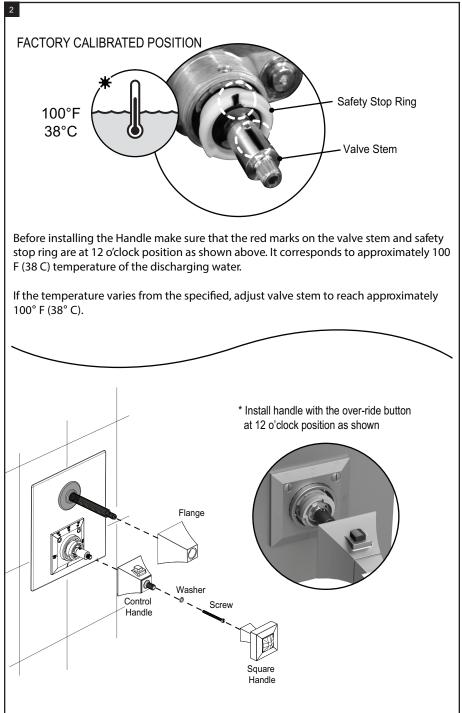


TEMPERATURE CONTROL VALVE WITH BUILT-IN STOPS WITH VOLUME CONTROL VALVE

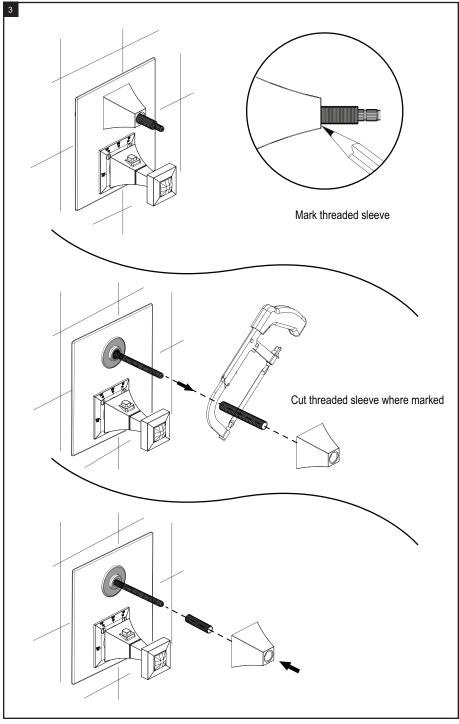


TEMPERATURE CONTROL VALVE WITH BUILT-IN STOPS WITH VOLUME CONTROL VALVE

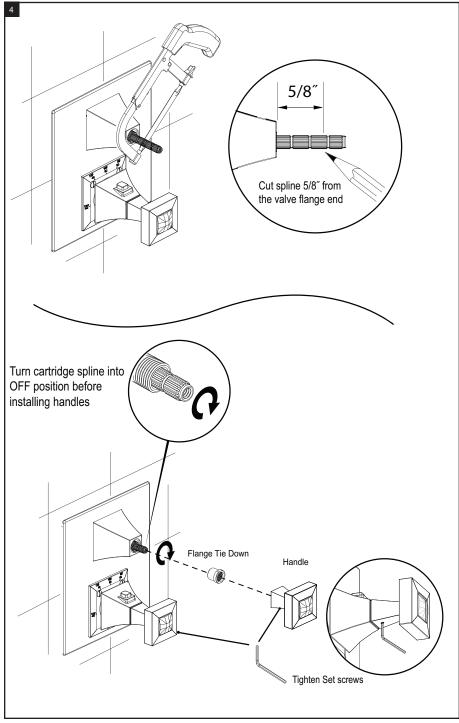


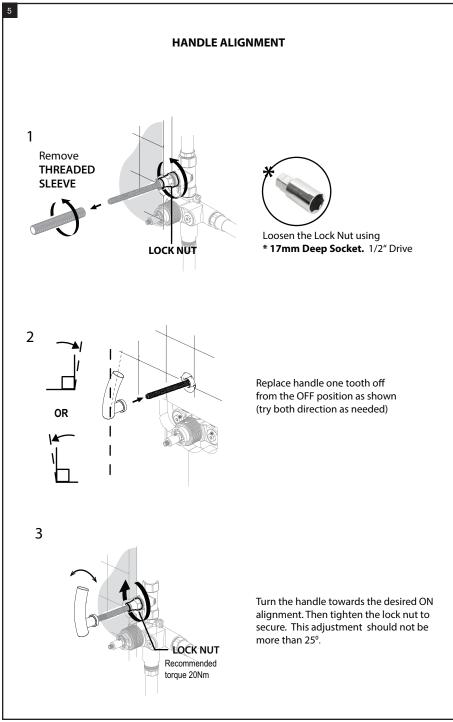

FEATURES:

- Brass construction with choice of 21 finishes
- Handle for Shut-Off Volume Control Valve
- Single handle Mixer control
- Factory preset at 38°C (100.4°F)
- Temperature range from 15°C (59°F) to 60°C (140°F) Safety stop with override function

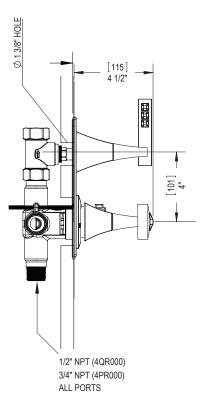

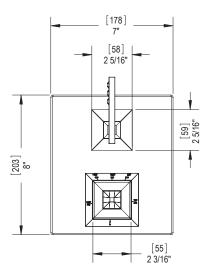

CONTACT US:

If you need assistance with installation, replacement parts or have any questions regarding your Rubinet product, please call a Customer Service representative at: 905-851-6781 toll free 1-800-461-5901 or visit www.rubinet.com