 

WATERMYRK



#	PART NAME
1	MLS2-RSR (SUPPLY RISER)
2	502-COMP-NUT
3	SS-502 Valve




#	PART NAME
1	MTS1-RSR (SUPPLY RISER)
2	COUPLING NUT
3	FILLER VALVE

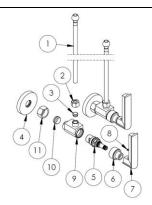




#	Description	
1	Copper Supply Riser	2
2	Supply Riser Compression Nut	2
3	Supply Riser Compression Ferrule	2
4	Decorative Flange	2
5	CRT502-H	2
6	Decorative Cartridge Cover	2
7	Brut Lever Handle	2
8	Set Screw (#8-32x1/8")	2
9	½" Comp. Supply Valve Body	2
10	½" Pipe Compression Ferrule	2
11	½" Pipe Compression Nut	2

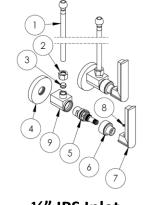

1/2" IPS Inlet, i.e. MAS2 and MAS6 in all series

#	Description	Qty
1	Copper Supply Riser	2
2	Supply Riser Compression Nut	2
3	Supply Riser Compression Ferrule	2
4	Decorative Flange	2
5	CRT502-H	2
6	Decorative Cartridge Cover	2
7	Brut Lever Handle	2
8	Set Screw (#8-32x1/8")	2
9	½" IPS Supply Valve Body	2

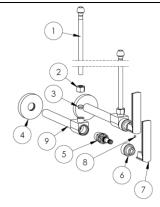

½" Sweat Inlet, i.e. MAS3 and MAS7 in all series

#	Description	Qty
1	Copper Supply Riser	2
2	Supply Riser Compression Nut	2
3	Supply Riser Compression Ferrule	2
4	Decorative Flange	2
5	CRT502-H	2
6	Decorative Cartridge Cover	2
7	Brut Lever Handle	2
8	Set Screw (#8-32x1/8")	2
9	½" Sweat Supply Valve Body	2

IMPORTANT INSTALLATION INFORMATION

- USE TEFLON TAPE OR PIPE SEALANT FOR THREADED CONNECTIONS
- DO NOT USE PLUMBER'S PUTTY ON ANY OF THE BRASS COMPONENTS
 This will cause the finish to tarnish and void the warranty. A non-corrosive Alkoxy Silicone is recommended.
- DURING SWEATING OF LINES DO NOT OVERHEAT CASTING Overheating may cause damage to internal mechanism
- COPPER ADAPTORS MAY BE REQUIRED TO COMPLETE YOUR INSTALLATION

For technical support, please call 718-257-2800