

Solimar™

TS-70-70 Wall Tub Spout Installation Instructions

CALIFORNIA FAUCETS RECOMMENDS THAT ALL PLUMBING PRODUCTS BE INSTALLED BY A LICENSED PROFESSIONAL

IMPORTANT: Read all instructions prior to installation and provide copy of instructions to consumer.

Operating Specifications:

Recommended Supply Pressure: 20 to 70 psi[†] Flow Rate (at 60 psi): 10 gpm † If water pressure exceeds 70 psi, install a Pressure-Reducing Valve (RPV).

INSTALLING SPOUT


- Prior to installing spout in-wall fittings and rough valve must be properly installed and wall surface must be completely finished
- Recommended through-hole size shall be Ø1-1/4"
- Apply thread sealant to both threaded ends of NIPPLE (2), not supplied, and tighten into supported ELBOW (1), not supplied

IMPORTANT: QUICK CONNECT (3) <u>must sit inside wall 5/8" min to 1" max</u>, to properly secured SPOUT (6) to QUICK CONNECT (3). This may be achieved by selecting proper NIPPLE (2) length.


- Securely tighten QUICK CONNECT (3) onto end of NIPPLE (2) using I/2" open-end wrench
- Place O-RING (4) into ESCUTCHEON (5) & slide ESCUTCHEON (5) onto QUICK CONNECT (3)

IMPORTANT: To prevent damage to internal o-ring on SPOUT **(6)**, QUICK CONNECT **(3)** <u>must</u> be free of any dirt and/or debris

 Slide SPOUT (6) onto QUICK CONNECT (3), align ESCUTCHEON (5) & SPOUT (6) and tighten SETSCREW (7) on bottom side of SPOUT (6)

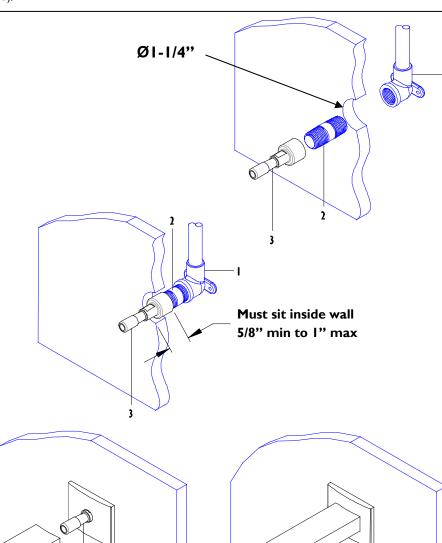



SPECIFICATION DIMENSIONS

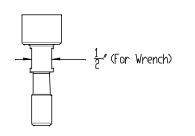

THROUGH-HOLE SPECIFICATIONS

SPOUT: Ø 1-1/4"

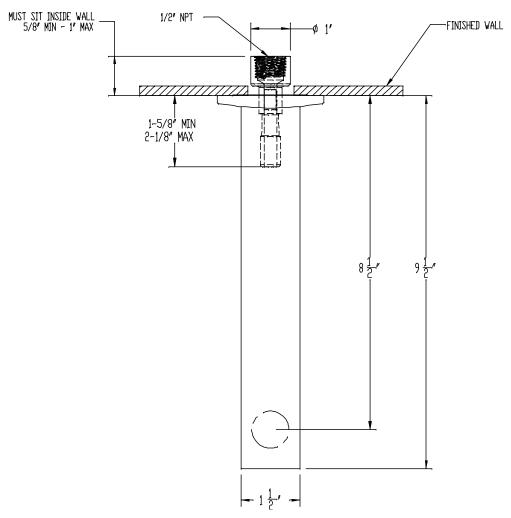

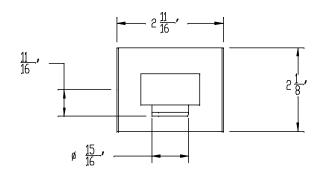

ALL DIMENSIONS SHOWN TO NEAREST 1/16"