INSTALLATION INSTRUCTIONS


Adjustable Wall Bar Part #'s: 4624, 4630, 4642



NOTE: SCREW (6) MUST BE TIGHTENED BY HAND. DO NOT USE AN ELECTRIC SCREW DRIVER OR DRILL.

COMPONENT PARTS

1	Prong
2	Prong holder
3	Wall bar
4	Post holder cap
5	Washer
6	Screw
7	Post holder
8	Flange
9	Internal mount
10	Fastener
11	Brass ring

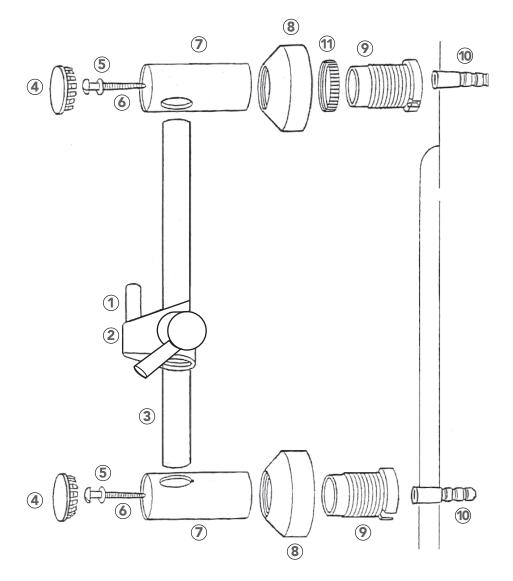

INSTALLATION

- 1. Slip post holder (7) onto flange (8).
- 2. Screw threaded internal mount (9) into post holder (7). Use brass ring (11) if wall is uneven.
- 3. Slide prong holder (2) onto wall bar (3). Make sure prong (1) is pointed up and away from wall.
- 4. Mount two post holders (7) on ends of wall bar (3).
- 5. Mark screw position on wall through slot in threaded internal mount (9). Drill holes and insert fasteners (10).
- 6. Put washer (5) on screw (6) and screw through slot into fastener (10).
- 7. Snap post holder cap (4) onto post holder (7).