
# WATERMYRK

## **FEATURES**

- ¼ turn washerless ceramic disc valve cartridges
- Flexible hose connection for 8" to 16" spread installations
- Flow rate 2.2 gpm (8.3 lpm) maximum flow rate
- Solid brass construction
- Warranty:
  - Limited lifetime warranty (residential use)
  - o One year (commercial use)


- Standard finishes:
  - o polished chrome
  - satin nickel
  - o polished nickel
  - o rustic brass
- Listed by IAPMO, CSA, NSF, and other municipalities
- Shipping weight (lbs.) 10
- Shipping dimensions (in.): 29x12x4




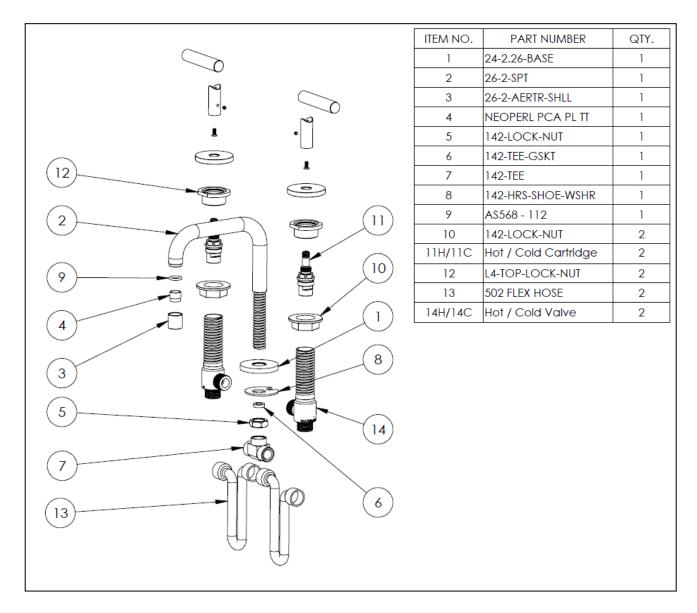

- 1. Carefully remove all parts from the box.
- 2. Begin by first installing the Spout.
  - a. Remove the "T" Assembly (6,7) from the Spout (2).
  - **b.** Drop the Spout through the hole in your countertop or sink.
  - c. Tighten the Lock Nut (5) against the underside of mounting surface.
  - d. Re-assemble "T" Assembly onto bottom of Spout.
- 3. Identify your Hot and Cold Valves.
  - a. Remove all trim from Valve Assembly (including Top Lock Nut [12] where applicable), leaving Bottom Lock Nut (10).
  - b. Begin to tighten the Valve to your countertop or sink with a Top Lock Nut (12) (Refer to Diagram) but do not tighten completely.
  - c. Install Escutcheon and Handle (refer to "Handle Trims" section) on valve body (14). Be sure that bottom of handle properly clears top of the Escutcheon.
  - d. Once you have adjusted the Valve height, remove Handle and proceed to tighten Valve from the bottom until it is snug.
  - e. Install Handle on the Valve.
- 4. Connect the two Flex Hoses (13) to "T" Assembly (7) and to the HOT (14H) and COLD (14C) valves respectively.
  - These hoses can be bent or twisted, but be careful not to kink the hoses or you will have limited water supply and excessive noise from the faucet.
- 5. Begin by bleeding the water lines before connecting to the valves. Connect water supplies to bottom of each valve.
- 6. Remove flow restrictors found in both inlets of "T" Assembly (7) and flush faucet by running both Hot and Cold water in full open position. Replace the flow restirctors.
- 7. Check for leaks. If leaks or problems occur, re-tighten all nuts before consulting a plumber.


NOTE: The above instructions apply to the "A" handle trim.

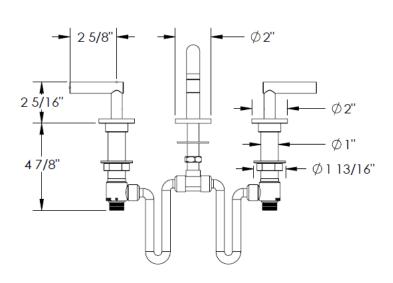

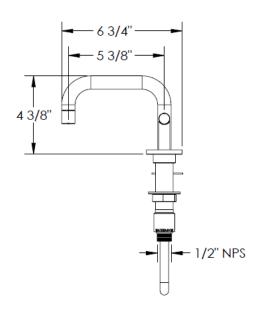



#### **HANDLE TRIM**

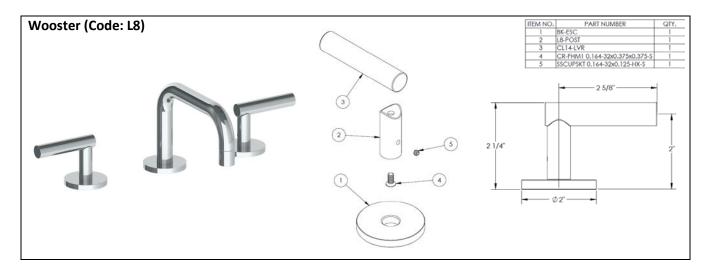

#### IMPORTANT INSTALLATION INFORMATION

- USE TEFLON TAPE OR PIPE SEALANT FOR THREADED CONNECTIONS
- DO NOT USE PLUMBER'S PUTTY ON ANY OF THE BRASS COMPONENTS
  This will cause the finish to tarnish and void the warranty. A non-corrosive Alkoxy Silicone is recommended.
- DURING SWEATING OF LINES DO NOT OVERHEAT CASTING
  Overheating may cause damage to internal mechanism
- COPPER ADAPTORS MAY BE REQUIRED TO COMPLETE YOUR INSTALLATION

### For technical support, please call 718-257-2800

Rev. 1/1