



### FEATURES

- 1/2 turn washerless ceramic disc valve cartridges
- Flexible hose connection for 24" spread installations
- 3/4" valve with flow rate of 10 gpm (37.85 lpm) maximum flow rate
- Solid brass construction
- Warranty:
  - Limited lifetime warranty (residential use)
  - One year (commercial use)
- Standard finishes:
  - polished chrome
  - satin nickel
  - polished nickel
  - rustic brass
- Listed by IAPMO, CSA, NSF, and other municipalities
- Shipping weight (lbs.) 10
- Shipping dimensions (in.): 22x12x4

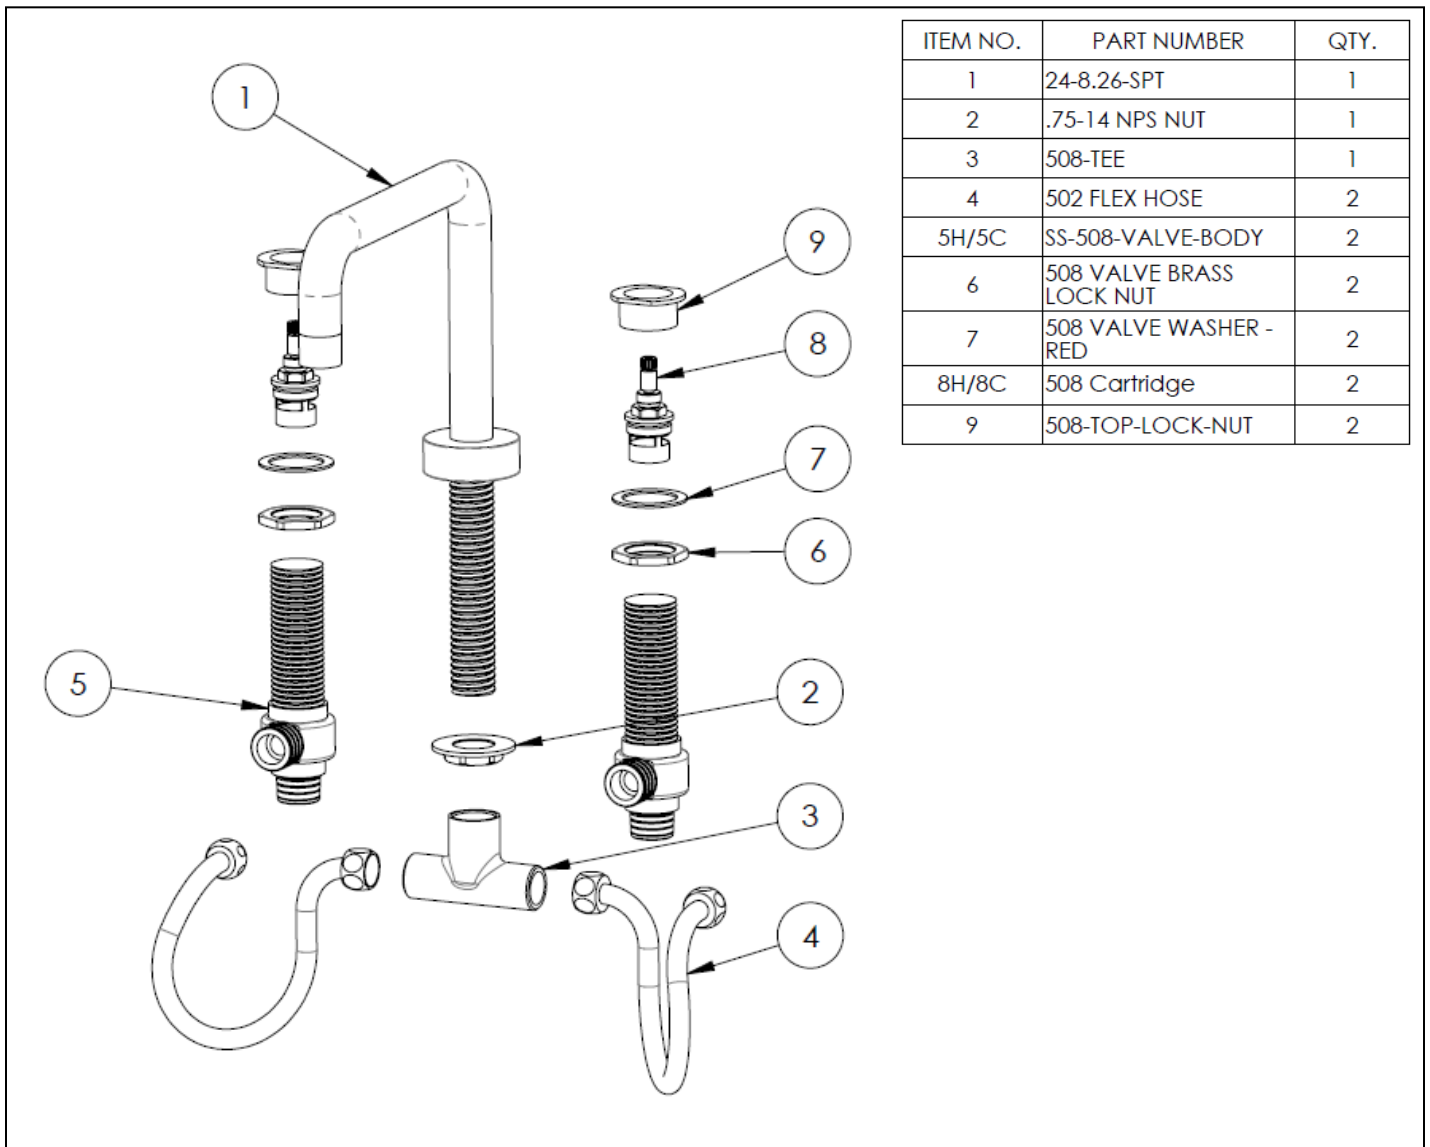


ITEM NO.	PART NUMBER	QTY.
1	24-8.26-SPT	1
2	.75-14 NPS NUT	1
3	508-TEE	1
4	502 FLEX HOSE	2
5H/5C	SS-508-VALVE-BODY	2
6	508 VALVE BRASS LOCK NUT	2
7	508 VALVE WASHER - RED	2
8H/8C	508 Cartridge	2
9	508-TOP-LOCK-NUT	2

1. **Carefully remove all parts from the box.**
2. **Begin by first installing the Spout.**
  - a. Remove the "T" Assembly (3) and spout lock nut (2) from the Spout (1).
  - b. Drop the Spout through the hole in your countertop or sink.
  - c. Tighten the Lock Nut (2) against the underside of mounting surface .
  - d. Re-assemble "T" Assembly onto bottom of Spout.
3. **Identify your Hot and Cold Valves.**
  - a. Remove all trim from Valve Assembly (including Top Lock Nut [9] where applicable), leaving Bottom Lock Nut (6).
  - b. Begin to tighten the Valve to your countertop or sink with a Top Lock Nut (9) (Refer to Diagram) but do not tighten completely.
  - c. Install Escutcheon and Handle (refer to "Handle Trims" section) on valve body (5). Be sure that bottom of handle properly clears top of the Escutcheon.
  - d. Once you have adjusted the Valve height, remove Handle and proceed to tighten Valve from the bottom until it is snug.
  - e. Install Handle on the Valve.
4. **Connect the two Flex Hoses (4) to "T" Assembly (3) and to the HOT (5H) and COLD (5C) valves respectively.**  
*These hoses can be bent or twisted, but be careful not to kink the hoses or you will have limited water supply and excessive noise from the faucet.*
5. **Begin by bleeding the water lines before connecting to the valves. Connect water supplies to bottom of each valve.**
6. **Flush faucet by running both Hot and Cold water in full open position.**
7. **Check for leaks. If leaks or problems occur, re-tighten all nuts before consulting a plumber.**

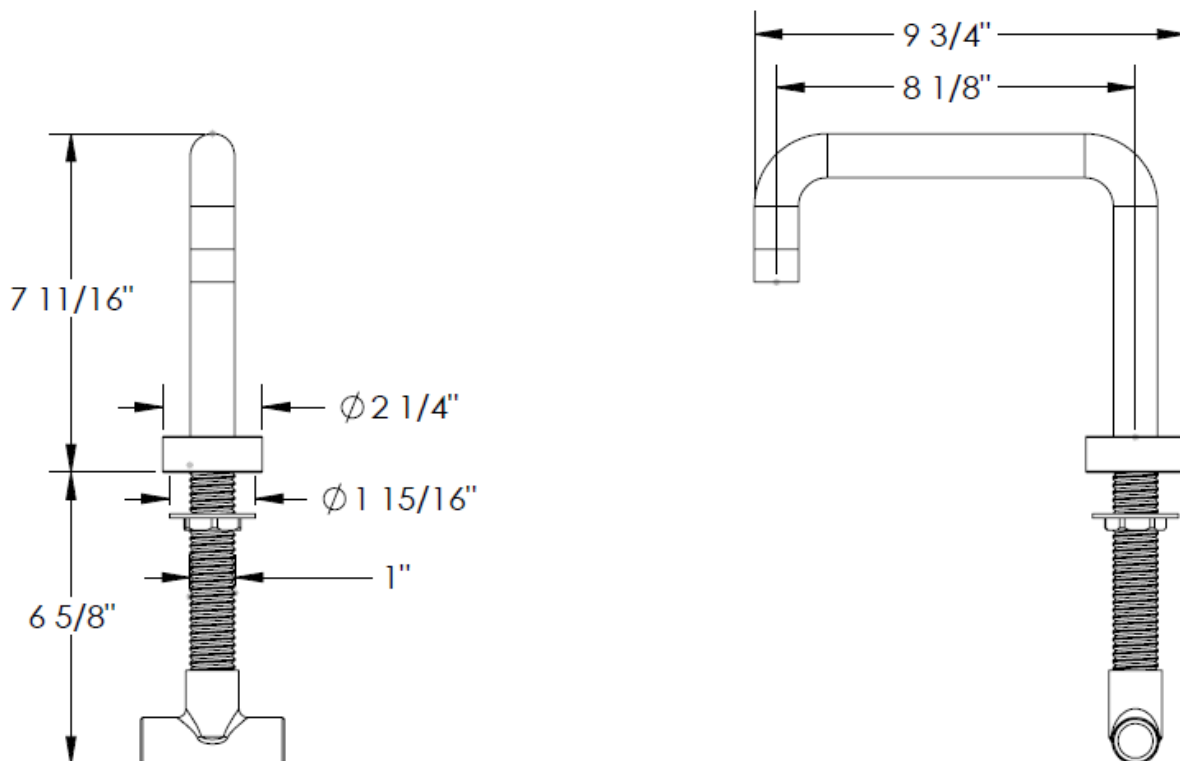


## HANDLE TRIMS


### Wooster (Code: L8)

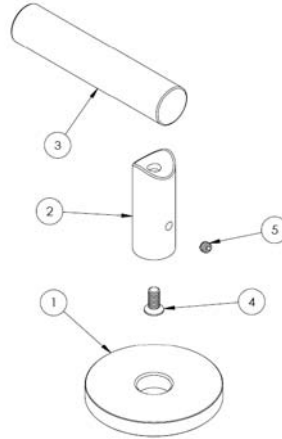


ITEM NO.	PART NUMBER	QTY.
1	BK-ESC	1
2	L8-POST	1
3	CL14-LVR	1
4	CR-FHM1 0.164-32x0.375x0.375-S	1
5	SSCUPSKT 0.164-32x0.125-HX-S	1

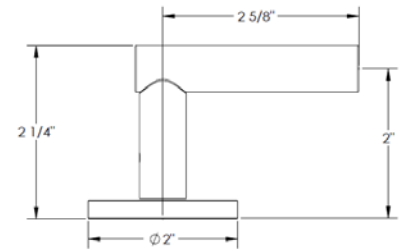


### New York (Code: A)

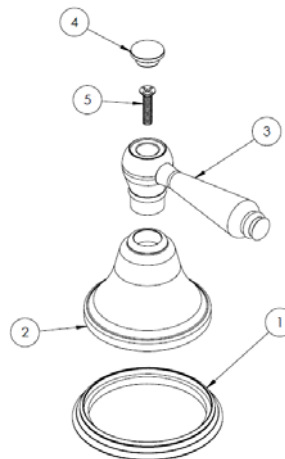


ITEM NO.	PART NUMBER	QTY.
1	A-ESC-RING	1
2	A-ESC	1
3	A-LVR	1
4	A-POST-CAP	1
5	CR-FHMS 0.164-32x0.75x0.75-S	1

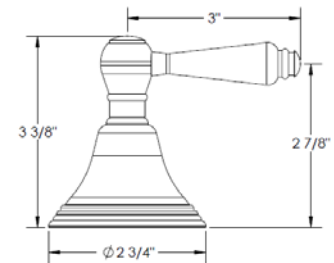


### Charlton (Code: AXP)

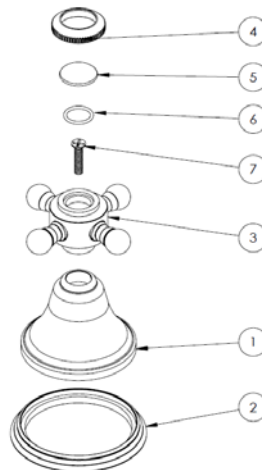

ITEM NO.	PART NUMBER	QTY.
1	A-ESC	1
2	A-ESC-RING	1
3	X-POST	1
4	X-CAP-RING	1
5	X-PRCLN-INSRT-(PLN/COLD/HOT)	1
6	AS56B - 014	1
7	CR-FHMS 0.164-32x0.75x0.75-S	1

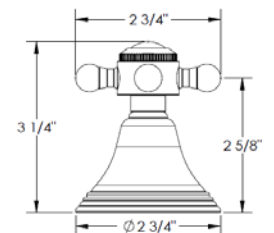


### Houston (Code: F)

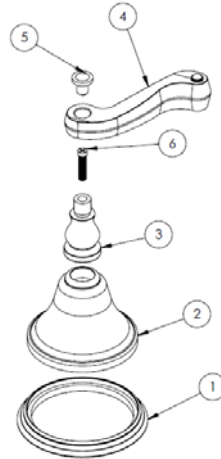


ITEM NO.	PART NUMBER	QTY.
1	A-ESC-RING	1
2	A-ESC	1
3	F-POST	1
4	F-LVR	1
5	F-POST-CAP	1
6	F-POST-SCRW	1


HNDL: 3, 4, 5 & 6

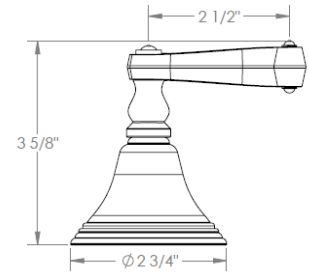

### Williams (Code: Y2)

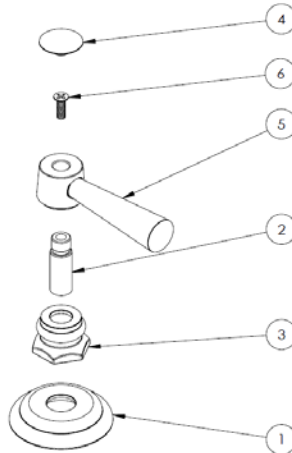

ITEM NO.	PART NUMBER	QTY.
1	S1-ESC	1
2	S1-STEM	1
3	S1-ESC-NUT	1
4	SA1-POST-CAP	1
5	SA1-LVR	1
6	CR-FHM1 0.164-32x0.5x0.5-S	1

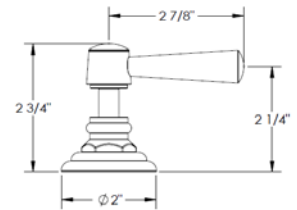

**For technical support, please call 718-257-2800**

#### IMPORTANT INSTALLATION INFORMATION

- USE TEFLON TAPE OR PIPE SEALANT FOR THREADED CONNECTIONS
- DO NOT USE PLUMBER'S PUTTY ON ANY OF THE BRASS COMPONENTS  
This will cause the finish to tarnish and void the warranty. A non-corrosive Silicone is recommended.
- DURING SWEATING OF LINES DO NOT OVERHEAT CASTING  
Overheating may cause damage to internal mechanism
- COPPER ADAPTORS MAY BE REQUIRED TO COMPLETE YOUR INSTALLATION

Rev. 1/1