



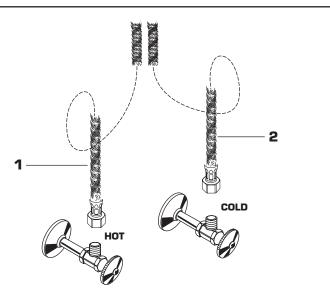

- Turn off hot and cold water supplies before beginning.
- Connect FLEXIBLE SUPPLIES (1, 2) directly to wall supplies. Connection on fitting supplies are 3/8" compression. Connect left supply (Marked with a Red Stripe) to Hot and right supply (Marked with Blue Stripe) to Cold wall supply. Use adjustable wrench to tighten connections. Do not over tighten.
- Faucet supplies are 21" long from faucet base.
- Note: If additional supply length is required, installer must purchase additional parts separately.
- Important: If SUPPLY HOSES (1, 2) are too long, loop as illustrated to avoid kinking.

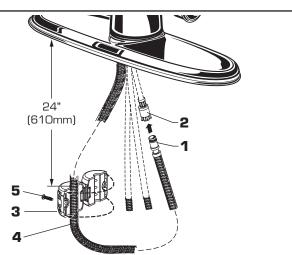



2

3

REMOVE

## CONNECT SPRAY HOSE & INSTALL WEIGHTS

- Push the SPRAY HOSE END (1) into the HOSE CONNECTOR (2) until it snaps into place.
- With hand spray seated in spout, install WEIGHT (3) onto HOSE (4) 24 inches from the underside of the sink deck and secure with SCREW (5).




- Move HANDLE (1) into "off" position.
- Turn on water supplies.
- Check connections for leaks.
  (See Section 5)
- With HANDLE (1) in "off" position, unthread SPRAY (3) from HOSE (2).
- Operate handle back to front, in COLD and HOT positions, to flush water lines thoroughly.
- Replace SPRAY (3) onto HOSE (2).

3

## SPRAY OPERATION

With FAUCET on pull down SPRAY (3). Check for leaks. Make sure SPRAY (3) fully retracks and is seated in the SPOUT HOLDER (4).

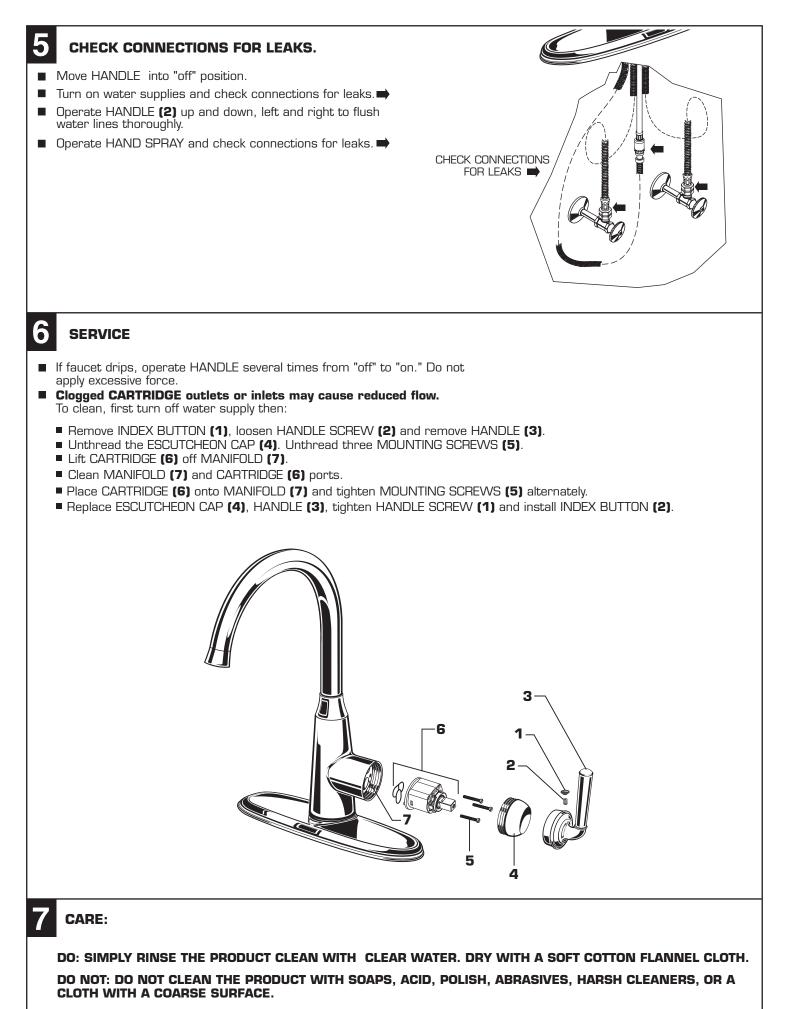

M965455 Rev. 1.2

