RONBOW

INSTALLATION AND CARE GUIDE

SOLUTIONS VANITY

059324

059330

059336

059348



059330 059336 059348

PRE-INSTALLATION

Tools Required













Materials Included

1 Vanity with leg option

Materials Required

- 3 wood screws
- 1 2x4 beam cut to size

Leg Options

Cone Leg Option

- 4 cone legs
- 4 leg levelers
- supporting leg (included in the 48" Vanity)

Cube Leg Option

- 4 cube legs
- 8 wooden dowels
- 4 long screws
- 4 leg levelers
- supporting leg (included in the 48" Vanity)

Toe Kick Option

- 1 toe kick
- 4 wooden dowels
- 4 long screws
- 4 leg levelers

1



059330 059336 059348


PRE-INSTALLATION

Step 1: Determine the ideal location of your new vanity.

Note: Check if the location has at least two studs. Front notch the studs and install a 2x4 horizontal beam. This will add stability for the vanity.

See Figure 1.

Figure 1.

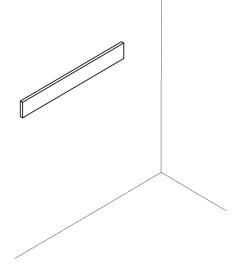


INSTALLING THE CONE LEG

Step 3: Carefully lay the vanity down and simply screw the cone leg into the hole located on bottom of the vanity.


For 48" Vanity, be sure to install the supporting leg that is included in the vanity package.

Verify the vanity is level. Adjust the leg levelers if needed.

Figure 2.

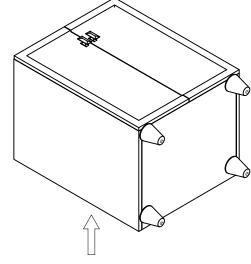

See Figure 2.

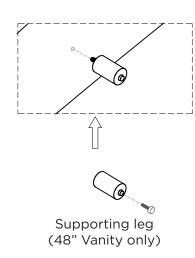

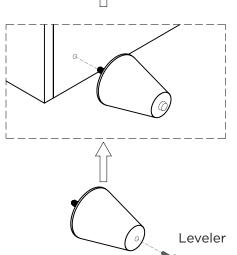




Figure 3.

Model: 059324

059330 059336 059348

INSTALLING THE CUBE LEG

Step 1: Carefully lay the vanity down

Install the wooden dowel at the left and right holes

Carefully align and join the cube leg to the vanity.

Then screw in the long screw to secure the cube leg to the vanity.

For 48" Vanity, be sure to install the supporting leg that is included in the vanity package.

Supporting leg (48" Vanity only)

Verify the vanity is level. Adjust the leg levelers if needed.

See Figure 3.

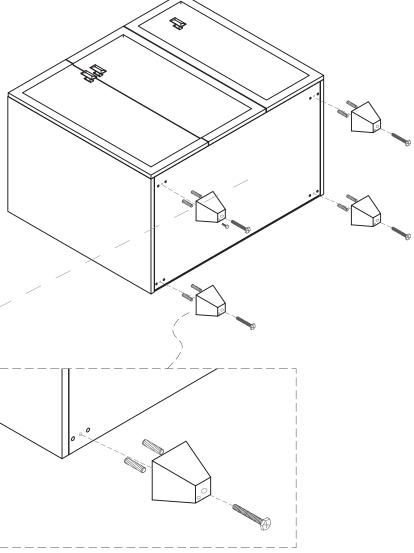




Figure 4.

Model: 059324

059330 059336 059348

INSTALLING THE TOE KICK

Step 1: Carefully lay the vanity down

Install the wooden dowel at the holes closer to the edge.


Carefully align and join the toe kick to the vanity.

Then screw in the long screw to secure the toe kick to the vanity.

Verify the vanity is level. Adjust the leg levelers if needed.

NOTE: Team Work Required

See Figure 4.

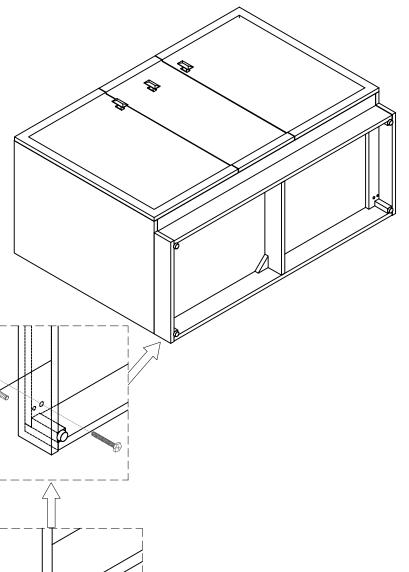

059330 059336 059348

INSTALL THE VANITY

Step 2: Attach the vanity to the wall with wood screws into the horizontal beam.

See Figure 5.

INSTALL THE VANITY TOP

Step 1: Clean the surface of the cabinet with a damp cloth.

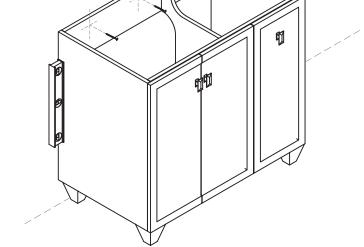


Figure 5.

Step 2: Install the sink to the vanity top per the manufacturer's instructions.

Step 3: Apply a thin bead of silicone to the surface of the vanity.


Carefully place the vanity top on the vanity.

Clean off any excess silicone immediately.

See Figure 6.

Step 4: Follow the directions on the silicone tube to allow for ample drying time.

Refrain from moving/using the vanity during this time.

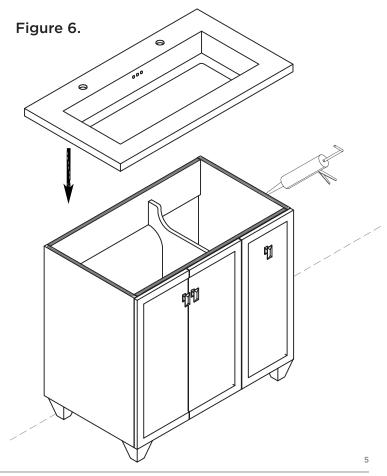




059330 059336 059348

ADJUST DOOR HINGE

Side to Side

Locate the screw nearest the hinge cup and rotate clockwise or counterclockwise to move the door from side to side.


See Figure 7.

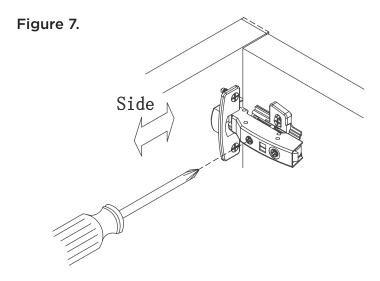

Front to Back

Locate the screw furthest away from the hinge cup and turn the screw clockwise or counter-clockwise to move the door from front to back.

See Figure 8.

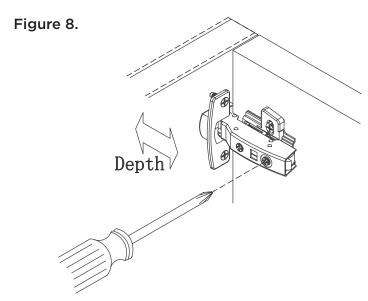


Top to Bottom

Locate the screw pictured in Figure 6. Turn the screw clockwise or counter-clockwise to move the door from top to bottom.

See Figure 9.

NOTE: When adjusting the door hinges keep in mind to adjust the other hinges.

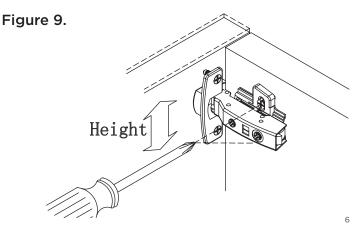



059330 059336 059348


REMOVE DRAWER

Step 1: Pull the release latches located

underneath the drawer.

See Figure 10.


Figure 10.

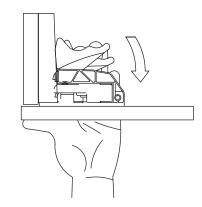

Step 2: Slide and lift up the drawer box.

See Figure 11.

Figure 11.

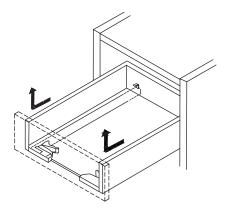


REINSTALL DRAWER

Step 1: Slide drawer box in until secured by rail

hook.

See Figure 12.

Figure 12.

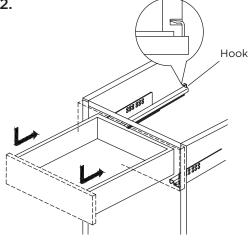

https://youtu.be/4DdK3cj3sTU

SOLUTIONS Vanity



Model: 059324

059330 059336 059348

PRODUCT CARE AND MAINTENANCE

The fine furniture finish of your new vanity, mirror or other bathroom accessories are designed to protect against normal home use. With proper care, your product will provide years of use and beauty in your home.

General Care Tips

- Test cleaning product on small, discrete area prior to applying to entire surface.
- Wipe surfaces frequently with dry, soft, non-abrasive and lint-free towel.
- Do not allow liquids and moisture to accumulate on the surface of products.
- For warranty information, please visit our website at www.ronbow.com or contact the Customer Service Department at (510) 713-1188.

Wood Surfaces

- If a spill occurs, clean and dry the surface immediately as liquid can soak through the surface and cause greater damage.
- Do not place in direct sunlight. Exposure to sunlight may affect the appearance of your vanity, and the finish will eventually crack.
- Keep away from direct sources of extreme temperatures as heat, cold or moisture from humidity. Color changes, or blemishes in the wood can occur if recommended care of is not met. Try to avoid these extremes.
- Most wood surfaces can be cleaned, or dusted, with any commercial wood cleaning product. For general
 cleaning, use a non-abrasive, or lint-free cloth while dusting along the wood grain to preserve the
 wood's chacteristics.

Recommended Products

- Pledge Orange Oil, or similar
- Orange-Glo Wood Cleaner

DISCLAIMERS: Wood naturally ages, darkens and changes color over time due to several environmental conditions that may cause materials to vary from their original color and/or to warp, split or crack. These variations are considered to be the nature of the material in relation to their environmental exposure and may be significant over a long period of time. The effectiveness of cleaning Ronbow product is dependant on various factors that include sunlight, smoke, moisture, household cleaners and/or amount of cleaning product used over time. Ronbow cannot guarantee that the above Product Care & Maintenance methods will effectively clean your product.

