
INSTRUCTION MANUAL

SKU CODE:


WF-72

FRONT

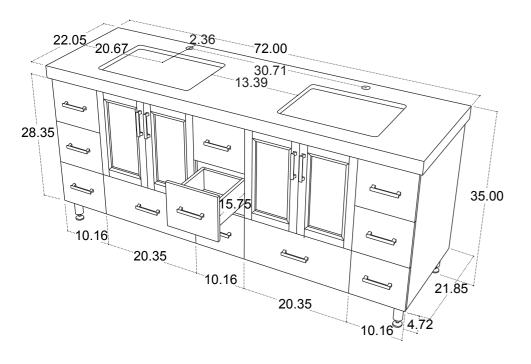

COLLECTION:

DIMENSIONS: W 72" | D 22" | H 35"

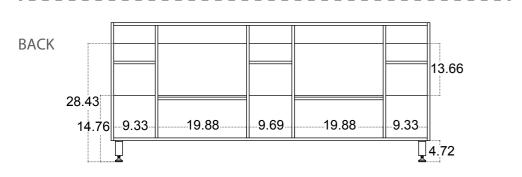

PACKING LIST


- Pre-assembled cabinet
- Integrated Sink
- Cabinet legs
- Instruction Manual


WARRANTY


Design Element warrants cabinets, mirrors, finishes and fittings to be free from defects in workmanship and materials under normal use and service for a period of one (1) year.


Please report any damage or missing pieces of your vanity to us immediately. These things must be reported no later than 30 days from the date of delivery.

Attaching Sink To The Counter Top

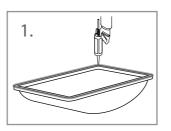





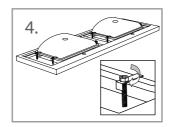

- 1. Apply continuous stream of quality silicon glue on circumference of the sink.
- 2.Turn the countertop upside down and provide support from beneath.
- 3.Put the glued sink over the cutout and attach it firmly.
- 4.Tie up screws positioned at the respective places on the

CARE AND CLEANING

tops as it might de-shape it.

SAFETY AND PRECAUTIONS

assemble, operate or install the product.

glue dry, before using your vanity.

• Use a water-dampened cloth to clean the cabinet and the mirror frame. Avoid using abrasive cleaners.

• Please read and understand this entire manual before attempting to


• During installation, handle the countertop and sink with optimum care.


• Once you add glue and fit the countertop / sink, wait for 24 hours to let the

• Avoid pouring extreme hot and cold water on the glass sink and counter-

- Use a mild liquid soap and a soft cloth to clean your vanity top. Avoid using any harsh, abrasive cleaners or mineral spirits.
- For the mirror, use ammonia-free cleaning products. Avoid using abrasive cleaners.


Install Handles

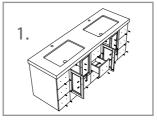


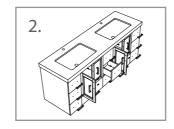


1. Hold the handles, unscrew the screws from doors and drawers. 2.Put the screws inside and handles outside gently, tighten the

Install Four Legs

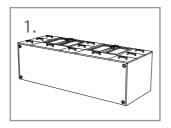

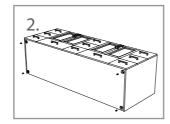

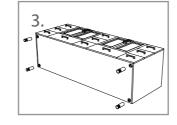



- 1.Put a piece of foam or other soft objects, turn over the cabinet on it.
- 2.Find the screws and legs packed with cabinet, tighten four screws into the
- bottom of cabinet.

CONTACT SUPPORT

PHONE: (888) 487-4488


EMAIL: cs@designelementusa.com


ADDRESS: 8715 Boston place, Rancho Cucamonga, CA. 91730

www.designelementusa.com





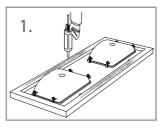

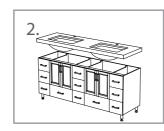

1.Apply continuous stream of quality silicon glue on top of the cabinet contact area.

