
INSTRUCTION MANUAL


SKU CODE: DEC015C

FRONT

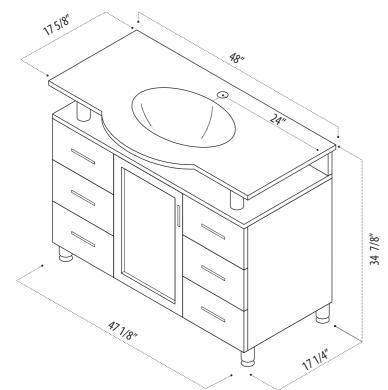

COLLECTION: Huntington

DIMENSIONS: W 48" | D 22" | H 34 7/8"

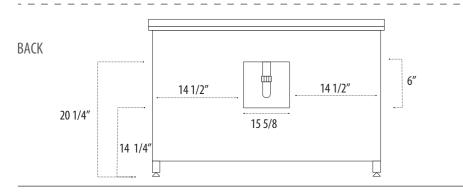

PACKING LIST


- Pre-assembled cabinet
- Integrated sink countertop
- 4 Cabinet legs
- Drain
- Instruction Manual


WARRANTY

Design Element warrants cabinets, finishes and fittings to be free from defects in workmanship and materials under normal use and service for a period of one (1) year.

Please report any damage or missing pieces of your vanity to us immediately. These things must be reported no later than 30 days from the date of delivery.


Installing Support For Countertop





- 1. Open the drawer and put the screw inside the hole placed on the cabinet

Attaching Counter Top To Cabinet



- 1. Apply continuous stream of quality silicon glue to the top of the cabinet where the integrated sink needs to be placed. 2. Place the integrated glass sink on the glued cabinet.
- 3. Do not use the sink instantly. Wait approximately for 24 hours so that the silicon glue can dry.


Installing A Drain

1.




- 1. After installing the sink on the countertop, put the drain assembly inside the hole in the sink and fix it firmly.
- 2. Tie up the mounting rubbers and rings from the bottom of the drain.

3. Connect the trap onto the drain bottom.



2. Tie the rubber and steel parts on the screw to hold it

3. Mount the round metal cylindrical support over the screw. Tie till it gets firmely attached



you put the countertop over it.

might damage it.

let it dry.

•When scrubbing the cabinet, make sure you do not remove or scratch the finish.


CARE AND CLEANING

- finish.

CONTACT SUPPORT

PHONE: (888) 487-4488 EMAIL: cs@designelementusa.com

www.designelementusa.com

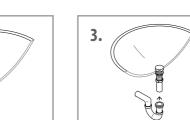

3.

SAFETY AND PRECAUTIONS

•Please go through this entire manual before attempting to assemble, operate or install the product.

•While installing support for counter top, handle the integrated sink countertop with special care. Make sure the support is fully tightened up before

•Do not use the vanity instantly after installation. Once you have applied glue to attach the countertop and sink, wait for approximately 24 hours to

•Avoid extreme hot then cold water on the glass sinks and countertops, as it

• Having your entire sink and countertop as one, non porous material, makes it extremely easy to clean and maintain.

• Avoid using any type of rough cleaning material on top of the cabinet

• Use mild liquid soap and water-dampened soft cloth to remove stains from the cabinet and to clean the countertop.

ADDRESS: 8715 Boston place, Rancho Cucamonga, CA. 91730