

Boardwalk Technical Specification


Robe Hook

Y3203

Stock Numbers:

- ❑ **Y3203BN – Robe Hook**
Brushed Nickel Finish
- ❑ **Y3203CH – Robe Hook**
Chrome Finish

Dimensions:

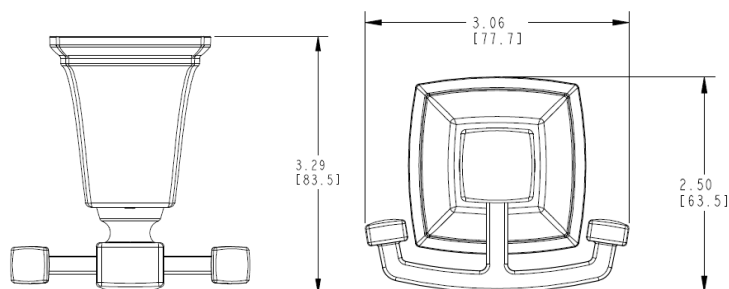

Materials:

Robe Hook post is die cast from highest quality zinc alloy (Zamac).

Installation Instructions:

1. Remove mounting plate from the product post by loosening each setscrew.
2. Position the mounting plate on the wall at desired location with "UP" facing you. Mark hole locations.
3. Drill 2 holes as marked using 5/16" drill bit.
4. Fold ends of the plastic toggle anchor together and insert into each hole in the wall.
5. Lightly tap anchors until flush with the wall.
6. One at a time, insert plastic pin into each anchor and lightly tap to activate anchor. Remove pin and repeat on other anchor.
7. Place the mounting plate on the wall over the installed wall anchors with "UP" facing you.
8. Tighten screws.
9. Place decorative product over the mounting plate with the setscrew facing down and tighten setscrew.

Cleaning Instructions:

To preserve the fine finish of this product, clean only with a soft damp cloth. Dry well. Do not use commercial or abrasive cleaners.

Stock Number: _____ **Robe Hook**
By Creative Specialties