Voss™ Technical Specification Double Robe Hook

YB5103


Stock Numbers:

- □ YB5103BN Double Robe Hook Brushed Nickel Finish
- □ YB5103CH Double Robe Hook Chrome Finish
- YB5103ORB Double Robe Hook
 Oil Rubbed Bronze Finish
- YB5103BG Double Robe Hook Brushed Gold

Materials:

Robe Hooks are constructed of zinc.

Dimensions:

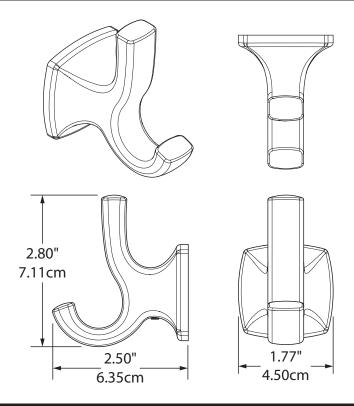

Installation Instructions:

- 1. Remove the mounting bracket from the body by loosening the setscrew.
- 2. Position the assembled unit on the wall where desired.
- Lightly mark the outline of the base.
- Center a mounting bracket within the base outline with "UP" facing you.
- 5. Attach the mounting bracket to the wall, using the wall anchors provided.
- 6. Mount the base on the corresponding mounting bracket. Check and make sure that the base screw hole is facing down. Assemble a set screw to the base. Use the allen wrench included in a hardware kit to tighten the set screw and secure the assembly to the mounting bracket.

Cleaning Instructions:

To preserve the fine finish of this product, clean only with a soft damp cloth. Dry well. Do not use commercial or abrasive cleaners.

Stock Number:	Robe Hook
By Moen Incorporated	

25300 AL MOEN DRIVE • NORTH OLMSTED, OH 44070 CORPORATE HEADQUARTERS: (800) 321-8809 • FAX: (800) 848-6636 INTERNATIONAL: (440) 962-2000 • FAX: (440) 962-2726 CUSTOMER SERVICE (USA): 800-882-0116 • FAX: (888) 379-2720 WWW.MOEN.COM

Buy it for looks. Buy it for life.®