Gilmour™ Technical Specification Double Robe Hook Y6303BN


Stock Numbers:

 Y6303BN – Double Robe Hook Brushed Nickel Finish

Materials:

Robe Hook is constructed of zinc.

Dimensions:

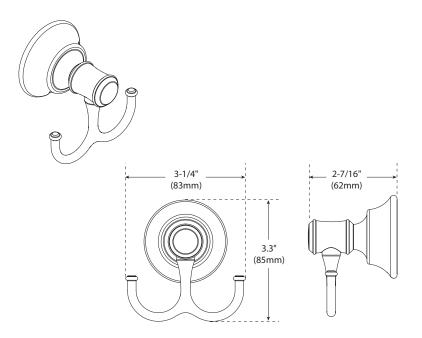

Installation Instructions:

- 1. Remove the mounting bracket from the body by loosening the setscrew.
- 2. Position the assembled unit on the wall where desired.
- 3. Lightly mark the outline of the base.
- 4. Center a mounting bracket within the base outline with "UP" facing you.
- 5. Attach the mounting bracket to the wall, using the wall anchors provided.
- Mount the base on the corresponding mounting bracket. Check and make sure that the base screw hole is facing down. Assemble a set screw to the base. Use the allen wrench included in a hardware kit to tighten the set screw and secure the assembly to the mounting bracket.

Cleaning Instructions:

To preserve the fine finish of this product, clean only with a soft damp cloth. Dry well. Do not use commercial or abrasive cleaners.

Stock Number:	Robe Hook
By Moen Incorporated	



25300 AL MOEN DRIVE • NORTH OLMSTED, OH 44070 CORPORATE HEADQUARTERS: (800) 321-8809 • FAX: (800) 848-6636 INTERNATIONAL: (440) 962-2000 • FAX: (440) 962-2726 CUSTOMER SERVICE (USA): 800-882-0116 • FAX: (888) 379-2720 WWW.MOEN.COM

© 2019 Moen Incorporated. Moen is a registered trademark and Gilmour is a trademark of Moen Incorporated. All rights reserved.