




# 1505 - WV60 Installation Instructions

## Step 1: Detach Mounting Brackets From Vanity



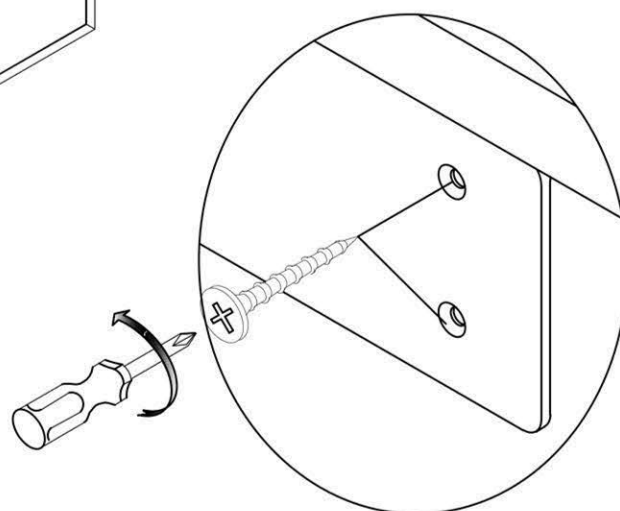


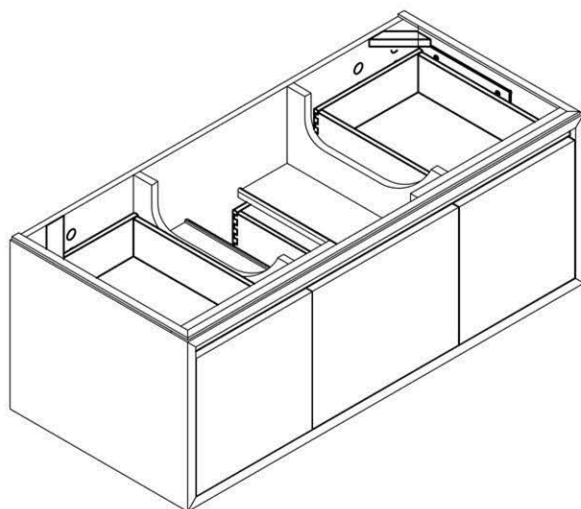

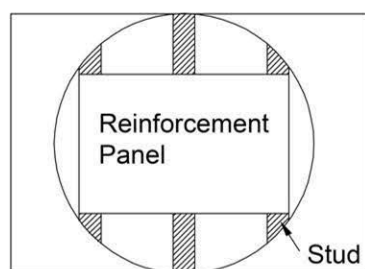

Cut opening in wall



Reinforcement Panel


- \* Large enough to cover 2 studs
- \* Not provided by manufacturer

Parts Included				Tools And Materials		
1		50x50x50x3mm	4pcs	 Screwdriver  Tape measure  Pencil		
2		Ø8x38mm	24pcs			
3		Ø8x19mm	8pcs			
4		Ø10x28mm	24pcs			

Fairmont Designs highly recommends that you seek a professional installation specialist if you are unsure of installation. Please note: Fairmont Designs is not responsible for any installation error, damages or injuries, actual or consequential resulting from possible printing error in instruction


## 1505 - WV60

Step 2: Mounting bracket must be attached to reinforcement panel.

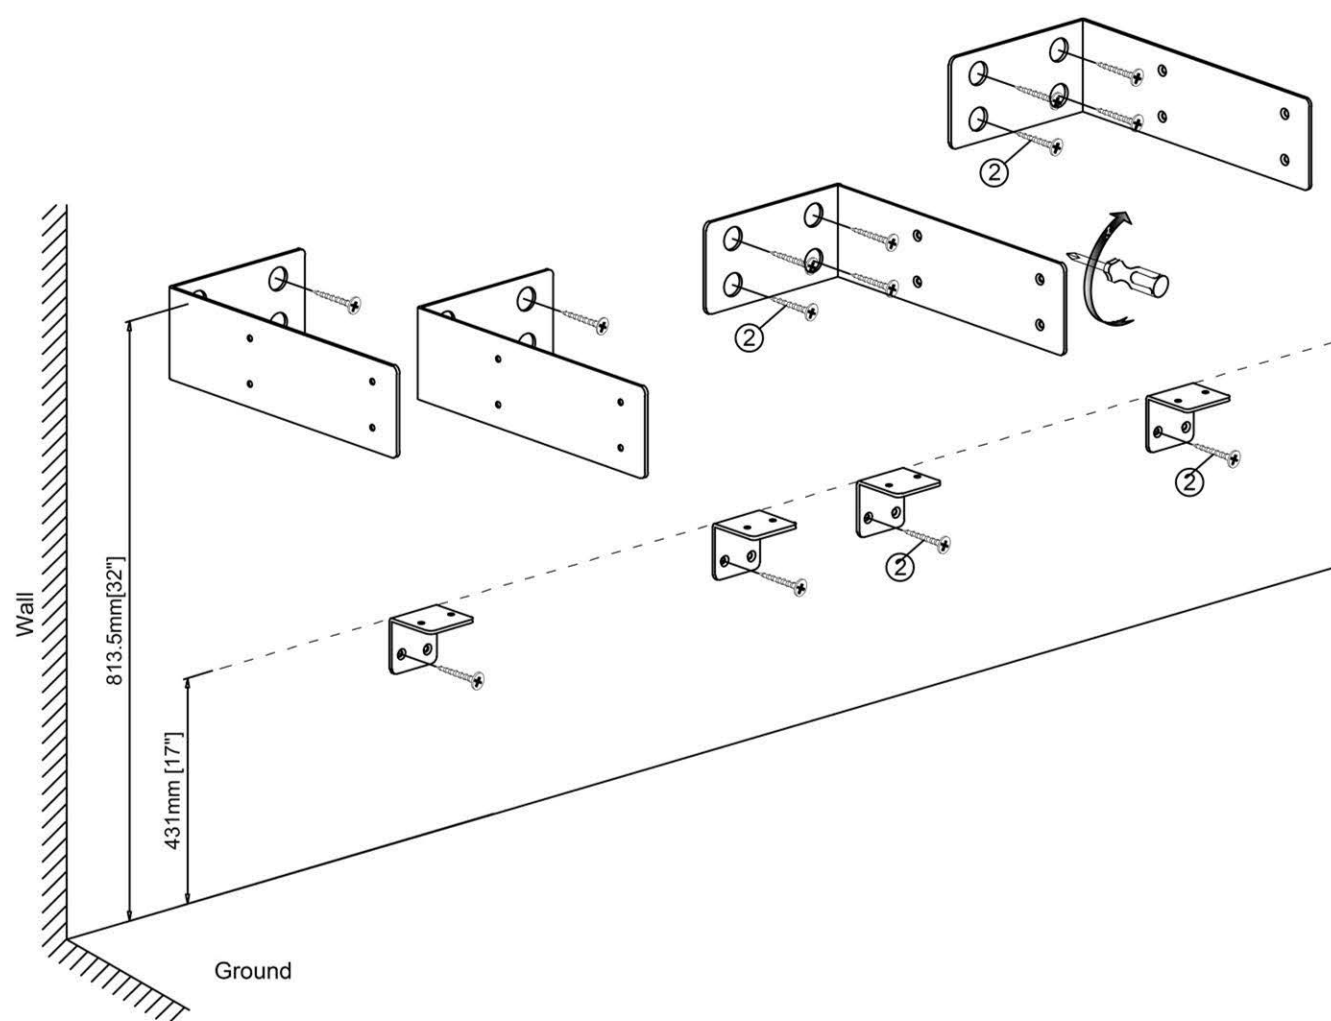

## 1505 - WV60

### Step 3: Slide vanity into the mounting brackets

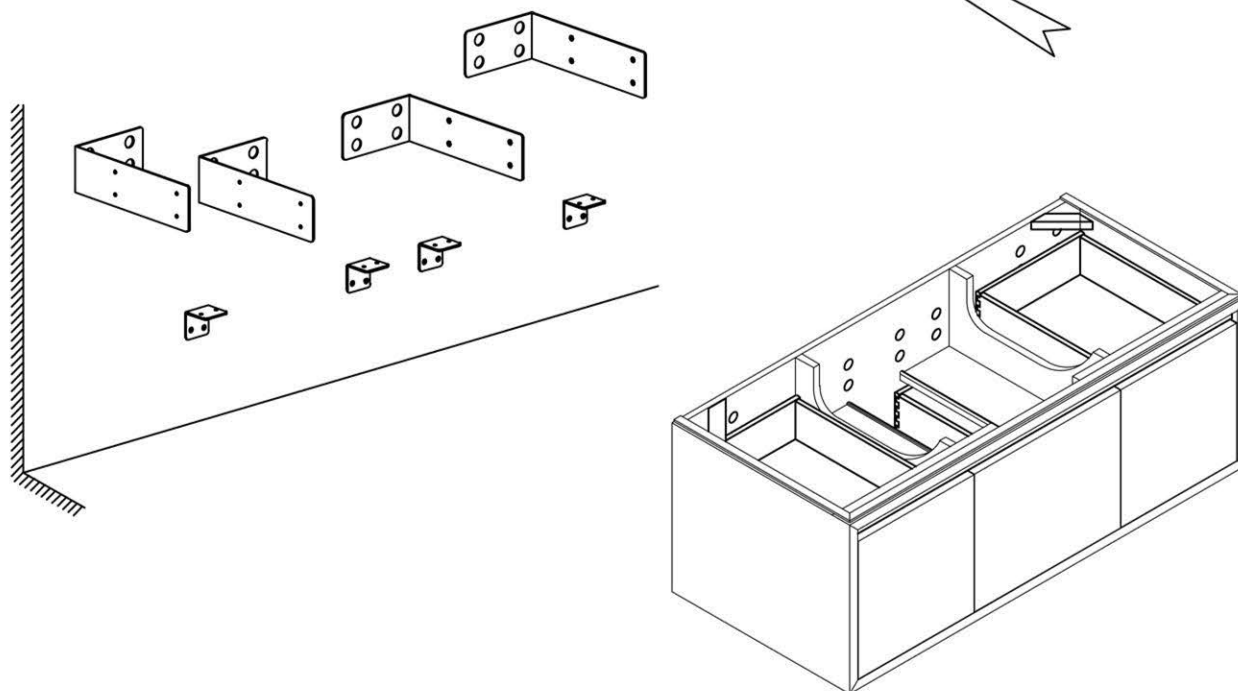

### Step 4: Secure mounting brackets onto vanity

