
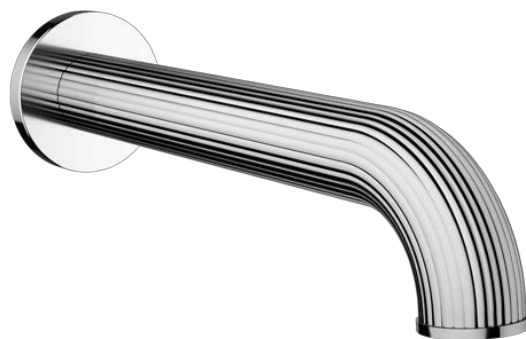


SANTEC

FLUID IMAGINATION

E-SERIES &
DESIGNER SERIES

TUB SPOUT

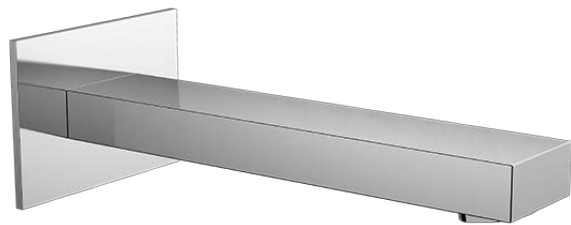

SANTEC has the right to make necessary design changes where applicable.

*Illustration may not depict actual products

Spout

Spout Installation

NOTE: The length of threaded pipe coming out from the finish wall should be no longer than 1/2".

Wrap the pipe threading for the spout with Teflon tape. Then thread the spout onto the pipe until it is secured with the spout facing downward.

WARNING: Do not use excessive force when threading the spout.

