

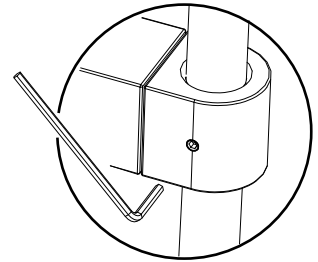


\* Drill 4 holes using 8 mm drill bit  
and insert Plastic Anchors

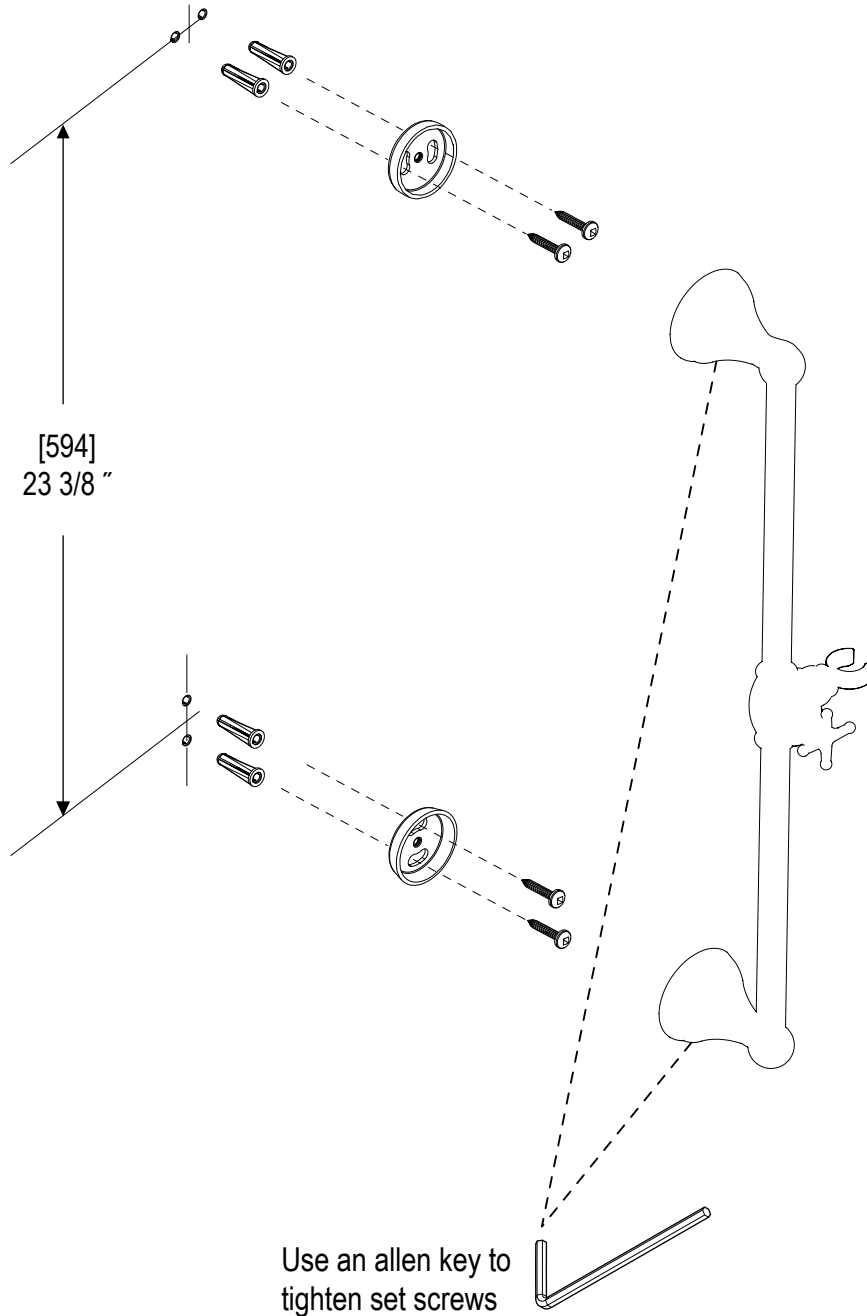

Adjust sliding resistance by  
tightening or unscrewing

OR

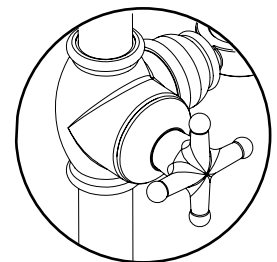

Adjust sliding resistance by  
tightening handle