Tel: 714-891-7797 Fax: 714-891-2478 Toll Free: 800-822-8855 www.calfaucets.com

# **Shower Column 9150**

INSTALLATION INSTRUCTIONS


### **IMPORTANT**

All  $California\ Faucets^{\circ}$  products are engineered to provide quality performance provided they are installed and operated properly. To fully enjoy the comfort, safety, and reliability of your new shower cloumn set, please follow the instructions below.

California Faucets reserves the right to make modification and specification changes at any time.

Please visit www.calfaucets.com for most current technical data.

### RECOMMENDED INSTALLATION BY A PROFESSIONAL PLUMBING CONTRACTOR

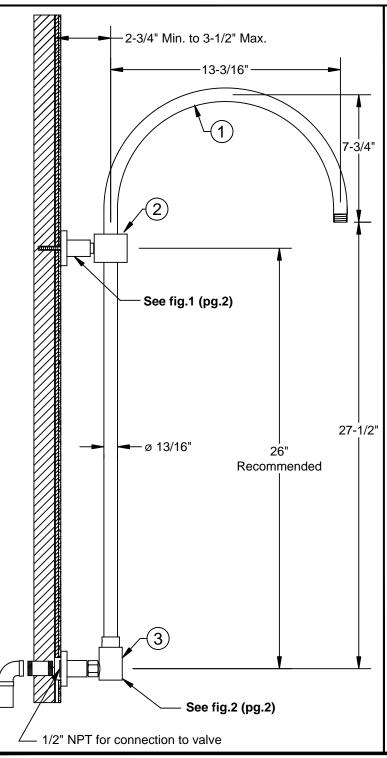

#### Installation Instructions for Shower Column 9150

#### Rough In


- -Establish installation location and positioning of valves and shower column, taking the ceiling height, personal preferences of the customer and any applicable plumbing codes into consideration.
- -Install adequate bracing in the wall to provide a solid and secure installation of the wall bracket post and inlet piping of the shower column. **Note:** recommended fixed distance from center of inlet nipple to center of wall bracket post is 26"
- -Install piping and valves. **Note:** finished wall to center of shower column is Min. 2-3/4" to Max. 3-1/2".

#### **Trim Installation**

- -Install shower column wall supply nipple to the water supply piping from valve. (see fig. 2) Apply some soapy water to the o-ring in the center of the flange escutcheon and slide it onto the nipple and push snug to the finished wall. (Wipe off any excess soapy liquid with a soft cloth).
- -Install wall bracket post with screw through center of post and fix securely to the wall. (see fig. 1) Apply some soapy water to the o-ring in the center of the flange escutcheon and slide it onto the nipple and push snug to the finished wall. (Wipe off any excess liquid with a soft cloth.)
- -Apply some soapy water to the o-rings (top and bottom) inside the wall BRACKET (2) and slide it onto the shower COLUMN (1) at the approximate height of 26". Insert wall bracket inner post into wall bracket outer post on wall. (Wipe off any excess soapy water with cloth).
- -Install the wall supply inlet BRACKET (3) onto the shower column and connect it to the wall supply inlet nipple protruding from the wall. (see fig. 2) Shower column may need to be adjusted up or down to align the connections. Position the shower column in the desired position and tighten the hexagonal nuts on the inlet and outlet ends of the wall supply bracket.
- -Check vertical alignment of shower column between wall supply inlet and wall bracket and adjust so both are equal. **Note:** finished wall to center of shower column is Min. 2-3/4" to Max. 3-1/2". Tighten the two set screws in the wall bracket post.
- -Check perpendicular alingment to wall and tighten setscrew at inlet BRACKET (3).
- -Install shower head (not supplied as part of this set).

Tel: 714-891-7797 Fax: 714-891-2478 Toll Free: 800-822-8855 www.calfaucets.com

# <u>Fig. 1</u>

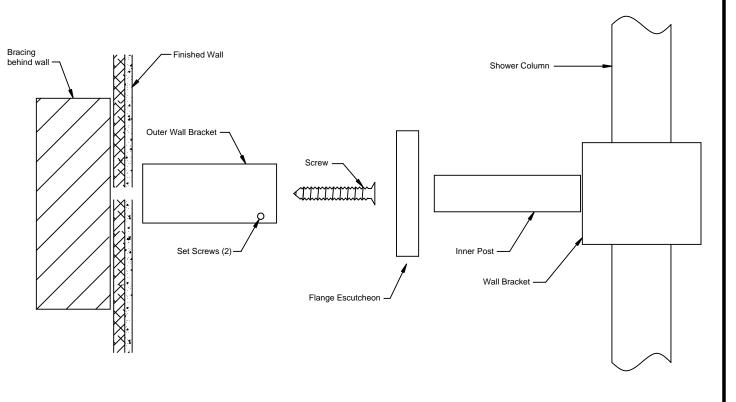

# Fig. 2

