
INSTALLATION INSTRUCTIONS

Ceiling Support Rod

Part #'s: 4012-, 4018-, 4024-, 4030-, 4036-

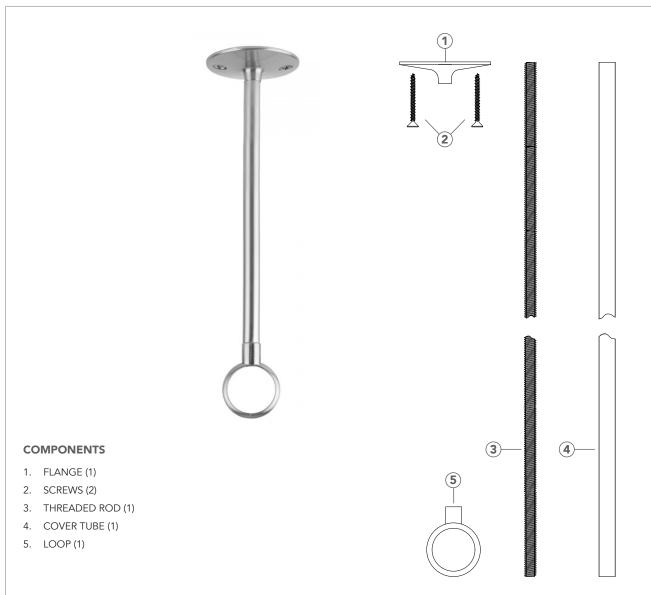



INSTALLATION

- 1. Determine location and ensure screws will be secured by wood beam or use fasteners (not included).
- 2. Temporarily hold rod in place and determine actual length needed.
- 3. Mark holes at flange to ceiling.
- 4. Disassemble rod and place all items in a clean, secure location.
- 5. Cut threaded rod to desired length (3/4" longer than cover tube).
- 6. Cut cover tube to desired length.
- 7. Slide loop over curtain rod or round shower arm.
- 8. Screw threaded rod into loop (Note: there is NO stop in loop or flange.
- 9. Slide cover tube over threaded rod, affix flange.
- 10. Screw flange to ceiling.

CREATED 01.23.202

