



# NARROW BACKSET LOCK

## 2" BACKSET OR (1½" BACKSET)

SEE OTHER SIDE FOR OPPOSITE TEMPLATE

NOTE: Template may not be true-to-size. Please use for reference purposes only. DO NOT drill until measurements are verified.

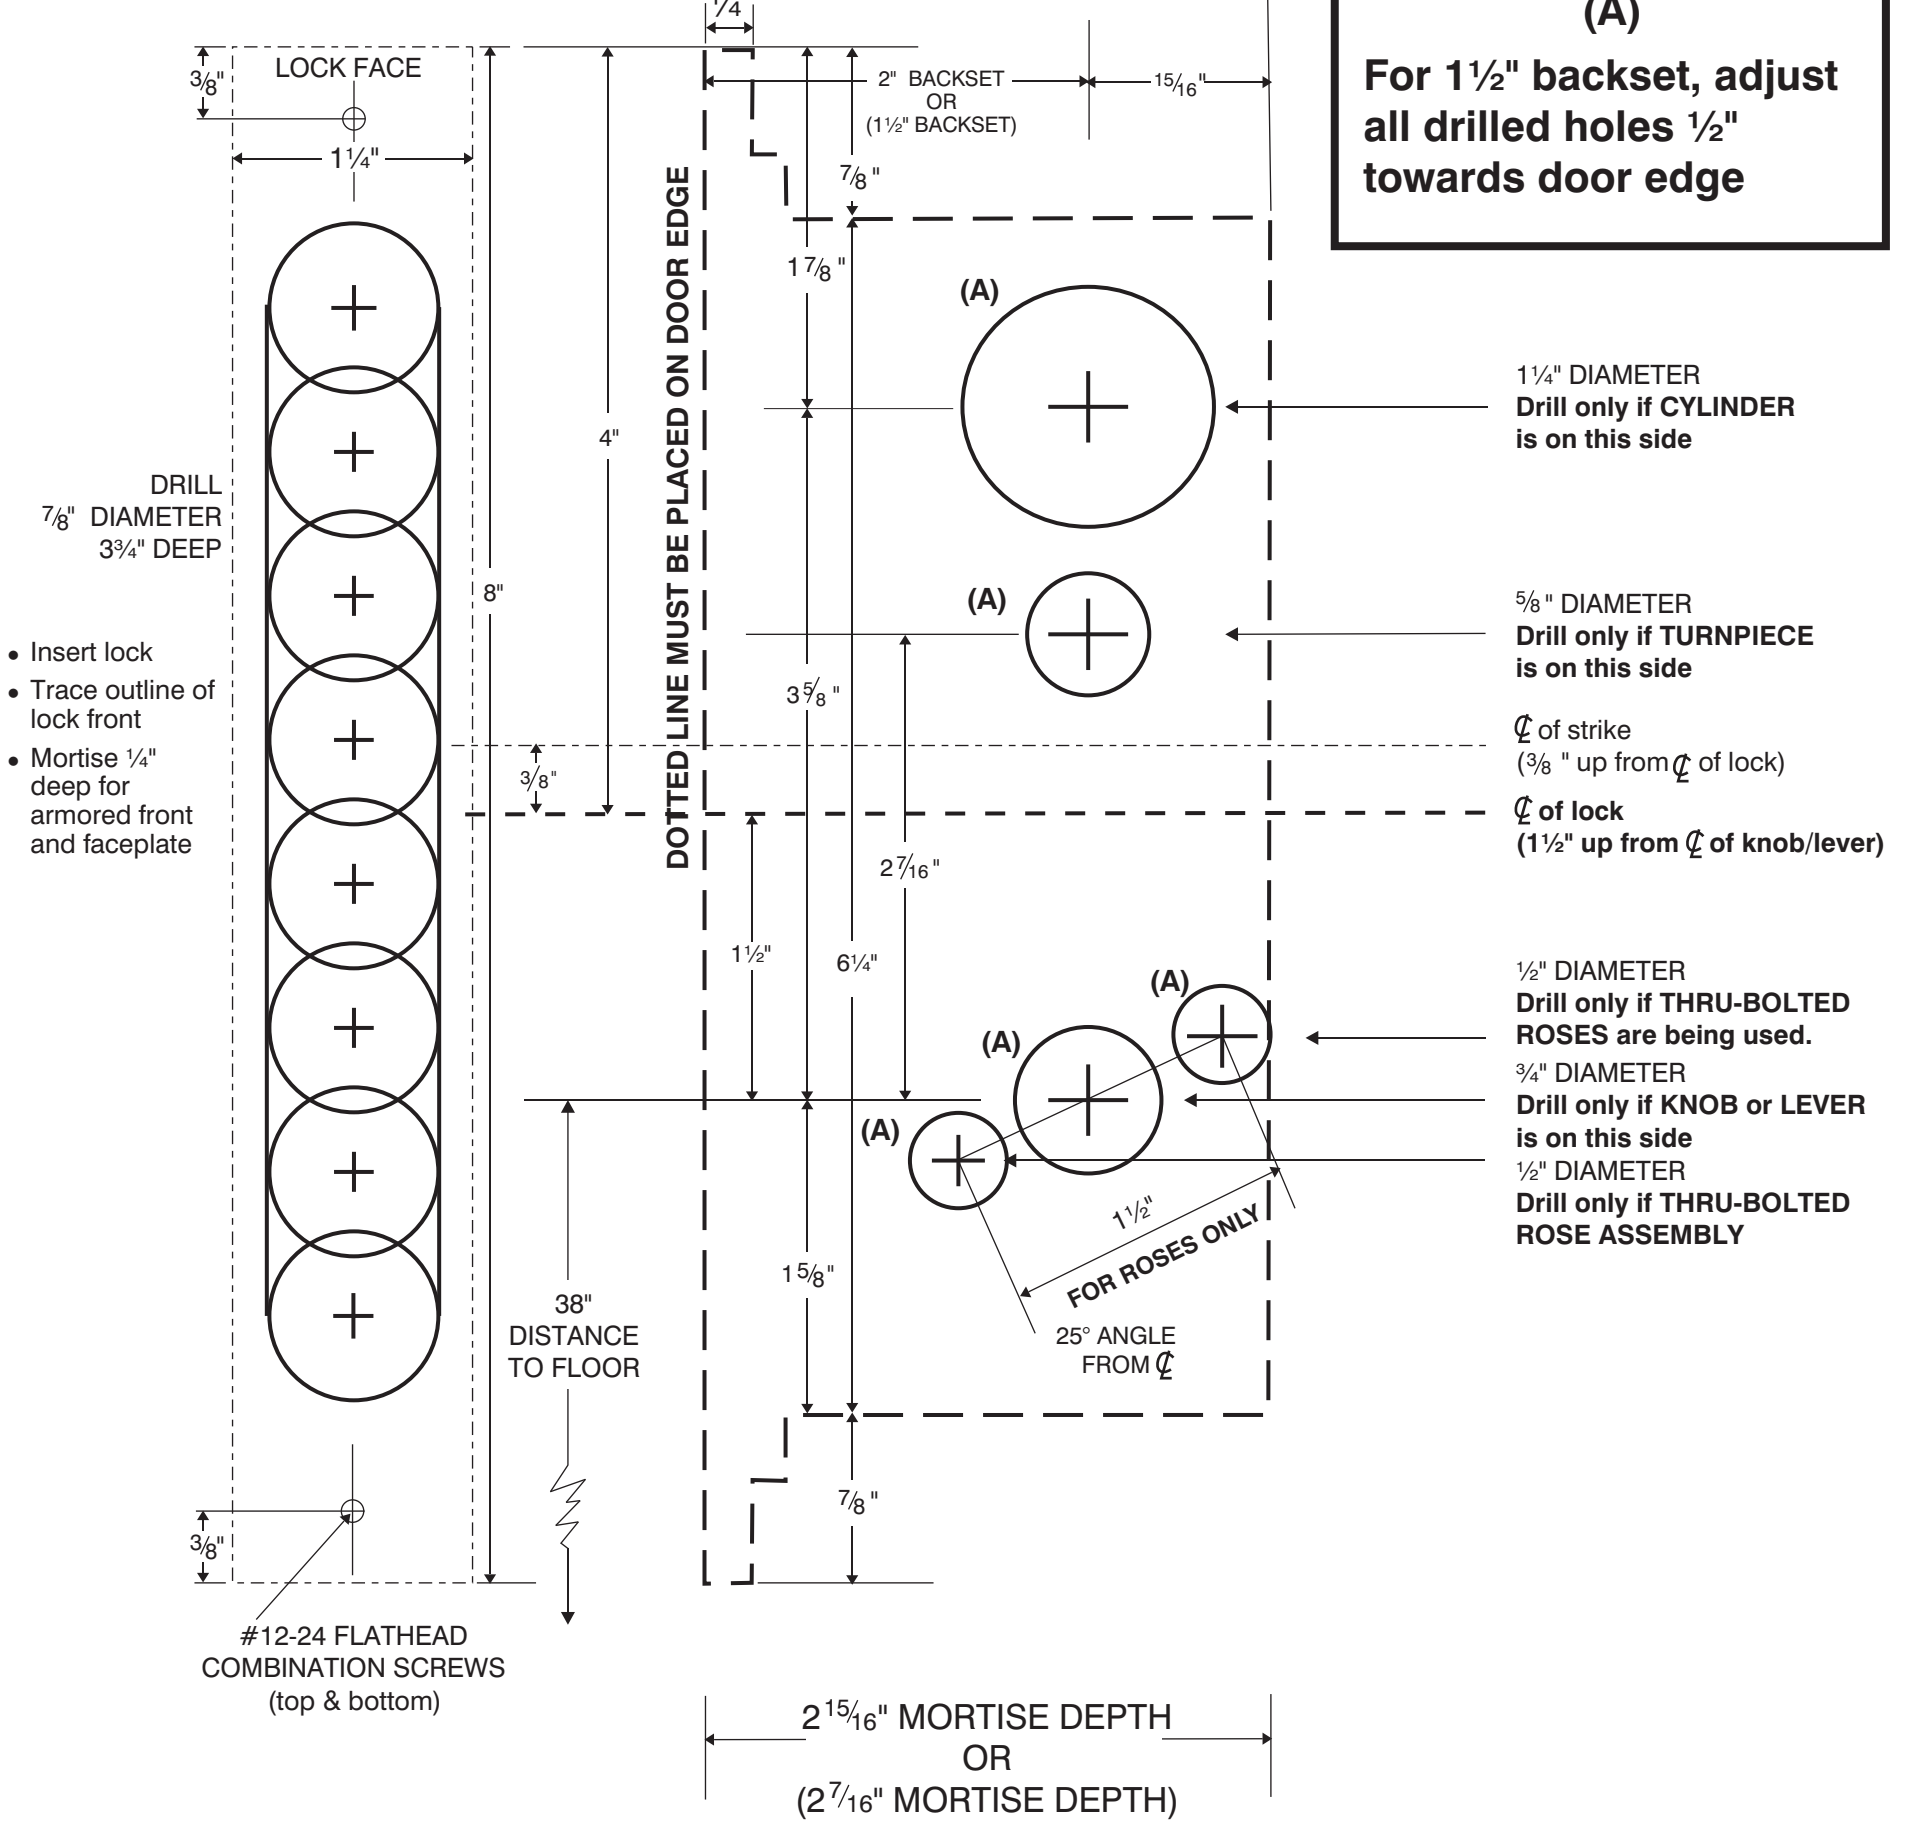


DIAGRAM #1

### MORTISE STRIKE INSTALLATION INSTRUCTIONS

- 1) Locate center line of strike by taking the center line of the mortise lock case and going up 3/8" and making a line on the jamb.
- 2) Position the center line of the strike onto the line and using the strike as a guide trace the edge of the strike.
- 3) Mortise the jamb 3/32" deep for the strike.
- 4) When box strike **is used** a minimum of 1" mortise depth is needed.
- 5) When box strike is **not used** be sure to mortise deep enough to allow the latchbolt and deadbolt to fully extend.

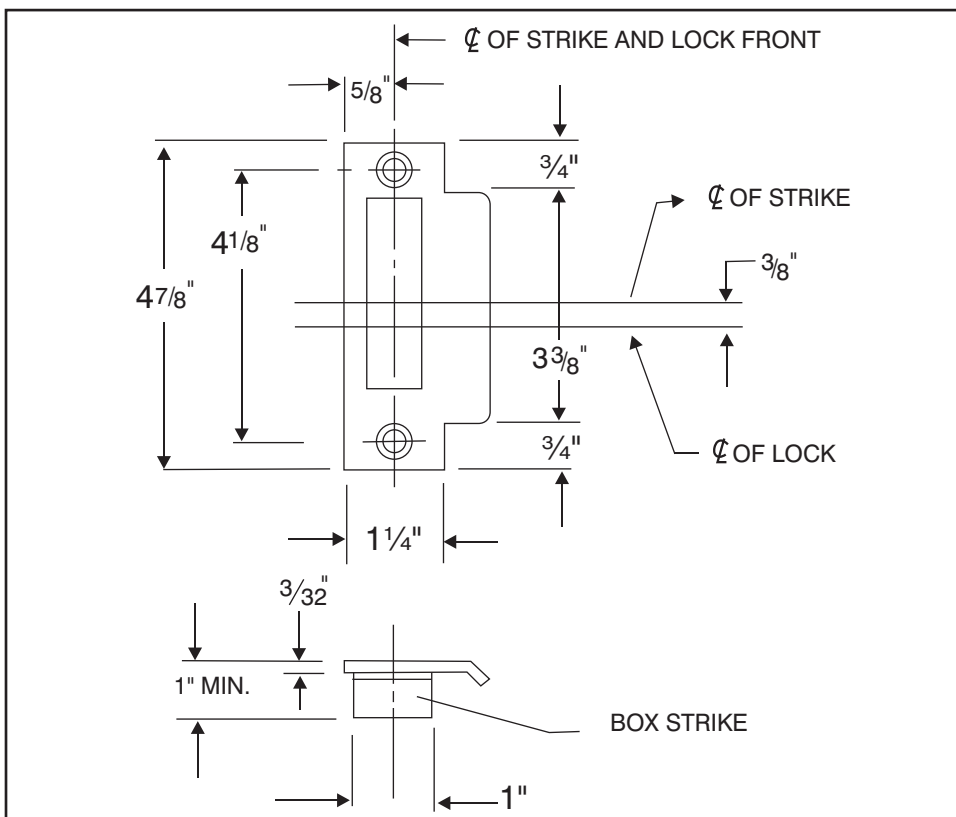


DIAGRAM #2

### FUNCTION HOLES TO DRILL

Function	Cyl. Hole outside	Cyl. Hole 2 sides	Turnpiece inside	Knob hole 2 sides	Cam type
A	X		X	X	C
AC		X		X	C
B	X		X	X	C
BAC		X		X	C
L			Both Sides	X	
N				X	
PD					
SD					

Key: C = Cloverleaf S = Straight Cam



CEDAR GROVE  
 NJ 07009

OM-ANBL  
 Rev. 12/29/10