

**MATERIALS NEEDED:**

- PHILIP SCREWDRIVER
- LEVELING TOOL
- TAPE
- DRILL


**MATERIAL PROVIDED:**

- (2) WOOD SCREWS
- (2) ANCHORS

**STEP 1:** Determine the ideal location of your new mirror. Make sure mirror has enough clearance from faucet and ceiling.

*See Figure 1.*


**Figure 1.**

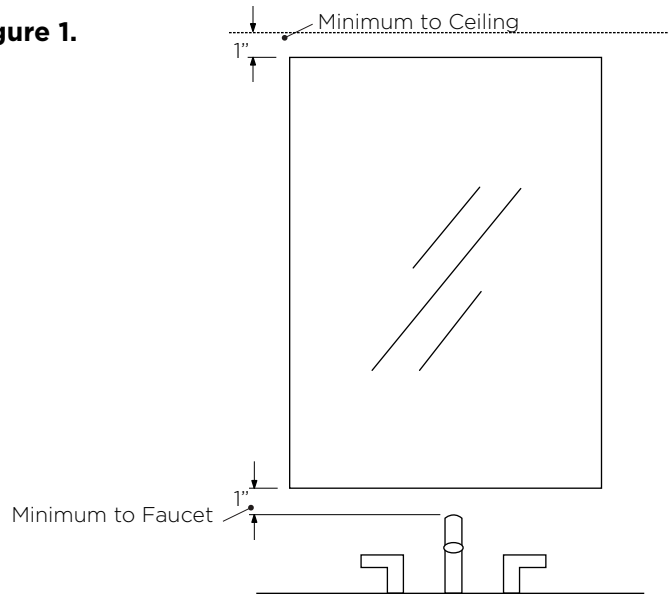

**STEP2:** Drill pilot holes into the wall.

*See Figure 2.*

**Figure 2.**

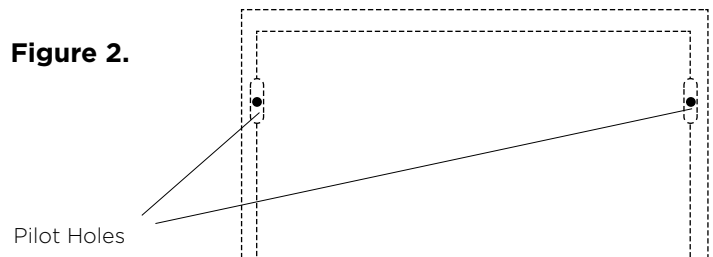


**STEP3:** Secure the anchors in the wall, and then fasten the screws provided into the anchor.

**Note:** Allow about 1/8" clearance from screw head to wall.

*See Figure 3.*

**Figure 3.**

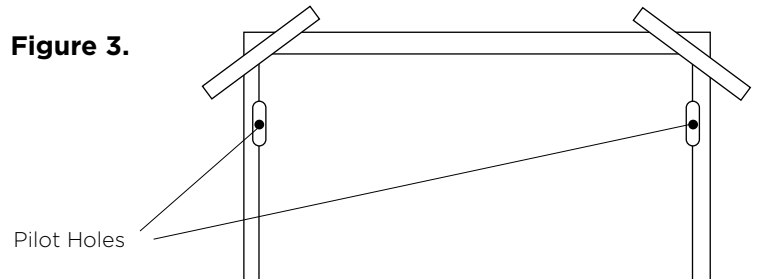

**STEP 4:** Line up the keyhole hardware on the back of the mirror to the screws on the wall, and allow the mirror to sit in place.

*See Figure 4.*

**Figure 4.**

