


Model: 072930 072948 **Countertop :** 309231 309249
072936 072960 309237 309261

Vintage Collection

Note : For Under Counter Sinks

Figure 1.

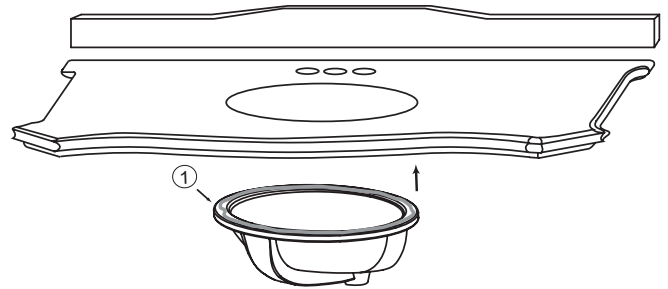


Step 1 : Apply adhesive caulking around the topside of rim near the edge

See Figure 1.

Step 2 : Carefully raise sink in place, align, and press firmly

See Figure 1.


Figure 2.

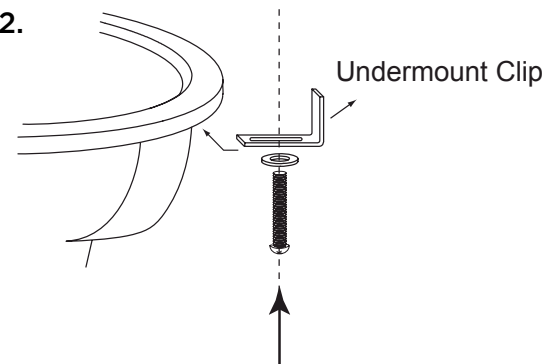

Step 3 : Attach 4 undermount clips to hold lavatory in place.

See Figure 2.

Figure 3.

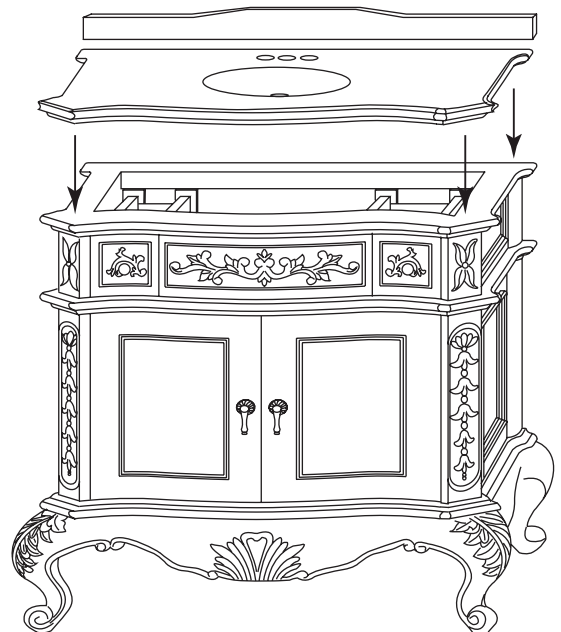

Step 4 : Secure top & back splash to cabinet by using adhesive caulk

See Figure 3.