


PLEASE READ THE INSTRUCTIONS COMPLETELY
BEFORE BEGINNING THE INSTALLATION.

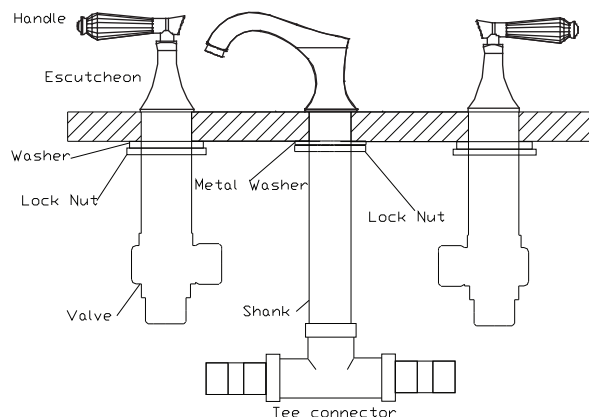


MINIMUM HOLE SIZE FOR THE SPOUT AND
HANDLE TRIM IS 1 1/4" AND MAXIMUM OF 1 1/2"

*** NOTE: SHUT OFF WATER SUPPLY BEFORE BEGINNING INSTALLATION***

BAROQUE & ENZO APPLICATION

3/4" N.P.T. SPOUT SHANK


- Remove tee connector and spout mounting hardware from spout.
- Apply a ring of silicone caulking around hole designated for spout. DO NOT USE PLUMBERS' PUTTY, WHICH CAN DAMAGE FINISH.
- Slip spout and spout base through top of deck.
- Reattach spout mounting hardware and secure spout.
- Thread tee connector onto spout shank.

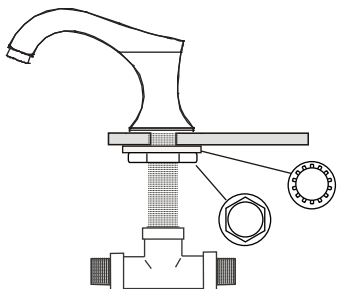

EDO APPLICATION

QUICK CONNECT SHANK

- Remove tee connector and spout mounting hardware from quick connect shank being sure to leave on brass plate.
- Apply a ring of silicone caulking around hole designated for spout. DO NOT USE PLUMBERS' PUTTY, WHICH CAN DAMAGE FINISH.
- Slip quick connect shank through deck top.
- Reattach spout mounting hardware until secure.
- Place spout onto quick connect shank and set in place with allen key and set screw provided.

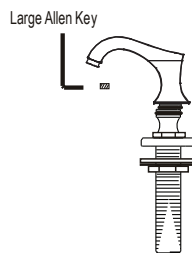


INSTALLATION INSTRUCTIONS

HANDLE INSTALLATION

- Unscrew pre-assembled handle trim from valve body. Hot valve assembly "Red" to be mounted on left. Cold valve assembly "Blue" to be mounted on right. Apply a ring of silicone caulking around the handle hole on deck top.

DO NOT USE PLUMBERS' PUTTY, WHICH CAN DAMAGE FINISH.

Slip valve body up from below tub deck. Reattach pre-assembled handle trim to valve body. Align handles with respect to the spout and tighten valve body locknut until secure.

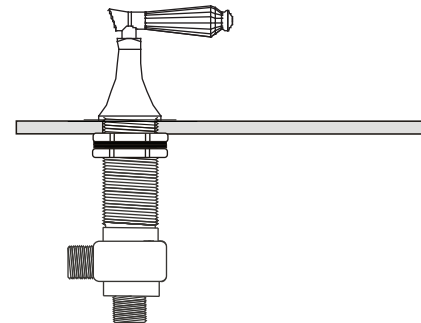

PLUMBING


Install plumbing "not provided" to make connections between hot valve, cold valve and spout tee connector.

WATER TEST

- Turn on the cold water supply.
- Use the handle from the faucet set to turn the valve on and off.
- Check for leaks. If water leaks from any of the connections merely tighten the connections until the leak stops.
- Repeat the same procedure for the hot water supply.


SANTEC RECOMMENDS:

- The use of teflon tape or equivalent on all threaded joints.
- The installation of hard plumbing, not flex connections for all connections.
- An access panel provided for all roman tub installations.

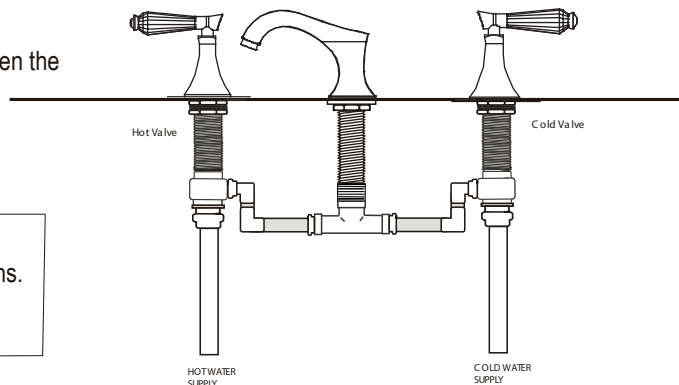

DIVERTER INSTALLATION

- 1
- Unscrew the pre-assembled diverter handle trim from the diverter.
 - Slip the diverter valve body up from the bottom of the tub through the appropriate hole. From tub top, screw the handle trim with the flange washer back onto the diverter. The washer must be gently pressed against the surface. Make sure that the handle turns freely in both directions.
 - Align the handle lever and tighten the lock nut firmly.

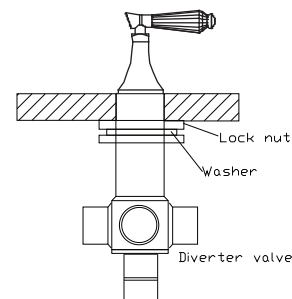

**** The spout, handle valve bodies and diverter can be connected with flex hoses (not provide by Santec) or copper pipe soldering. Please note that when soldering connections, do not use excessive heat. Excessive heat can damage the joints increasing probability of leakage.**