

## PIANA I COLLECTION

YY-HN-TM

'HN' STYLE HANDLE TRIM FOR 4-PORT, 5-PORT AND STOP VALVES



## TEST FOR PROPER FUNCTION BEFORE CLOSING WALLS!

FLUSH BOTH SUPPLY LINES BEFORE INSTALLATION AFTER FLUSHING, SHUT OFF BOTH SUPPLY LINES.

MINIMUM HOLE SIZE FOR THE HANDLE TRIMS IS 15/8" AND MAXIMUM OF 13/4"


## INSTALLATION INSTRUCTION


INSTALLING THE VALVE WITH THE TRIM

- 1- Install the valve onto the wall with at least 2-1/2" space between the center of the valve inlet and the finished wall.
- 2- Screw the extension all thread and stem onto the valve making sure it is all the way in.
- Mark the extension all thread flushed to the wall, remove it and cut.

Do the same with the stem but this time cut 1/4" less than the extension thread in order to attach handle.

4- Cut off the excess All Thread and Stem (remember to cut the Stem 1/4" shorter)

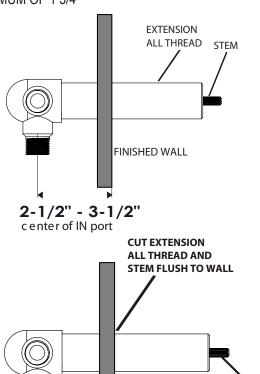

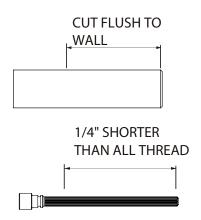


**CUT STEM 1/4"** 

SHORTER FOR HANDLE INSTALLATION

## **INSTALLATION INSTRUCTIONS**

5 - Replace the handle onto the stem. Tighten the handle set screw firmly.

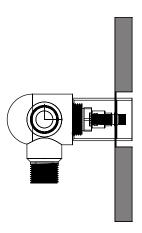

6 - Apply the finish trim.

