



FVN20-3636

OXFORD

INSTALLATION GUIDE

PAGE 1


20 3/8" 72" 10 3/8" 15 1/8" 10 3/8"


Note: All dimensions and specifications are approximate and subject to change without notice.




MIRROR INSTALLATION

- 1 Level the mirror bracket and then mark the installation position
- **2** Drill the installation holes
- 3 Insert the plastic plug

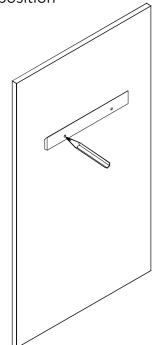

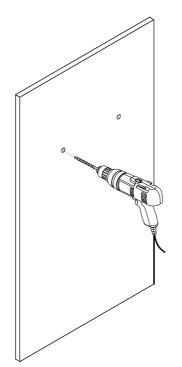

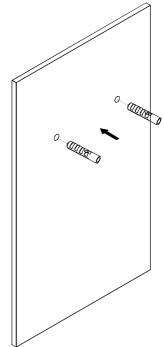





FVN20-3636


OXFORD


INSTALLATION GUIDE

PAGE 2

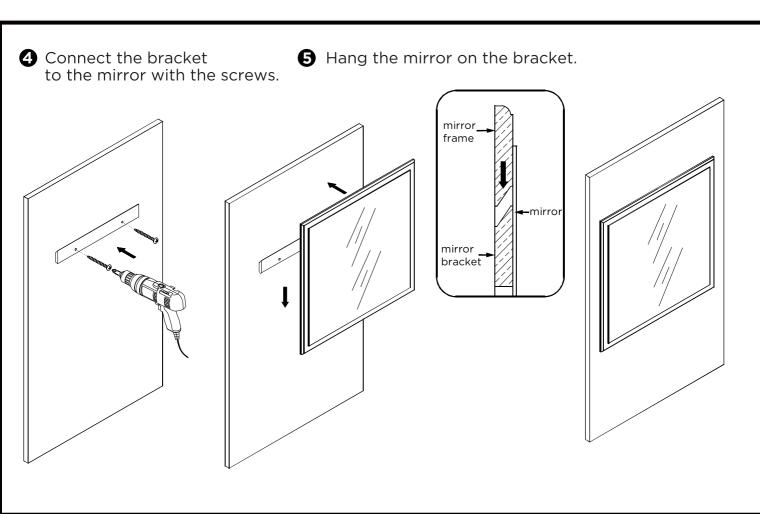

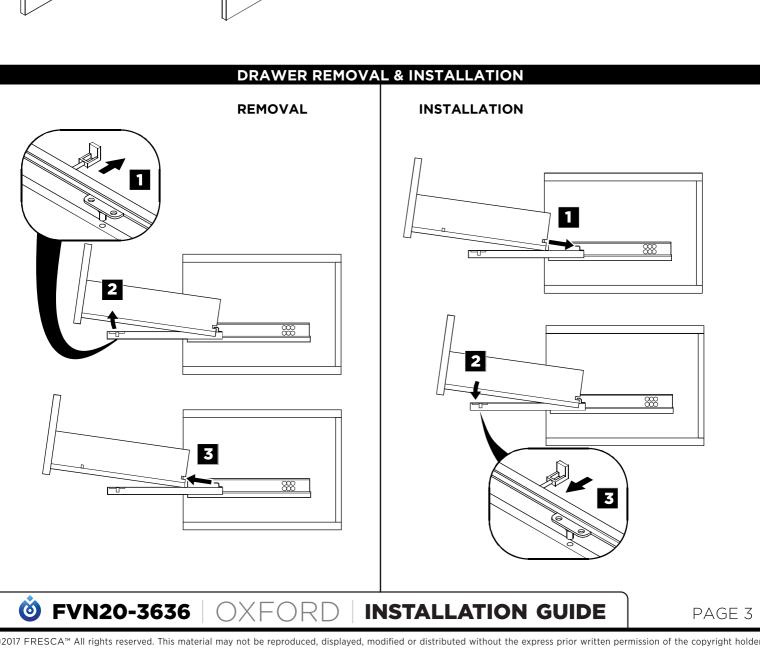

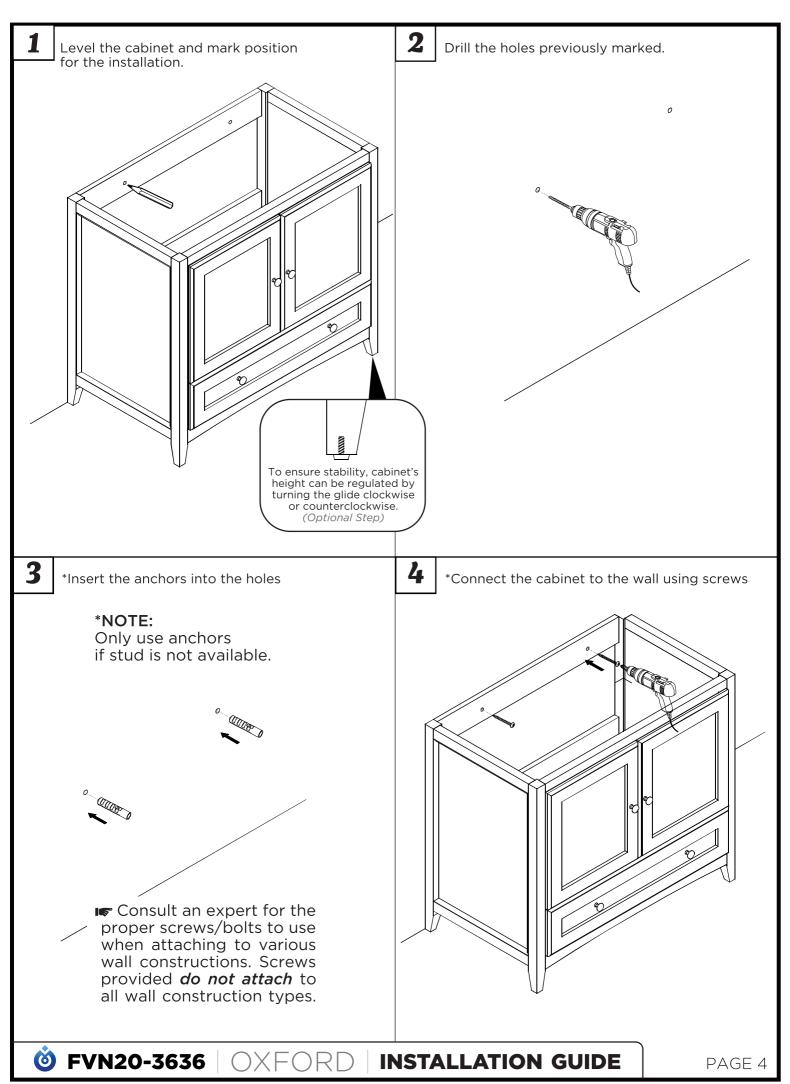


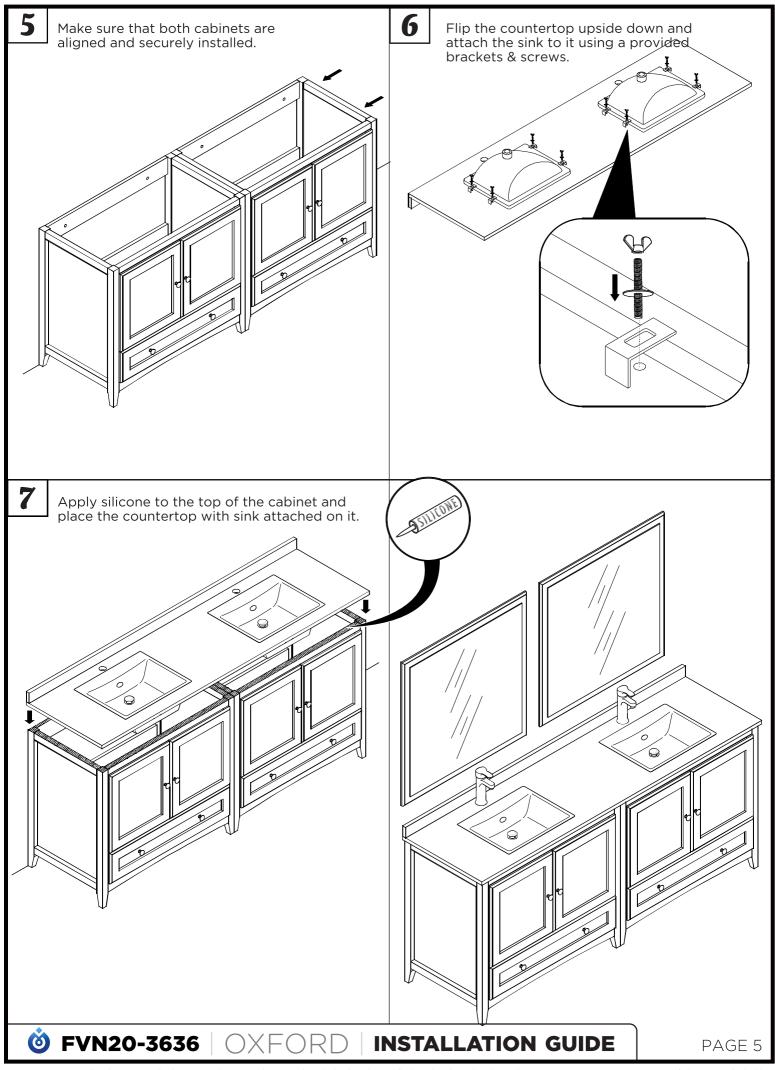



POP-UP & P-TRAP


INSTALLATION INSTRUCTIONS

Your item may appear slightly different from the illustration.

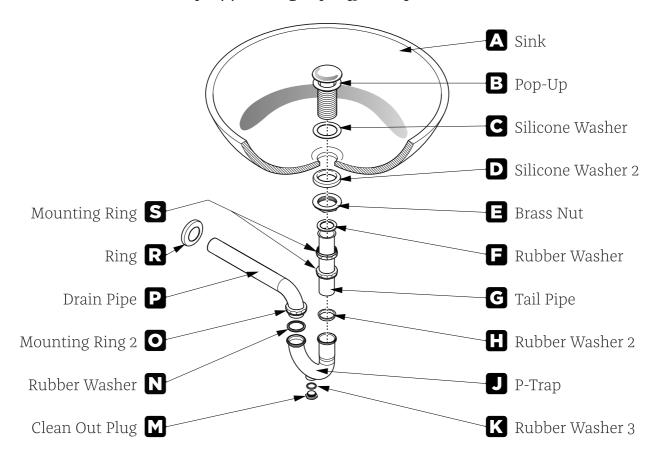

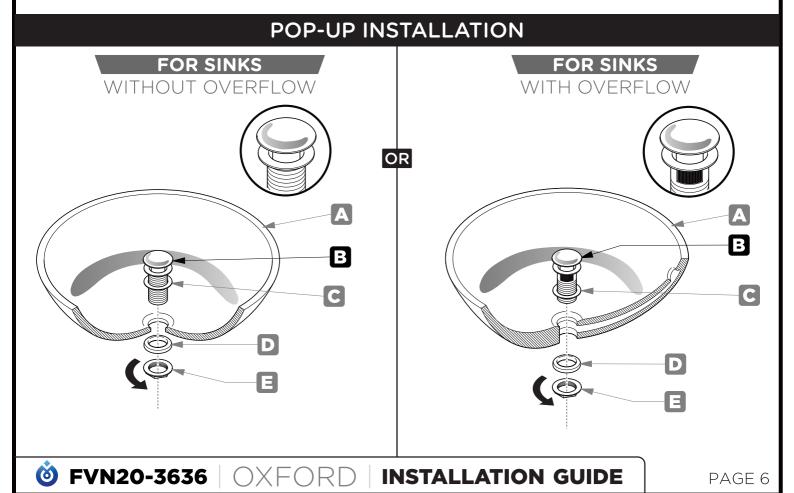

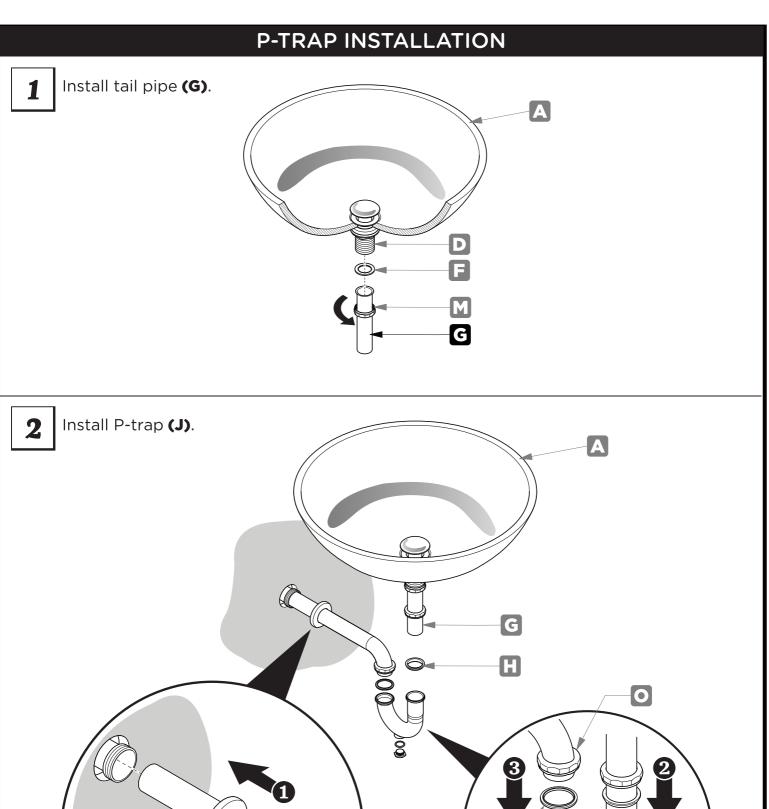

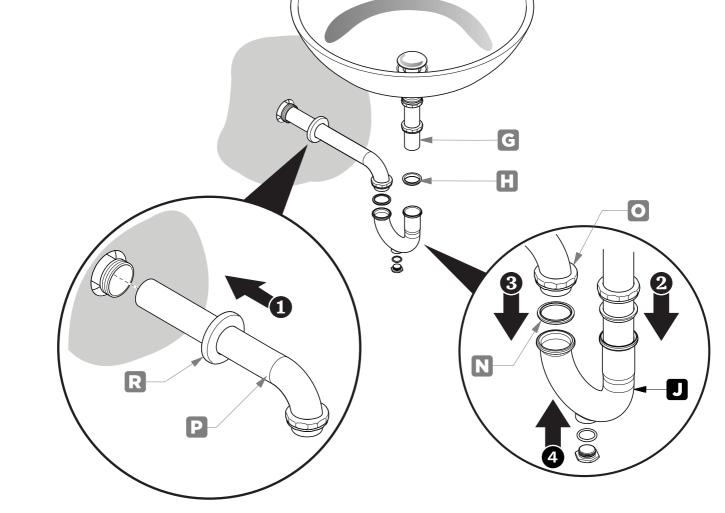



Ö FVN20-3636

INSTALLATION GUIDE

PAGE 7