


# INSTALLATION INSTRUCTIONS

## Bath Tub Drains

Part #'s: 349, 350, 362, 361, 351

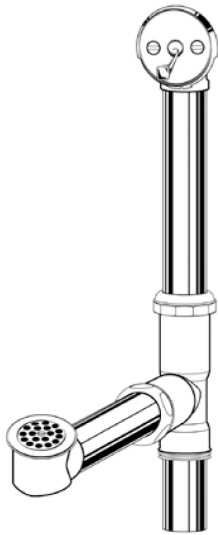

### 1. Installing Drain & Over Flow (All Series)

- Rotate gasket on the overflow head to get the best angle for mounting the overflow to the tub. If provided, use overflow retainer to hold overflow in place while installing the other drain components.
- If applicable, remove drain mechanism from shoe plug. Install shoe plug using  $\frac{1}{4}$ " **MAXIMUM** bead size of sealant under the flange of the shoe plug. The rubber washer must be next to the tub and the fibre washer against the drain shoe.

### 2. Installing & Adjusting Trip Lever

- If required, attach top wire (19C) to trip face plate (1) & close wire loop.
- With plunger (19D) resting next to the installed drain turn hex nuts (19A) until offset in the top wire (19C) aligns with the holes for the face plate screw (2) in the overflow head.
- Tighten hex nuts (19A) and install wire assembly through the opening in the overflow head (17). Install face plate screws (2).
- Check to see if tub retains water. If not, readjust wire assembly.
- Check joints for leaks.

