
INSTALLATION INSTRUCTIONS


1½" Schedule 40 PVC Cable Drains Part #'s: 370-LT, 372-LT, 374-LT, 376-LT

TRIM SOLD SEPARATELY




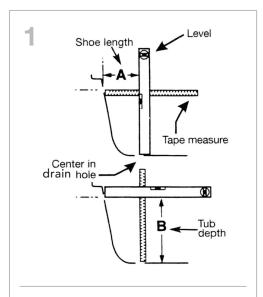


- A Measure distance from center of drain hole to center of overflow hole.
- B Measure height from center of drain hole to center of overflow hole.

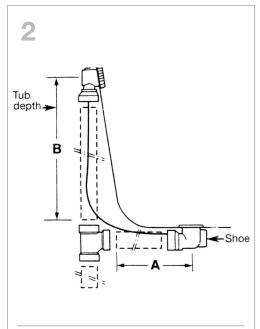



Install using PVC 1½" Schedule 40 DWV pipe in compliance with ASTM D 2665-89a $\underline{\text{ONLY}}.$

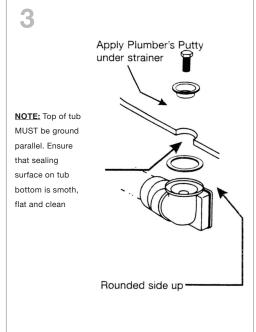


Mount Drain to tub with supplied drain screw.

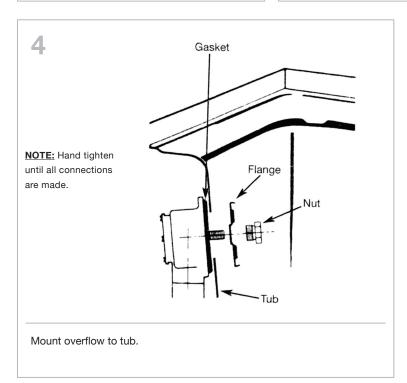

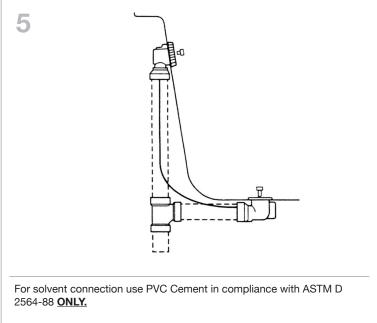


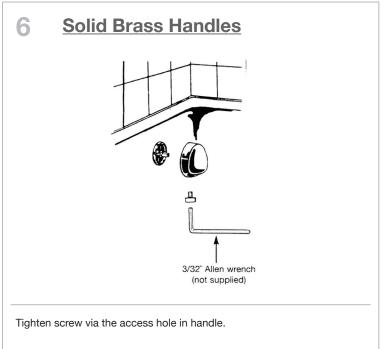

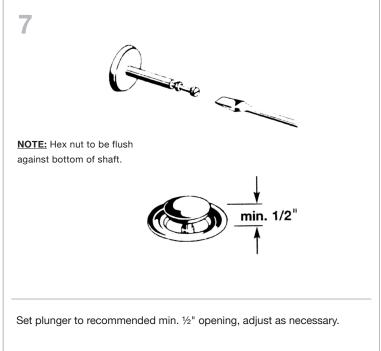

To operate drain, simply turn handle 1/8 turn (clockwise opens, counter-clockwise closes).

Jaclo 11/2" Tubular Bath Waste and Overflow Replacement Parts

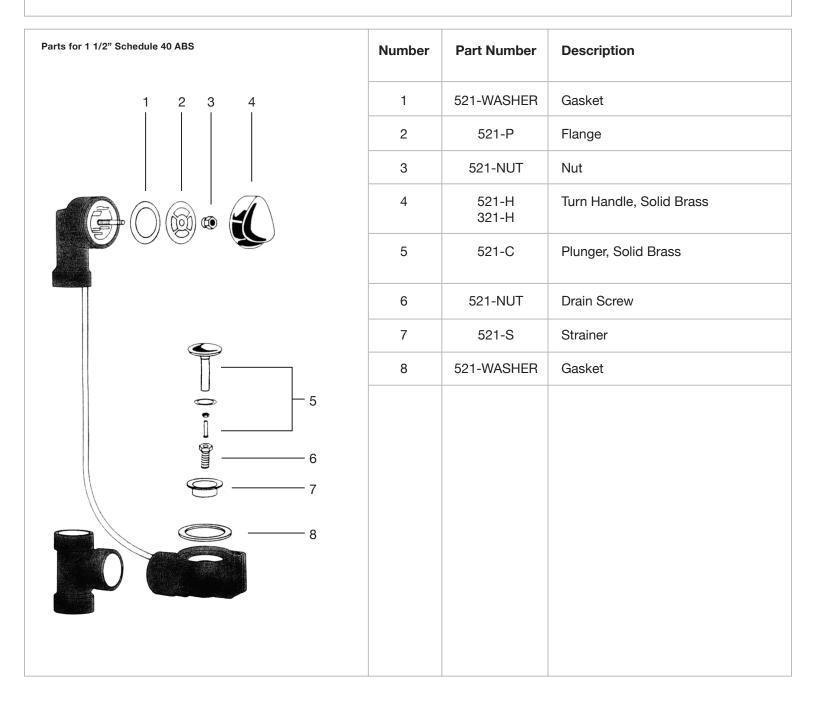

Troubleshooting

| Drain leaks around plunger | Check plunger O-ring for cuts or nicks Check that strainer flange is level Check plunger screw adjustment Check tub surfaces. Ensure that they are smooth, flat, amd clean. |
|------------------------------------|--|
| Leaks around strainer flange | Check that strainer flange is level & flush with tub surface Check that plumber's putty is applied evenly |
| Water closes plunger when draining | Wrong size drain Cable too long Secure cable to overflow neck. Recommend using cable tie (not provided) |

