


## INSTRUCTIONS


For Assembling and Installing Fixtures in Canada  
Pour L'assemblage et L'installation Au Canada

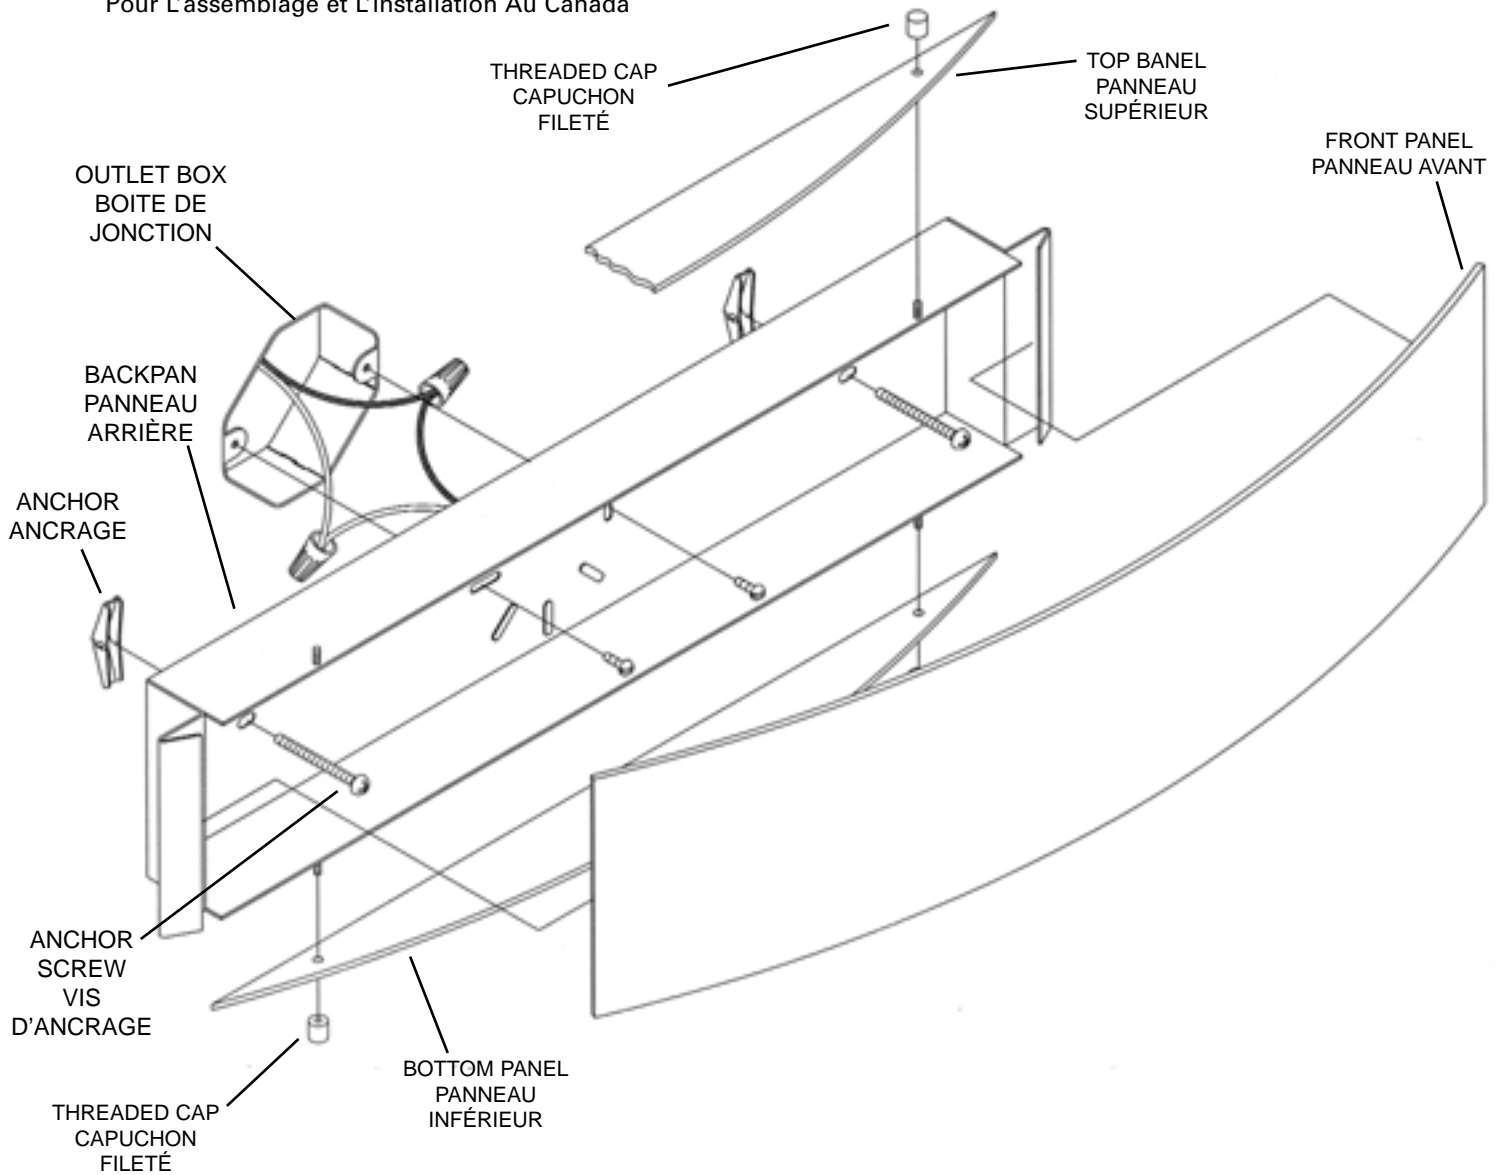

- 1) At the center of the backpan are knockout slots. Remove the set that matches your outlet box.
- 2) Secure the backpan to the outlet box. (Screws not provided.)
- 3) Anchor the backpan to the wall using the set of holes at each end of fixture using wood screws, toggle bolts, plastic anchors, etc. If using the provided anchors, mark position of holes, remove backpan from wall, drill appropriate holes and reassemble as illustrated.
- 4) Turn off power.
- 5) Connect fixture ground wire to outlet box ground wire with wire connector. (Not provided.) Never connect ground wire to black or white power supply wire.
- 6) Make wire connections (connectors not provided.) Reference chart below for correct connections and wire accordingly.

Connect Black or Red Supply Wire to:	Connect White Supply Wire to:
Black	White
*Parallel cord (round & smooth)	*Parallel cord (square & ridged)
Clear, Brown, Gold or Black without tracer	Clear, Brown, Gold or Black with tracer
Insulated wire (other than green) with copper conductor	Insulated wire (other than green) with silver conductor

\*Note: When parallel wires (SPT I & SPT II) are used. The neutral wire is square shaped or ridged and the other wire will be round in shape or smooth (see illus.)




- 7) Carefully push wire connections back into outlet box making sure all connections remain secure.
- 8) Insert light bulbs.
- 9) Lower top panel down to backpan. Pass threaded studs at top of backpan through holes in top panel and secure in place with threaded caps;
- 10) Raise bottom panel up to backpan. Pass threaded studs at bottom of backpan through holes in bottom panel and secure in place with threaded caps;
- 11) Slip one end of front panel into end of backpan.
- 12) Bend front panel and slip other end of panel into other end of backpan.

- 1) Au centre du panneau arrière se trouvent des fentes amovibles. Enlever l'ensemble correspondant à votre boîte à prises.
- 2) Visser le panneau arrière sur la boîte à prises. (Vis non fournies).
- 3) Fixer le panneau arrière au mur avec l'ensemble des trous sur chacune des extrémités du luminaire à l'aide des vis à bois, boulons à ailettes, ancrages en plastique etc. Si les ancrages fournis sont utilisés, marquer l'emplacement des trous, enlever le panneau arrière du mur, percer le trou et réassembler selon l'illustration.
- 4) Couper l'alimentation secteur.
- 5) Avec l'attache-fil (qui n'est pas fourni), connecter le fil de mise à la terre au fil d'alimentation noir ou à celui qui est blanc.
- 6) Connecter les fils (connecteurs non fournis). Se reporter au tableau ci-dessous pour faire les connexions.

Connecter le fil noir ou rouge de la boîte	Connecter le fil blanc de la boîte
A Noir	A Blanc
*Au cordon parallèle (rond et lisse)	*Au cordon parallèle (à angles droits et strié)
Au transparent, doré, marron, ou noir sans fil distinctif	Au transparent, doré, marron, ou noir avec un fil distinctif
Fil isolé (sauf fil vert) avec conducteur en cuivre	Fil isolé (sauf fil vert) avec conducteur en argent

\*Remarque: Avec emploi d'un fil parallèle (SPT I et SPT II). Le fil neutre est à angles droits ou strié et l'autre fil doit être rond ou lisse (Voir le schéma).



- 7) Replacer soigneusement les fils dans la boîte à prises en prenant soin de maintenir les connexions.
- 8) Introduire les ampoules.
- 9) Abaisser le panneau supérieur au niveau du panneau arrière. Passer les goujons filetés en haut du panneau arrière par les trous situés sur le panneau supérieur. Fixer à l'aide des capuchons filetés ;
- 10) Lever le panneau inférieur au niveau du panneau arrière. Passer les goujons filetés en bas du panneau arrière par les trous situés sur le panneau inférieur. Fixer à l'aide des capuchons filetés ;
- 11) Faire glisser une extrémité du panneau avant dans l'extrémité du panneau arrière.
- 12) Plier le panneau avant et faire glisser l'autre extrémité du panneau dans l'autre côté du panneau arrière.