


RAINBOW

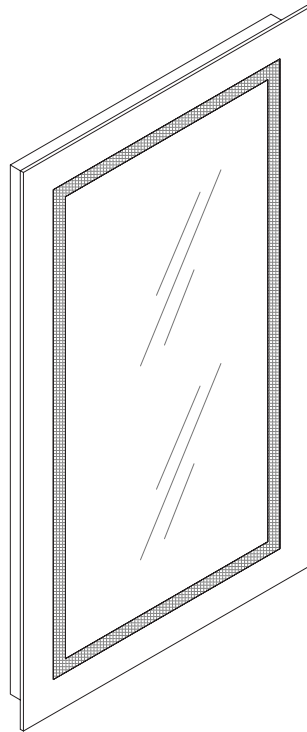


INSTALLATION AND CARE GUIDE

MARQUEE FRAMELESS LED MIRROR

600718-FINISH


Model : 600718-FINISH

Tools Required

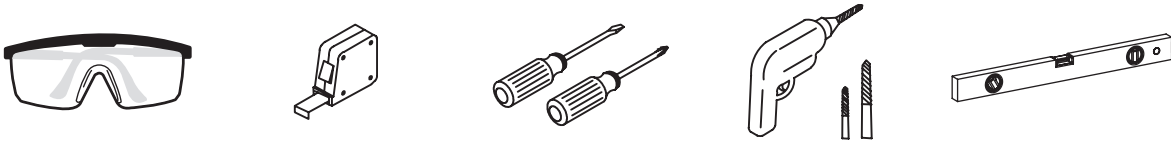

NOTE : **ALL WIRING SHOULD BE DONE BY A QUALIFIED LICENCED ELECTRICIAN.**
WARNING: To reduce the risk of electrical shock, shut off power before wiring the mirror
CAUTION: Requires 120V 20AMP circuit.
CAUTION: The LED mirror must be wired to a 20AMP GFI (ground fault interrupter)circuit breaker when used in bathrooms and all other locations required by the national electric code.

Wiring Diagram :

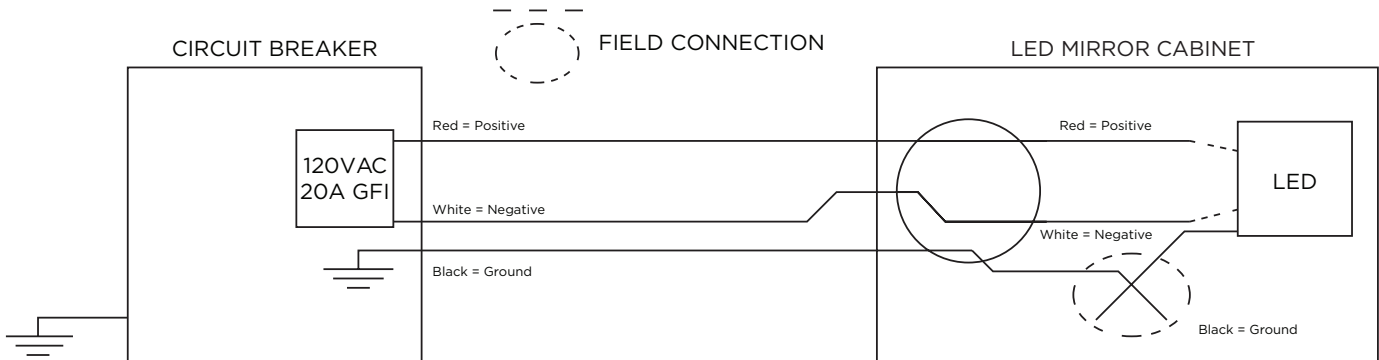

MATERIALS INCLUDED

- 1 frameless LED mirror
- 1 set of z-cleat
- 3 wood screws

MATERIALS NEEDED

- 1 2 x 4 cut to size


Model : 600718-FINISH

PRE-INSTALLATION

Step 1: Determine the ideal location of your new mirror.

See Figure 1.

Figure 1.

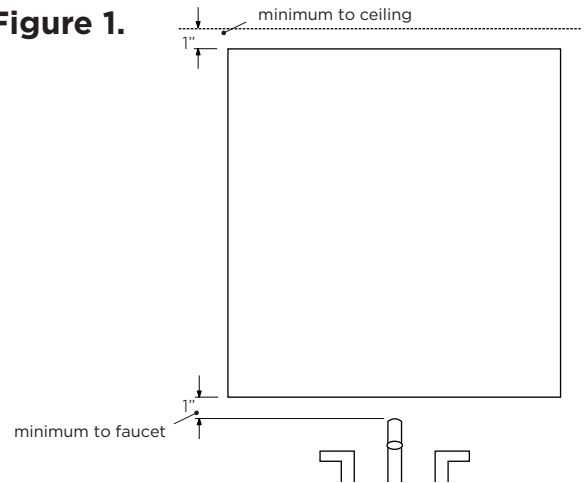


Step 2: Place a 2 x 4 supporting beam behind the wall of the desired location

Open up a hole on the wall to allow the wire to connect to the mirror.

See Figure 2.

Figure 2.

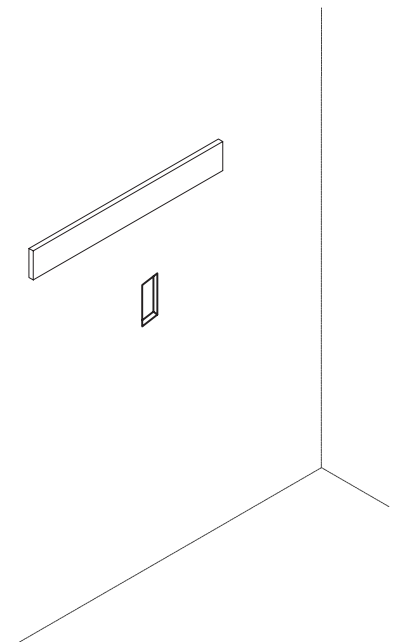

Model : 600718-FINISH

INSTALLING THE MIRROR

Step 4: With a leveler, mark your desire location of the Z-cleat bracket and take the free side of the z cleat and screw it to the wall as shown on the right.

See Figure 3.

Step 5: Connect the transformer connector to the mirror then connect the wire of the mirror to the electricity source of your home.

Then line up the Z-cleat and hang the mirror to the wall.

Figure 3.

