RONBOU

INSTALLATION AND CARE GUIDE

WOOD FRAME LED MIRROR 604730

WOOD FRAME LED MIRROR

Model: 604730

PRE-INSTALLATION

Tools Required




ALL WIRING SHOULD BE DONE BY A QUALIFIED LICENSED ELECTRICIAN.

WARNING: To reduce the risk of electrical shock, shut off power before wiring the cabinet.

CAUTION: Requires 120V 20AMP circuit.

CAUTION: The LED mirror must be wired to a GFI (ground fault interrupter) circuit breaker when used in bathrooms and all other locations required by the national electric code.

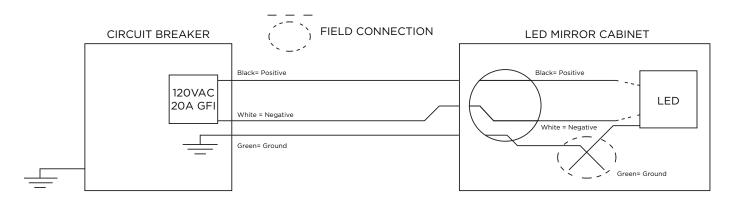

Materials Included

- 1 set of wall cleats
- 5 wood screws

Materials Required


- 1 2x4 beam
- 1 electrical box
- 3 wire nuts

1

WOOD FRAME LED MIRROR

Model: 604730

INSTALLATION

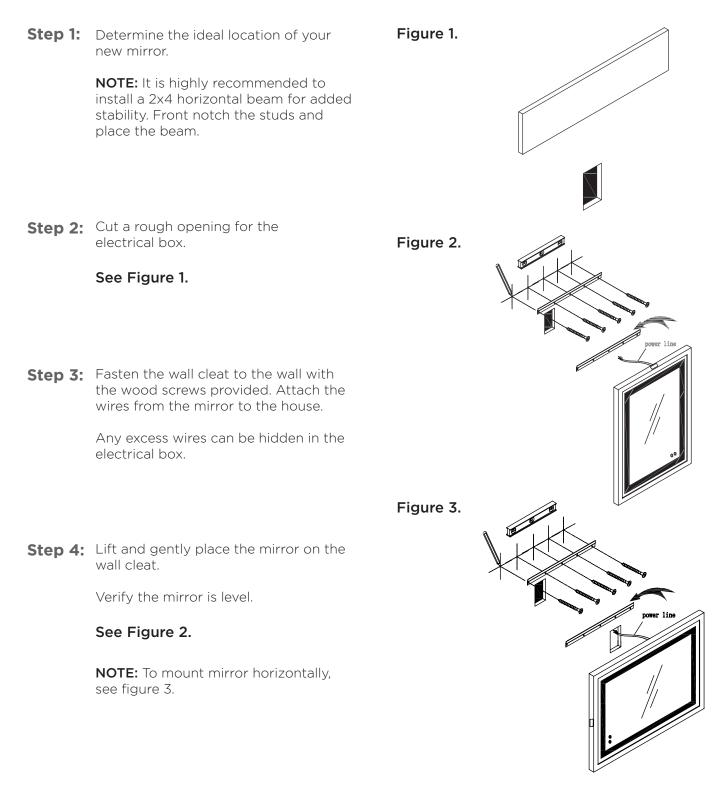

2

ROUBOM

Model: 604730

PRODUCT CARE AND MAINTENANCE

The fine furniture finish of your new vanity, mirror or other bathroom accessories are designed to protect against normal home use. With proper care, your product will provide years of use and beauty in your home.

General Care Tips

- Test cleaning product on small, discrete area prior to applying to entire surface.
- Wipe surfaces frequently with dry, soft, non-abrasive and lint-free towel.
- Do not allow liquids and moisture to accumulate on the surface of products.
- For warranty information, please visit our website at www.ronbow.com or contact the Customer Service Department at (510) 713-1188.



40650 Encyclopedia Circle Fremont, CA 94538 T 510.713.1188 F 510.657.9388

ronbow.com