
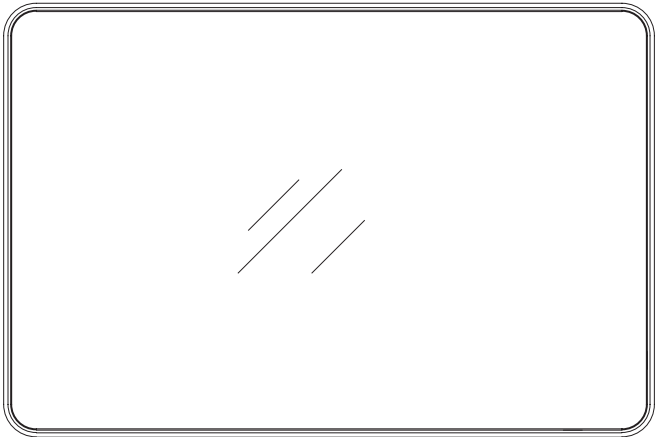


# ROXBOW SIGNATURE™

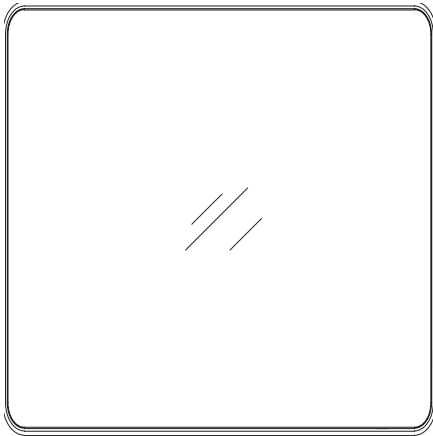

## INSTALLATION AND CARE GUIDE

FREE LED WOOD MIRROR

E025234


E025233

**Model :** E025233  
E025234

Designed By: DANELONMERONI | UNITED KINGDOM

**Note :** **ALL WIRING SHOULD BE DONE BY A QUALIFIED LICENCED ELECTRICIAN.**  
**WARNING:** To reduce the risk of electrical shock, shut off power before wiring the cabinet.  
**CAUTION:** Requires 120V 20AMP circuit.  
**CAUTION:** The LED mirror must be wired to a 20AMP GFI (ground fault interrupter) circuit breaker when used in bathrooms and all other locations required by the national electirc code.


**Wiring Diagram :**

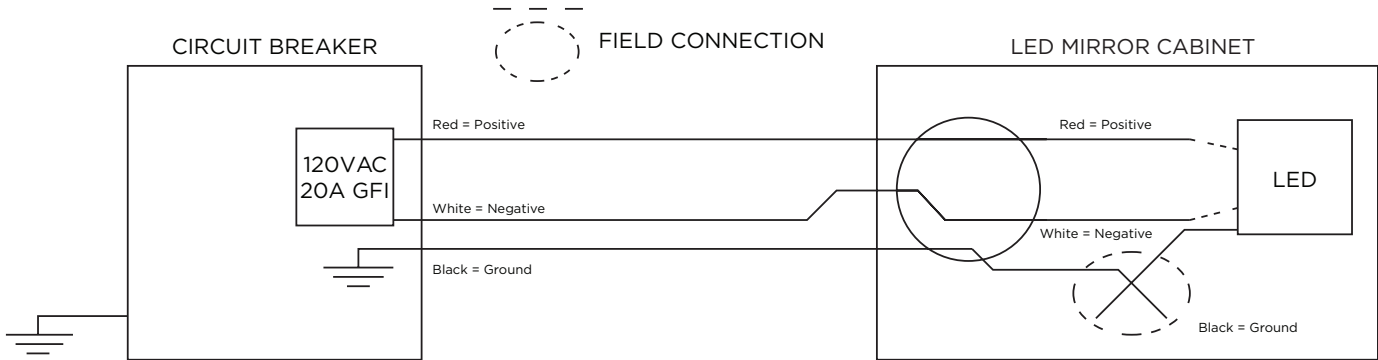

**Step 1 :** Determine the ideal location of your new mirror. Mark the pilot hole location to mount the mirror.

**See Figure 1.**

**Figure 1.**

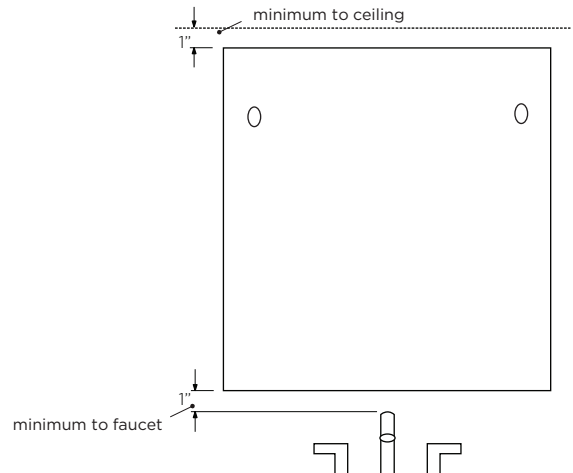

**Step 2 :** Drill the 5/16" pilot holes in the wall with 1-9/16" depth and place the anchors inside the holes.

NOTE: anchors are only required when mounting to the drywall and studs are not available.

**See Figure 2.**

**Figure 2.**




**Model :** E025233  
E025234

Designed By: DANELONMERONI | UNITED KINGDOM

**Step 3 :** Install the screw to the anchor. Leave at least 3/16" of screw head protruding out from the wall.

**See Figure 3.**


**Figure 3.**

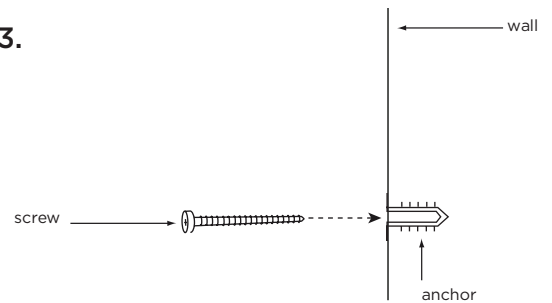

**Step 4 :** Line up the key-holes behind the mirror, and let the mirror rest onto the screws.

**See Figure 4.**

**Figure 4.**

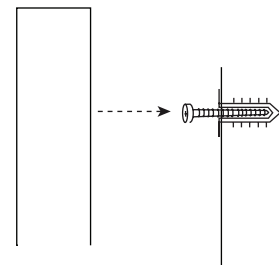

## PRODUCT CARE AND MAINTENANCE

The fine furniture finish of your new vanity, mirror or other bathroom accessories are designed to protect against normal home use. With proper care, your product will provide years of use and beauty in your home.

### General Care Tips

- Test cleaning product on small, discrete area prior to applying to entire surface.
- Wipe surfaces frequently with dry, soft, non-abrasive and lint-free towel.
- Do not allow liquids and moisture to accumulate on the surface of products.
- For warranty information, please visit our website at [www.ronbow.com](http://www.ronbow.com) or contact the Customer Service Department at (510) 713-1188.

### Wood Surfaces

- If a spill occurs, clean and dry the surface immediately as liquid can soak through the surface and cause greater damage.
- Do not place in direct sunlight. Exposure to sunlight may affect the appearance of your vanity, and the finish will eventually crack.
- Keep away from direct sources of extreme temperatures as heat, cold or moisture from humidity. Color changes, or blemishes in the wood can occur if recommended care of is not met. Try to avoid these extremes.
- Most wood surfaces can be cleaned, or dusted, with any commercial wood cleaning product. For general cleaning, use a non-abrasive, or lint-free cloth while dusting along the wood grain to preserve the wood's characteristics.

### Recommended Products

- Pledge Orange Oil, or similar
- Orange-Glo Wood Cleaner

**DISCLAIMERS:** Wood naturally ages, darkens and changes color over time due to several environmental conditions that may cause materials to vary from their original color and/or to warp, split or crack. These variations are considered to be the nature of the material in relation to their environmental exposure and may be significant over a long period of time. The effectiveness of cleaning Ronbow product is dependant on various factors that include sunlight, smoke, moisture, household cleaners and/or amount of cleaning product used over time. Ronbow cannot guarantee that the above Product Care & Maintenance methods will effectively clean your product.

# RONBOW

40650 Encyclopedia Circle  
Fremont, CA 94538

T 510.713.1188  
F 510.657.9388

[ronbow.eu](http://ronbow.eu) | [ronbow.com](http://ronbow.com)