

# SIGNATURE SERIES

by RONBOW

## INSTALLATION AND CARE GUIDE

### **DRAIN**

700103 703606

700204 703611

702503 703703

Model : 700103      703611  
          700204      703703  
          702503  
          703606

**PRE-INSTALLATION**

**Tools Required**



**MATERIALS INCLUDED**

- 1 drain
- 1 thick rubber washer
- 1 metal nut
- 1 tailpiece


Model : 700103      703611  
          700204      703703  
          702503  
          703606

## INSTALLATION

**Step 1:** Position countertop opening to ensure clearance between the lavatory, faucet and backsplash. Cut 1-3/4" hole for drain in countertop.

See Figure 1.


Figure 1.

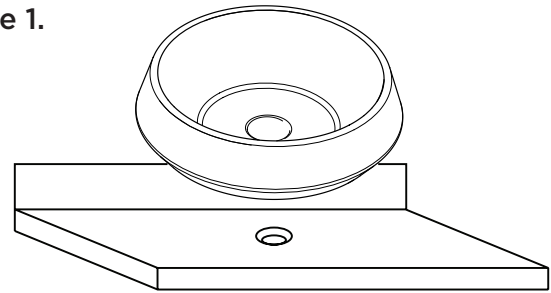

**Step 2:** Place a generous portion of plumbers' putty under drain cap and insert whole drain body inside the bowl and through the countertop.

See Figure 2.


Figure 2.

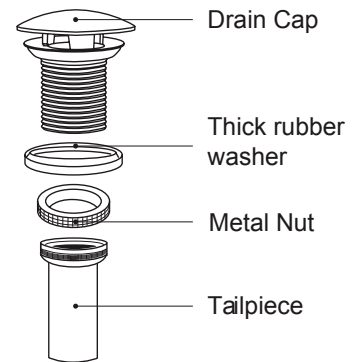

**Step 3:** From under the drain, insert the thick rubber washer, screw on and tighten the metal nut. Remove excess plumbers' putty.

See Figure 3.

Figure 3.

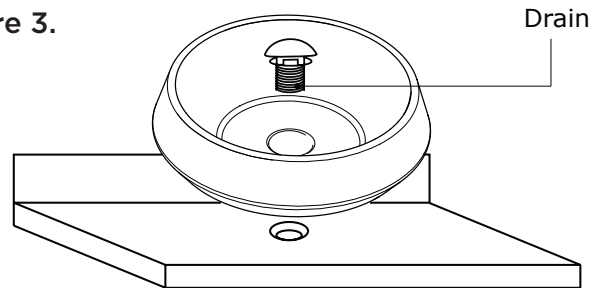

**Note:** For drain 703611-PC, attach drain cover included with the sink to the drain after installation.

See Figure 4.


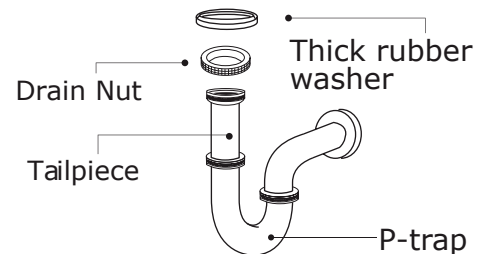


Figure 4.

**Step 4:** Attach p-trap to tailpiece.



# RONBOW

40650 Encyclopedia Circle  
Fremont, CA 94538

T 510.713.1188  
F 510.657.9388

[ronbow.eu](http://ronbow.eu) | [ronbow.com](http://ronbow.com)