


INSTALLATION INSTRUCTIONS FOR EXTENSION KITS SS-EXT20 / SS-EXT60 / SS-EXT70 / SS-EXT80

For use with:

- 1/2" VOLUME CONTROLS (ss-ts200)
- 1/2" VOLUME CONTROLS (ss-ts150)
- 4 PORT & 5 PORT DIVERTERS (ss-wd4 & ss-wd5)
- 2 HANDLE WALL LAVATORY FAUCET (ss-thv2.2)
- 2 & 3 VALVE SHOWERS (ss-506 & ss-503)
- TEMPRESS PRESSURE BALANCE VALVE (ss-pb70)

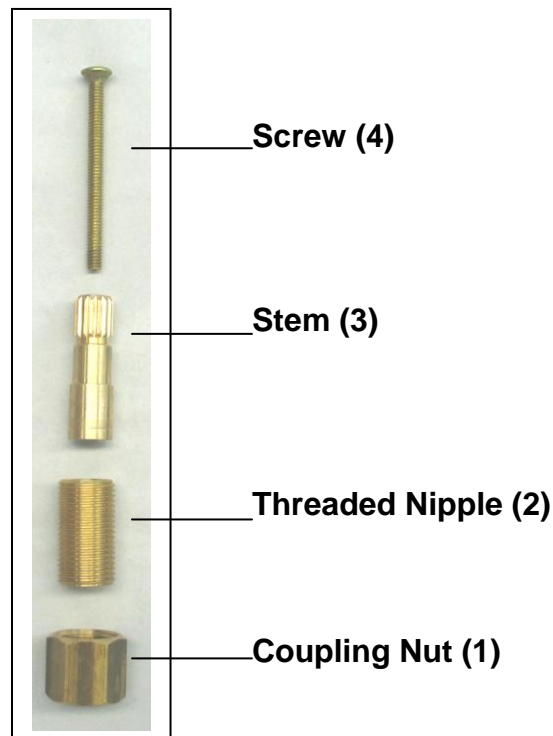

1. Screw the threaded nipple (2) roughly half way into the coupling nut (1).
2. Screw the free half of the coupling nut (1) onto the existing threaded nipple.
3. Place the stem (3) over the existing stem and tighten securely with the 8-32 screw provided (4).
 - For shorter extensions, screw the threaded nipple (2) deeper into the coupling nut (1) under step 1.
 - For longer extensions, do not screw the threaded nipple (2) all the way into the coupling nut (1). Extensions are stackable for even longer stem requirements.

