

ACCESSIBLE BATHROOMS

REPRESENTING THESE MODEL NUMBERS:

93057 L / 93058 R

Deluxe Dual Massage

93107 LNF / 93108 RNF Elite Dual No Faucet

93167 L / 93168 R Petite Dual Massage 93057 LNF / 93058 RNF

Deluxe Dual No Faucet

93117 L / 93118 R

Royal Dual Massage

93167 LNF / 93168 RNF

Petite Dual No Faucet

93107 L / 93108 R

Elite Dual Massage

93117 LNF / 93118 RNF

Royal Dual No Faucet

93085

Companion Dual Massage






Table of Contents

Unpack and Inspect	1
Move your Ella Walk in Bath	2
Important Safety Instructions	
Before Installation	5
Drain and Plumbing	6
Preparing the Sub-floor	7
Service Access and Ventilation	8
Door Seal	
Hydro Massage System Diagram	9
Air Massage System Diagram	10
LED Chromatherapy System Diagram	
Ozone Generator System Diagram	12
Ella Walk in Bath Electrical System Diagram	
Water Supply Lines	14
Installation of Spout	15
Installation of Deck Mount Grab Bar	
Installing Extension Kits	
Finishing Installation	
Operating Instructions	
Cleaning and Maintenance	22
Warranty Information	23
Warranty Activation Form	24-25



Unpack and Inspect

ACCESSIBLE BATHROOMS

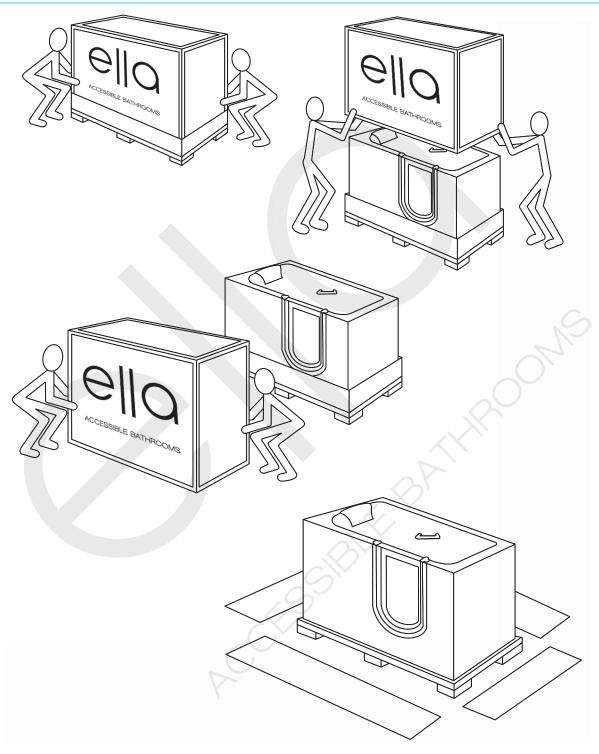


NOTE: Returns are only accepted in original packaging used for shipping. Use caution so as not to damage cardboard crate or its wooden pallet. Do not dispose of shipping material until installation is complete. Please visit our website, www.ellasbubbles.com for complete details of return/exchange policy.


Move your Ella Walk in Bath



ACCESSIBLE BATHROOMS

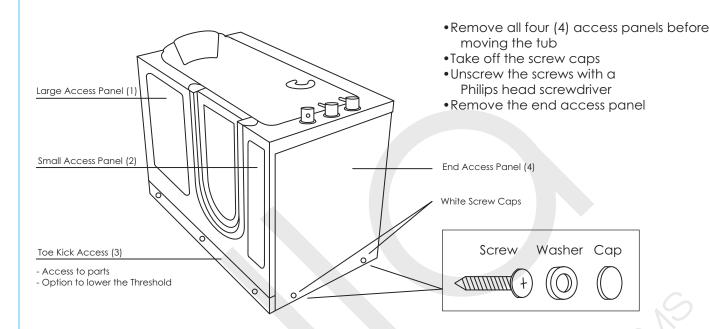

WARNING: Do not carry the walk in tub by the panels. Be careful when carrying the tub, avoid front panel contact with the floor or stairs to prevent damages. Make sure no loose parts are hanging down. Remove all four (4)access panels before carrying the tub to prevent them from falling out and breaking.

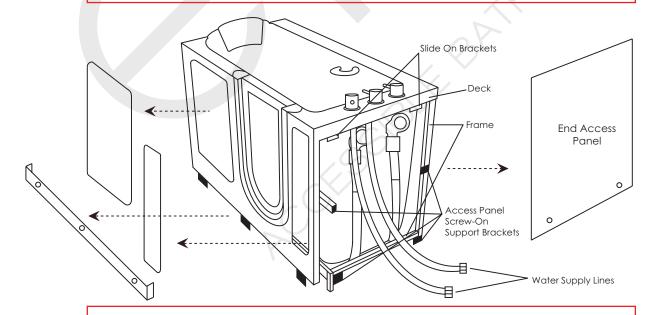

WARNING: Lift and carry the tub only by the frame. Protect the bottom of the tub to avoid breaking the air jets positioned on the bottom of the tub.



Important Safety Instructions

WARNING:

Read through the entire manual completely before beginning installation.

Contract a licensed plumber and electrician for installation. Be sure you and your contractor are aware and follow all local plumbing and electrical codes. Your Ella Walk in Bath is not intended for outdoor use. Install the tub in accordance with the instructions in the manual. Use ONLY the parts and accessories provided or as recommended by the manufacturer.

CAUTION:

When using this product, basic precautions should always be followed. Read and follow all instructions pertaining to risk of fire, electric shock and injury. Make sure and have your licensed electrician test all connections to the dedicated line, including the GFCI.

Risk of electric shock; Do not permit electric appliances within 3 feet (1.5m) of the tub. i.e.: hair dryers, lamps, phones, radios, televisions, etc.

To reduce the risk of injury, do not permit children or persons with disabilities to use this product unless they are supervised by an able-bodied adult at all times. Never drop or insert any objects into any openings.

Do not turn on the Hydro jets without water reaching the waterline. The waterline is the point where all jets are covered with water.

DANGER:

Temperature in excess of 100.4 Fahrenheit (38 Celsius) may be harmful to your health. Check and adjust the temperature before use. Consult your physician before using your Ella Walk in Bath if you have a heart condition or other health issues. People using medications, herbal remedies, sleep aids, and/or having adverse medical history should consult a physician before using this product.

Pregnant women should NOT use this product before consulting their physician. Avoid the use of alcohol, drugs or other medications while using your walk in bath.

Be aware, hyperthermia is a risk when raising body temperature. Do no keep body submerged in heated bath for extended periods of time. The symptoms of hyperthermia include an increase in body temperature which can cause dizziness, lethargy, drowsiness and fainting. Avoid using the heated bath after strenuous activity.

Exercise caution while entering and exiting your Ella Walk in Bath.

Important Safety Instructions Continued



ACCESSIBLE BATHROOMS

WARNING: To prevent stripping the PVC threads, **ONLY** hand tighten the drain elbow. **DO NOT** tighten with tools.







Before Installation

ACCESSIBLE BATHROOMS

Protecting the Bath

Cover and protect the bath shell and fixtures from scratches or other damages during the installation and tests. Remove the access panels when moving the Walk in Bath and always lift the bathtub from the frame (Page #2).

Water Test

Fill tub for a minimum of 20 minutes to test that the Hydro and Air Pumps are functioning properly before final in-wall installation to avoid unnecessary repairs or removal.

Electrical

The unit MUST be connected to a circuit protected by a ground fault circuit interrupter (GFCI) provided and installed by a licensed electrician and tested periodically (refer to instructions provided by GFCI manufacturer). A separate 120 Volt and 30 Amp. GFCI breaker is required. A dedicated line must be run from a breaker to the unit's electrical junction box following your local building and electrical codes. Usually, the black/brown (two) wire is live/hot. The blue/white wire (in the middle) is neutral, and the green wire (bottom) is the ground wire. A licensed electrician for your area is required to install and test the electrical installation process.

DO NOT use any kind of extension cords to power the unit.

Operating the pumps without first filling the bath to above the jets can cause permanent damage to your equipment.

Push the GFCI "test" button into "reset" mode. If the GFCI fails to operate in this manner, there is a ground current flow or a device malfunction, indicating the possibility of electrical shock. If this occurs, turn OFF the power and do not use the bathtub until the source of the problem has been identified and corrected.

Drain and Plumbing




ACCESSIBLE BATHROOMS

Make sure that the drain rough in has been placed at the proper location. The specifications and drawings shown below and on page #7 are for the Ella Deluxe (each model comes with separate specifications, please refer each model's specification). The dual drain can be connected with a "T" or "Y" connection into existing house drain. Proper materials must be used based on local plumbing code requirements.

NOTE: Flexible drains are not permitted in some areas. The customer and their contractor are responsible for using the appropriate solution to meet the current local construction and plumbing code requirements.


NOTE: Deluxe Model Shown

Specifications vary by model, please refer to the drawing that matches the model being installed.

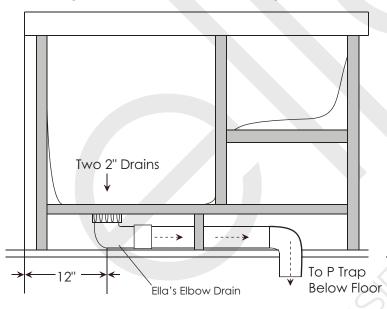



Drain Elbow Options


Two Drain Openers with Overflows

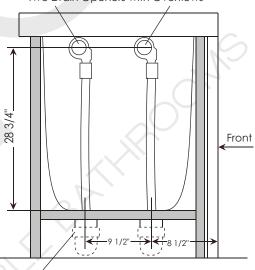

2 1/4" Threaded Connection of 2" Drain for Elbow or Drain Pipe Connection

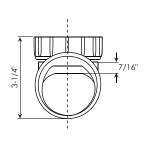

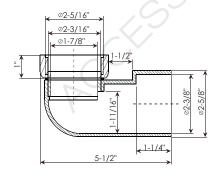



Disclaimer:

In an effort to continually improve our product, specifications and configurations are subject to change without notice. Before ordering or installing, consider future access to essential equipment.




Preparing the Sub-floor

ACCESSIBLE BATHROOMS

Prepare the sub-floor for the drain and ensure that the area is level. The supporting sub-floor must be able to support the total weight of the bathtub, bather and water.

Use a level and make sure that the sub-floor below the tub is leveled. If the floor is not perfectly level, adjust the appropriate leveling legs to re-align the tub to perfect level. It is important that all of the leveling legs are completely supporting the tub (touching the floor with equal weight distribution) and the tub is leveled for the door seal to work properly. If the tub is not perfectly leveled, it could result in water leakage and void the warranty.

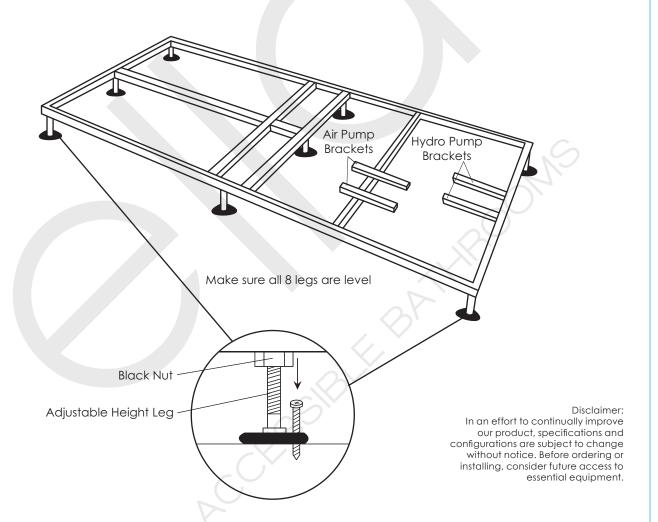

NOTE: Drawing above shows frame layout for Deluxe walk in bath. The Companion, Elite, Petite and Royal frame and drain layouts may very. Please reference appropriate specification drawings for proper drain locations. Adjust the legs and lower the bath to within 1/16th of an inch above the floor or tile. Seal with white silicone or caulking if appropriate. If the sub-floor does not support the total weight of the bath, bather and the water, it can result in warping of the shell, misalignment of the door and/or create leaks and damages to the building structure.

Service Access and Ventilation




ACCESSIBLE BATHROOMS

It is the responsibility of the installer or owner to provide access for service required, per code. Ella is not responsible for any costs related to obtaining access for repair. The owner shall assume responsibility for such costs, and if appropriate, must seek recovery from the installer.

Do not insulate around the tub equipment. The tub, frame and all parts have been engineered to provide the proper ventilation. Any obstructions may cause the pumps or other electrical components to overheat.


Door Seal

Please keep in mind that the door has been closed for an extended period of time throughout shipping and the bathtub has been stored in various temperatures. It is possible for the silicone seal to stick to the frame when stored for extended periods of time. When the bathtub is received, the door seal should be checked for deformations from shipping and re-formed and adjusted where necessary. To restore the door seal, the seal must be released and allowed to relax with the door open. This is done by squeezing the seal with your finger tips and pulling it away from the door frame to regain its flexibility and original form. It is recommended that the door be kept open when not in use to increase the lifetime of the door seal and maintain its flexibility.

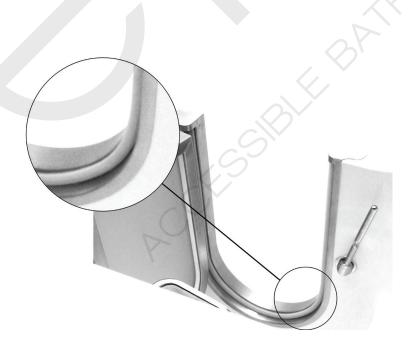




Hydro Massage System Diagram

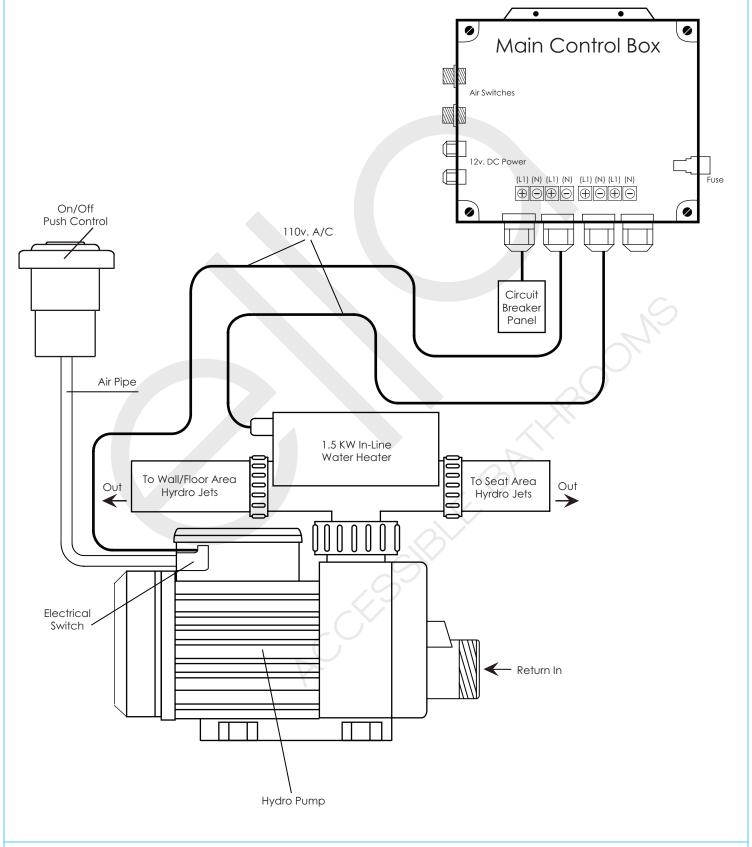

Air Massage System Diagram




ACCESSIBLE BATHROOMS

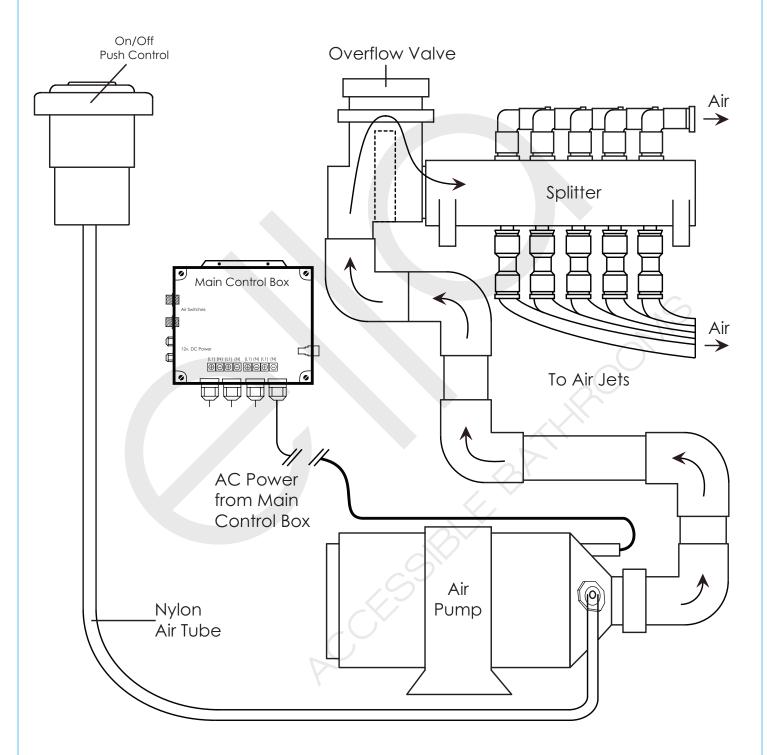

NOTE: Make sure to keep airway splitter in highest position possible.




LED Chromatherapy System Diagram

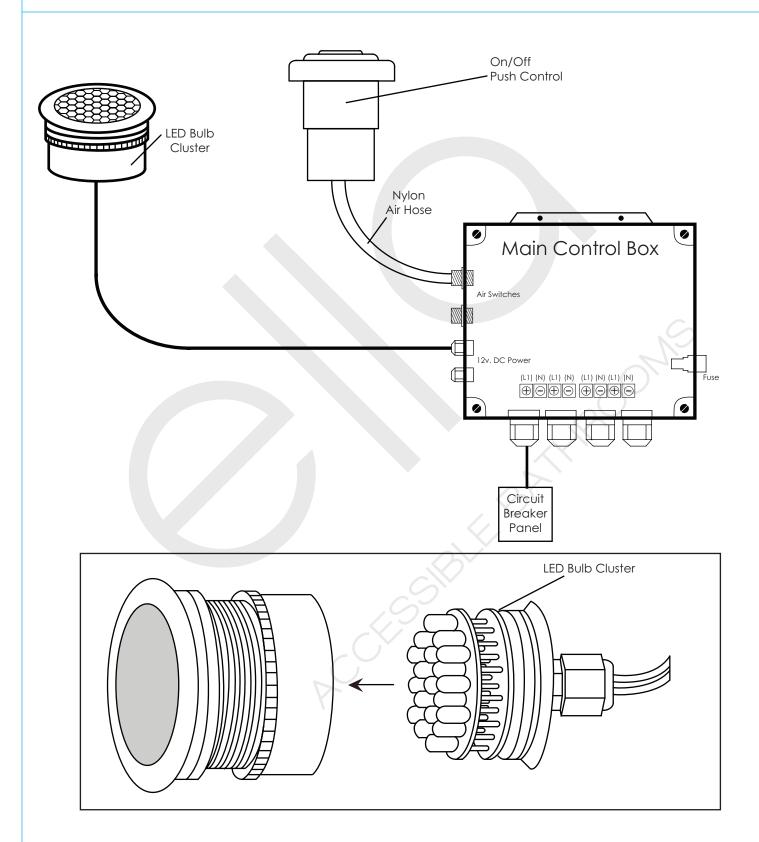


Ozone Generator System Diagram



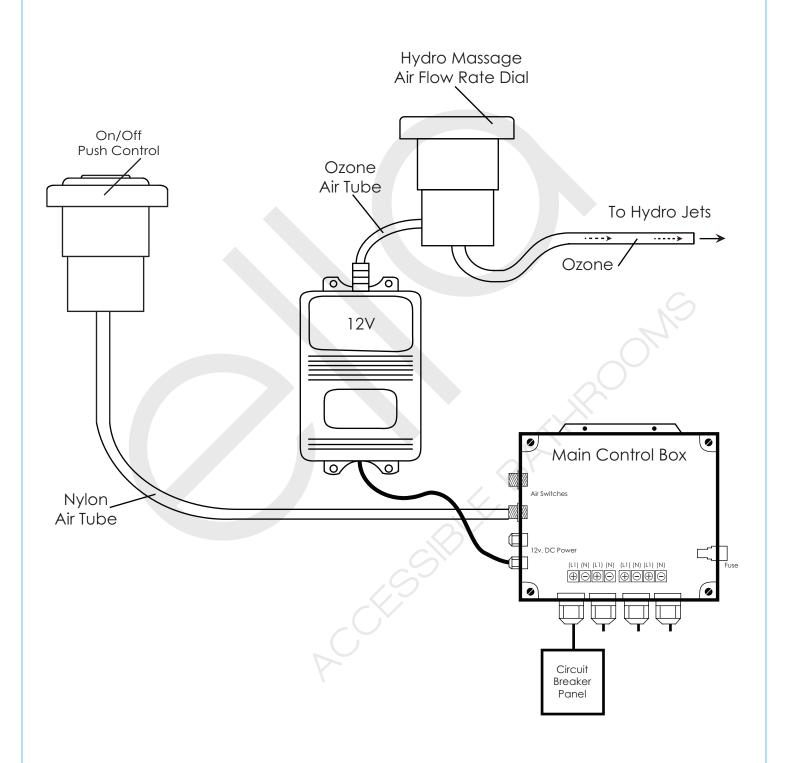



Ella Walk in Bath Electrical System Diagram

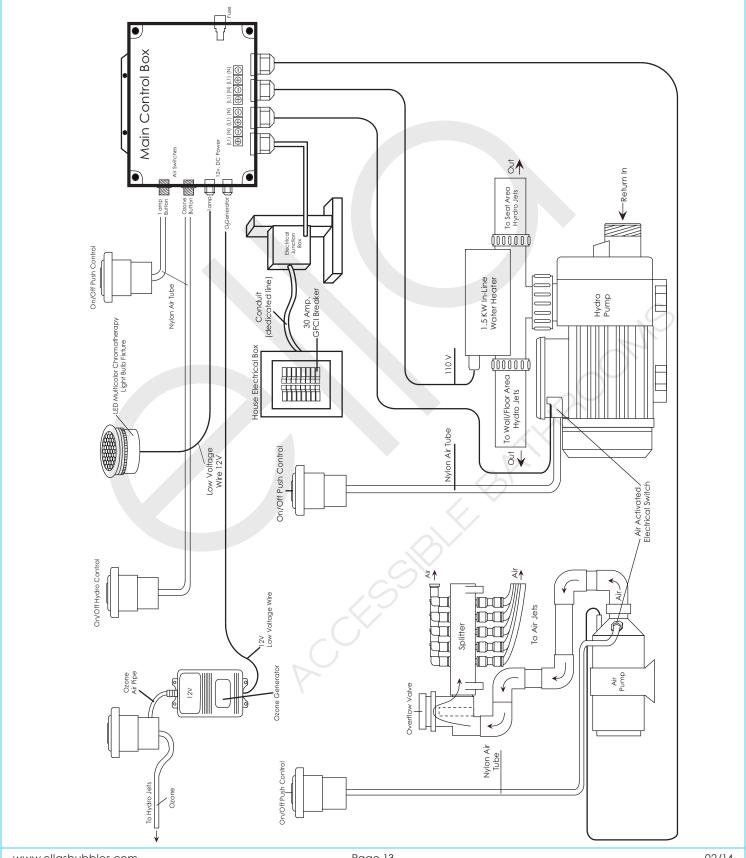


Water Supply Lines



ACCESSIBLE BATHROOMS

Ella Dual Massage Walk in Baths with the Standard Ella Faucet (Thermostatic Control Valve) include two 4 ft. long 1/2" I.P.S. connection flexible water supply lines. Please note: The 5-Piece Fast Fill Roman and 5-Piece Traditional Roman Fauce Sets do not include the I.P.S. connection flexible water supply lines.

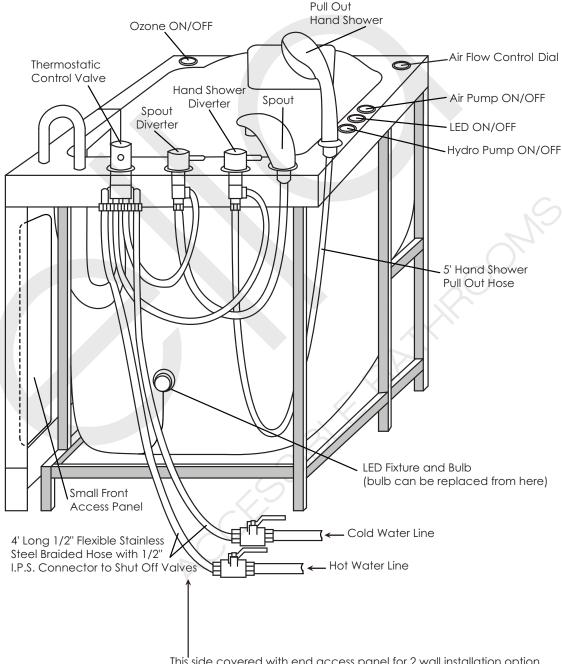

This side covered with end access panel for 2 wall installation option.


NOTE: It is recommended that shut off valves are installed behind the opening and in reach from the small access panel.



ACCESSIBLE BATHROOMS

Installation of Spout

ALWAYS INSTALL SPOUT BEFORE THE WALK IN BATH IS IN PLACE.

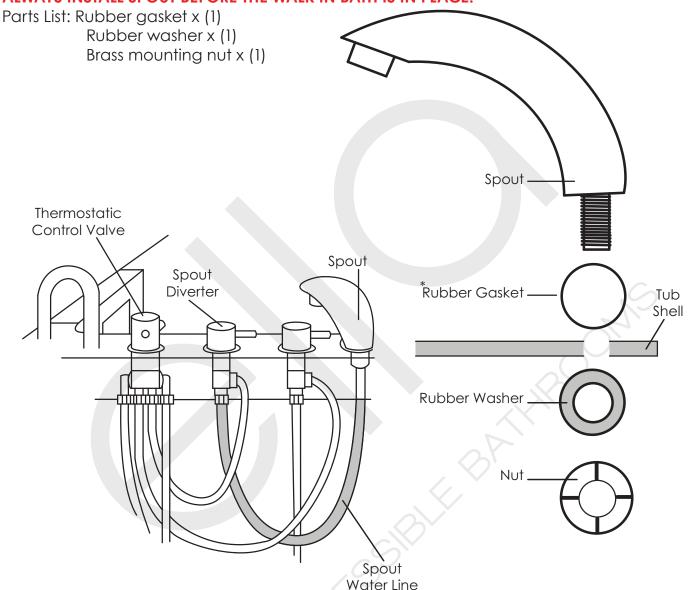

To Install the supplied spout, first place the rubber gasket on the bottom of the spout and make sure it is properly seated in its groove. Put the spout in through the hole in the tub shell (shown in the drawing above). Install the rubber washer and then the brass mounting nut. Locate the water line from the spout diverter and connect it to the threading on the bottom of the spout. Tighten all fittings and check for leaks.


*NOTE: Rubber gasket only comes with the Elite, Royal and Petite models. **Spout must be tightened down prior to installation of tub.**

WARNING: Do not over tighten the water supply line. To tighten properly, it should be hand tight plus about a half a turn.

Installation of Deck Mount Grab Bar



ACCESSIBLE BATHROOMS

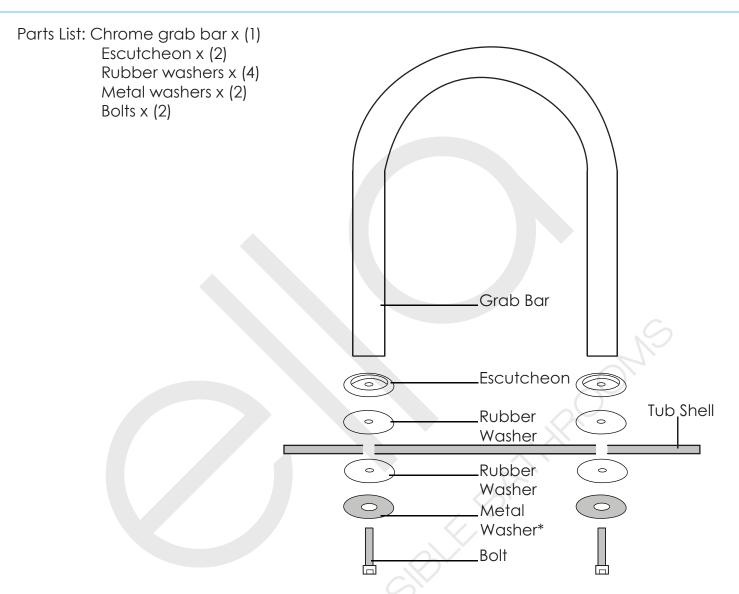

To install the supplied grab bar first locate all the parts needed for installation. See drawing shown above. Ready the bolt assembly by first placing a metal washer onto the bolt followed by a rubber washer. Feed the bolt up through the tub shell and place another rubber washer over the extruded bolt followed by the escutcheon. You may start the threading into the grab bar to hold the assembly loosely in position and then repeat the process for the second bolt. Once the entire assembly is in place, tighten the bolts with the supplied Allen wrench.


WARNING: Under no circumstances install the grab bar without the large metal washer underneath the tub shell. Doing so will leave the tub shell vulnerable to cracking and **void the warranty.**



Installing Extension Kits

ACCESSIBLE BATHROOMS

Deluxe Dimensions: $5\text{"W} \times 29\ 1/2\text{"L} \times 37\text{"H}$ Elite Dimensions: $7\text{"W} \times 29\ 3/4\text{"L} \times 37\ 3/4\text{"H}$ Royal Dimensions: $7\text{"W} \times 31\ 3/4\text{"L} \times 37\ 3/4\text{"H}$ Petite Dimensions: $7\text{"W} \times 27\ 2/4\text{"L} \times 37\ 3/4\text{"H}$

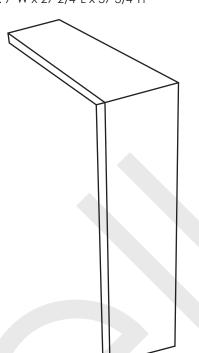

 L" Stainless Steel Brackets
 Qty (3)

 L" Acrylic Bracket
 Qty (1)

 1" x 1/8" Bolts
 Qty (7)

 1" x 1/4" Bolts
 Qty (7)

 1" Screw
 Qty (1)

 1/2" Nuts
 Qty (9)

 3/8" Nuts
 Qty (7)

 Medium Washers
 Qty (14)


 Small Washers
 Qty (14)

 Plastic Washer
 Qty (1)

 Plastic Cap
 Qty (1)



- Install 3 extension support brackets provides in the kit.
- 2. Clamp in place, the extension panel to the walk in tub shell, lining up the facade of top and front.
- 3. Pre-drill (+3/8") slightly wider holes than mounting screws to allow for final adjustment to the panel.
- 4. Mount extension with 7 screws, washers and bolts.
- 5. Apply Silicone or white caulking as needed.

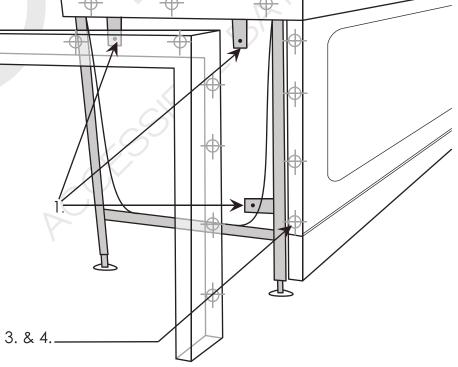


The extension kit can be installed as needed. Opening can be filled as desired.

Finishing Installation



ACCESSIBLE BATHROOMS

After all of the water and electrical testing is completed and all fixtures are checked, the tub can be installed to the surrounding wall or walls. Ella Walk in Baths come with low rise tile flange which allows for two or one wall installations. The extension panel of the bathtub can be installed as needed for 60" openings.

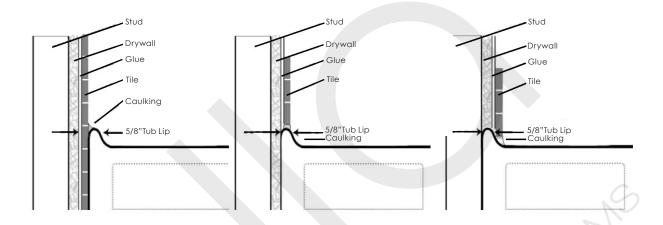

The tub can be finished and tiled over as shown in images. Caulking must be applied to joints as needed after the bathtub is installed.

Threshold Lowering Option

Lowering the threshold is an option that can be chosen during installation. Because your Ella Walk in Bath is set up for easy installation, lowering the threshold requires the drain option to be set up below the floor (Page #6). To lower the Walk in Bath threshold; First, remove the toe kick panel to expose the adjustable leg supports. Adjust the height of the tub while keeping the Walk in Bath plumb level on all four corners. Finish the installation with baseboard.



NOTE: Any alterations or installed additions are the responsibility of the installer. Ella Accessible Bathrooms is not responsible for any damage to the unit or for water damage, which could occur due to improper installation.




Operating Instructions

ACCESSIBLE BATHROOMS

1. Thermostatic Control Valve:

Before turning on the water, please adjust the thermostatic control valve to the desired water temperature. To raise the temperature above the preset 100.4 Fahrenheit, press and hold in the button handle while turning. For hotter water turn counterclockwise. Conversely, turn the valve clockwise for colder water. The thermostatic control valve is pre-set to 100.4 Fahrenheit for your safety.

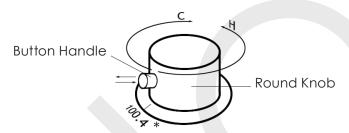

*The button knob stops here at 100.4 Fahrenheit. To adjust to a hotter temperature past 100.4 F, press the button knob in while turning the handle counter clockwise


2. Using the Door:

Entering the walk in bath, the door can be closed and locked with the handle from a seated or standing position. Do not apply any body weight on the door when entering or exiting the walk in bath. The door hinges are well built and are very durable, however leaning on or applying weight on the door may damage and mis-align the door and create leaks. Such damages are not covered by the warranty.

3. Using the Diverter Valves:

Close the door and fill up the bathtub with water by moving the faucet diverter handle in to the ON position.

The faucet and hand shower may be used individually or at the same time.



4. Using the Pull out Hand Held Shower:

To use the pullout hand held shower turn its diverter handle to the ON position. The hand held shower is equipped with a 5 ft. long retractable flex hose. The pressure of the shower can be adjusted by turning the round shower head of the hand unit.

NOTE: All Deluxe and Companion models have a protective lid. Remove lid before using your hand held shower head.

WARNING: Do NOT attach the hand held shower to the wall. This may cause water to leak behind your walk in tub.

Operating Instructions Continued



ACCESSIBLE BATHROOMS

5. Using the Hydro Massage:

To activate and deactivate the hydro massage pump, push the on/off the control button (Page #9). There are two types of hydro jets in your walk in bath; adjustable and non-adjustable types. Simply push on the head of an adjustable jet and turn the head in the desired position. The in-line water heater will activate with the Hydro pump. An air flow rate control dial can be found over the shoulder of the seating area. Turning the knob clockwise will reduce the amount of air introduced into the hydro system. Adjust according to personal preference.

6. Using the Air Massage

To activate and deactivate the air massage pump, push the on/off control button (Page #10). Notice, when adding cool air into the bath water it can lower the water temperature.

7. Using the Ozone Sterilization

To activate and deactivate the ozone sterilization, push the on/off control button (Page #12). Use the ozone as desired.


NOTE: When the other pumps (air and hydro) are off and the Ozone generator is left on, you will be able to hear the buzzing of the Ozone generator, this is normal and only needs to be turned off.



Operating Instructions Continued

8. Using the LED system

The LED Chromatherapy light system may be controlled manually. Push the on/off control button (Page # 11).

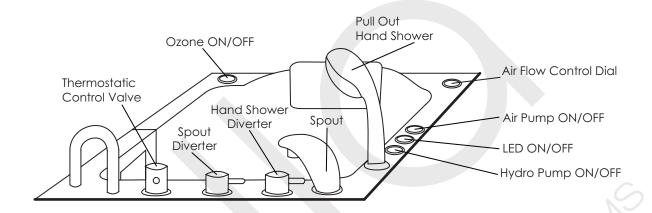

9. Draining the Walk in Bath

To drain your Ella Walk in Bath. Begin by turning OFF the massage systems. Open each of the drains by turning the drain openers clockwise from a down position, upward one half turn until fully open. Remain in the tub until the water has dropped below the door sill.

10. Exiting the Bath

Getting out of your Ella Walk in Bath is as easy as getting in to it. Wait for the water to drain below the door sill. Unlock the door by using the door handle. Fully open the door first then stand up and exit your Ella Walk in Bath.

NOTE: It is recommended to leave the door fully open when not in use to keep the door seal fresh and promote a longer lifetime for the door seal.

Cleaning and Maintenance



CCESSIBLE BATHROOMS

Recommended Acrylic Cleaners

Use only cleaning products whose labels state that they are SAFE for ACRYLIC. Always test products on a small are of skirt before applying to complete bath area.

White Vinegar & Water (Recommended)

- ZEP Professional strength shower tub & tile cleaner
- Dawn dish deteraent
- Rubbermaid commercial strength shower tub & tile cleaner
- Home Depot HDX shower tub & tile cleaner
- Scrub free original soap scum remover
- Kaboom shower tub & tile cleaner with oxy clean
- Simple green all purpose cleaners (any scent)
- Simple green lime scale remover
- Simple green natural bathroom cleaner
- All tilex products
- All Pine-Sol Products
- All Fragranzia Products


DO NOT USE the following on your ACRYLIC Bath System. The use of the following chemicals will cause a dull surface or chemical cracks. The use of these products will VOID YOUR WARRANTY.

- Any product containing ammonia
- Dow scrubbing bubbles
- Abrasive Cleaners
- Aiax
- Comet
- Fantistik
- Soft Scrub
- Mr. Clean
- Nail Polish Remover
- Scouring Pads
- Ammonia
- Tough Act
- Powder or Crystal Drain Cleaners
- Greenworks Bathroom Cleaner
- Scrub Free w/Bleach
- Seventh generation bathroom cleaner - regular
- Magic Eraser

Monthly Maintenance

It is recommended that once a month the tub is flushed. As well, with every month of normal use, clean out the pumps inlet cover (shown right) by unscrewing the cover (counter clockwise) and removing any hair and debris from the cover and housing. Remount the cover in place. Never operate the system with the cover off, as the pump creates a strong suction and damage to the pump or injury may occur.



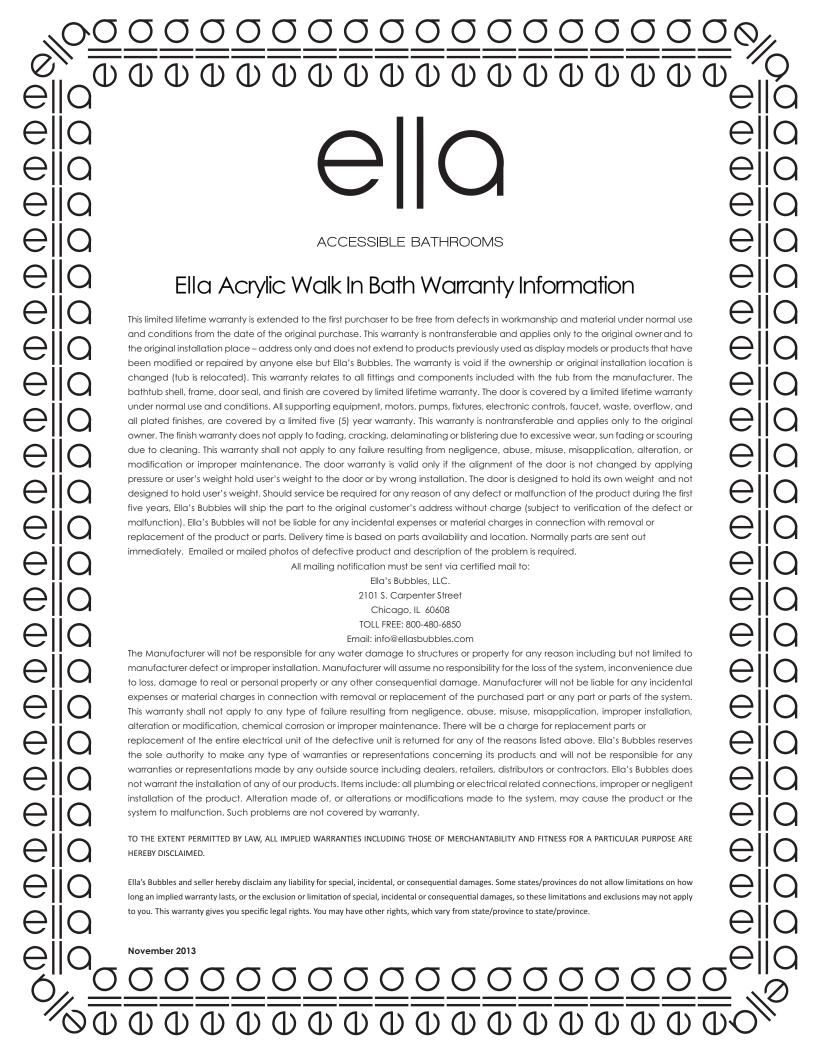



C | O Warranty Activation Form

1 of 2

		INSTALLER	'S INFORMATIO
Name			
Address	City	State	Zip
Telephone	Email		
Date	 Signature		
or emailed, or hard copy i	ller(s)	·	
	tions and all support legs are t		
Tub is installed on a d	edicated 30 Amp GFCI proted	cted circuit using 10) gauge wire
	been properly grounded.		
Door Seal has been c over from constructio	leaned with rubbing alcohol t n.	to remove any dust	or debris left
Temperature Control	Valve operated on both hot a	ınd cold settings.	
Both diverters function	n properly.		
Hand Shower function	ns on all settings without leakir	ng.	
All supply lines have b	peen checked for leaks while I	both diverters are c	on.
Drains open and clos stoppers.	e properly, and the locking nu	ıt has been tighten	ed on both
Door seal is water tigh	nt after tub has been filled for	a minimum of 20 m	ninutes.
•	nimum of 20 Minutes both the and all connections to the pur	•	•
	and the Ozone Sterilization are will make a light humming no	•	. (When the
All drain fittings have	been checked for leaks while	the tub is draining.	
Unit is installed with a	ccess to both plumbing and e	lectrical connectio	ns.

Warranty Activation Form

2 of 2

OWNER'S INFORMATION

ACCESSIBLE BATHROOMS

Name				
Address	City	State	Zip	
Telephone	Email			
Date Signature				
Model:	Serial Number:			
Purchase Date:	Purchase Price:			
Place of Purchase:				
Contact Name:	Phone Number:			

Copy of sales receipt must be included with warranty activation forms.

To activate manufacturer's warranty, please complete both pages and use one of the options below to submit.

Via mail: Ella's Bubbles, LLC.

Warranty Department

2101 S. Carpenter St., Chicago, IL 60608

Via fax: 1-312-666-3551

Via email: warranty@ellasbubbles.com