
SKIRTS | OWNER'S MANUAL


MULTIFIT SKIRT — INSTALLATION


MULTIFIT SKIRT (ADJUSTABLE)


1. PARTS INCLUDED		
1-1	Skirt	
1-2	Toe kick	
1-3	Crossbar	
1-4	LED-cover (Required only for bath with chromotherapy).	

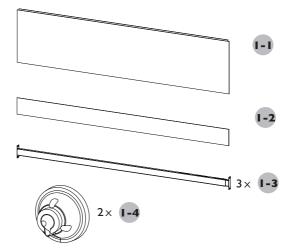

2. INSTALLATION	
2-1	Holding a level against the side of the bath, trace a vertical guideline on both walls.
2-2	Adjust length of the 3 crossbars with the 4 screws at one crossbar end.
2-3	Fasten the 3 crossbars at the indicated dimensions using screws. Upper crossbar is positioned from the bottom of the ledge of the bath, and lower crossbar is positionned from the floor.

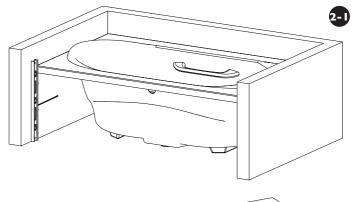

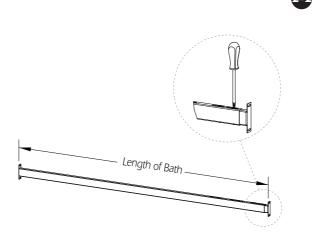


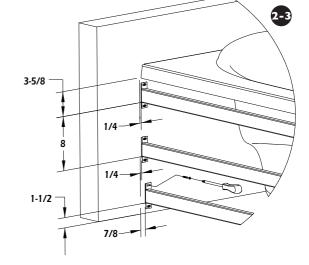



www.bainultra.com

Printed in Canada. Copyright © February 2012 BainUltra Inc. All rights reserved. 45200480 Some products, specifications, and services mentioned in this document are described in pending patent applications or are protected by patents. 4

2. INSTALLATION (CONT'D)		
2-4	Install magnetized toe kick to the lower crossbar.	
2-5	Insert magnetized skirt behind the edge of the bath and install it to the 2 upper crossbars. If needed, unattach magnetized skirt and adjust depth of crossbars for better adjustment.	
2-6	If needed, install LED-covers using silicone or sealant to prevent light from reflecting through the skirt.	

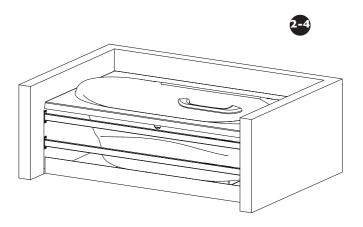

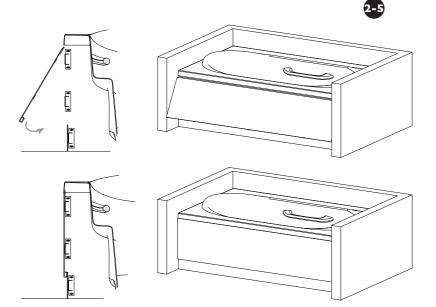

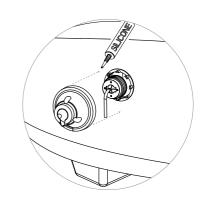

2-6

1 800 463.2187 9 From 8 a.m. to 8 p.m. Monday to Thursday (EST) · From 8 a.m. to 5 p.m. on Friday (EST)

Printed in Canada. Copyright © February 2012 BainUltra Inc. All rights reserved. 45200480 Some products, specifications, and services mentioned in this document are described in pending patent applications or are protected by patents.