

Arqo M[™] Pull Down Kitchen Faucet

KPF-2523

www.kraususa.com I Toll Free: 1.800.775.0703 I © 2018 Kraus USA Inc. I REV. August 27, 2019

Congratulations on the purchase of your new Kraus plumbing fixture!

Please keep the box and packaging materials until your product is completely installed. If you have any questions, require technical assistance or have any problems with your product:



DO NOT RETURN TO STORE

Please contact our Customer Service Team 1-800-775-0703 / customerservice@kraususa.com

Have the model number available and retain a copy of your receipt with purchase date for reference.

If for any reason this product does not meet your expectations, please be sure to repack this product in the original box and packaging material to avoid damage during transit.


Prior to Installation:

- Make sure you have all necessary parts by checking the diagram and parts list. If any part is missing or damaged, please contact Kraus Customer Service at 800-775-0703 for a replacement.
- Turn off the hot and cold water supply at the angle stops and turn on the old faucet to release any built up pressure. Remove existing faucet. Clean sink or countertop to remove any debris, plumber's putty, or silicone.
- Flush angle stops to release any debris prior to installation.
- Pre-drilled hole size requirement: 1 3/8" (min) 1 1/2" (max)
- Max countertop thickness: 2 1/2"
- 1 or 3 hole installation

For technical assistance or replacement parts, please contact Kraus Customer Service and one of our representatives will be happy to help:

Toll-Free: 800-775-0703 or Customerservice@kraususa.com

Tools Required

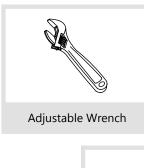








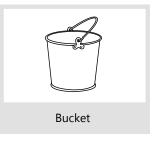



Diagram and Parts List

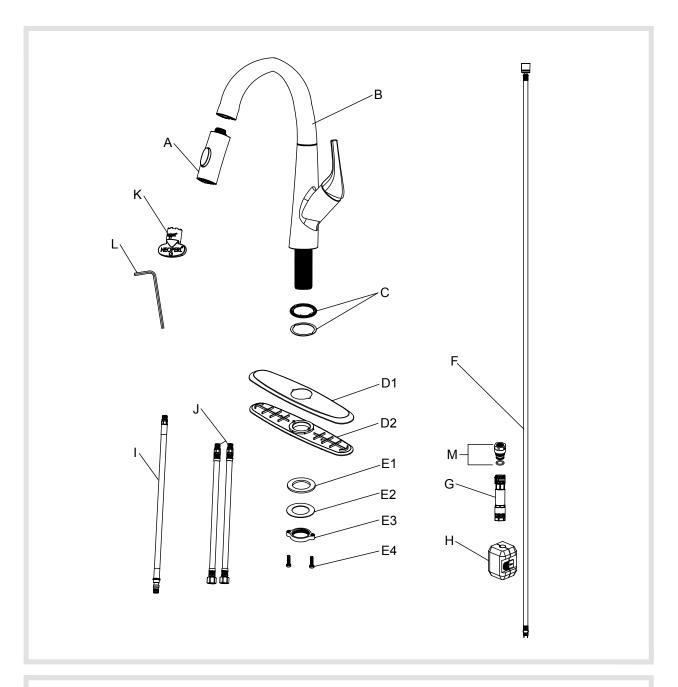

- A. Spray Head
- B. Faucet Body
- C. Base O-Ring
- D. Deck Plate Assembly
- E. Mounting Hardware
- E1. Rubber Washer
- E2. Metal Washer

- E3. Mounting Nut
- E4. Mounting Screws
- F. Spray Hose
- G. EZ-Connect
- H. EZ-Weight
- I. Supply Hose
- J. Hot & Cold Waterlines


- K. Aerator Key
- L. Hex Wrench
- M. 2.2 GPM Flow Restrictor (WHITE)

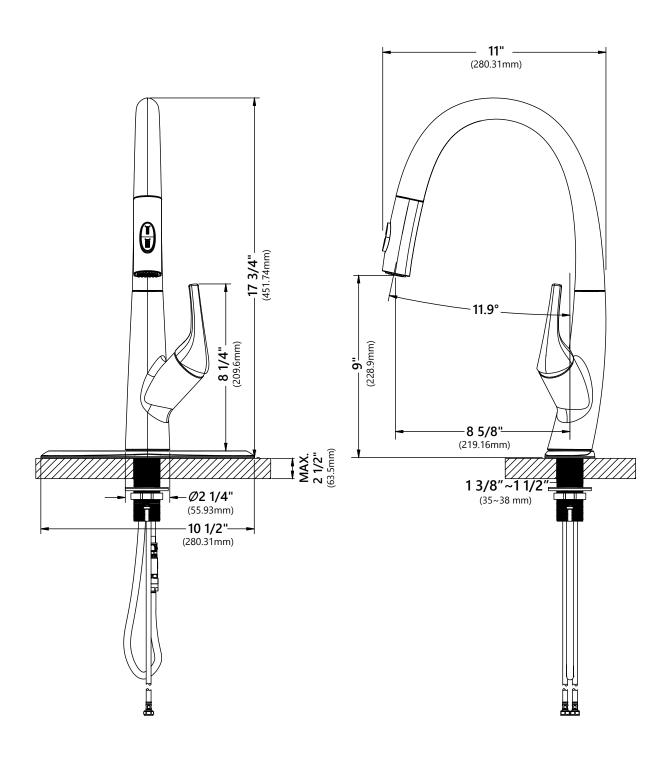

Installer Tip:


Shut off main water supply before installing new faucet.

Step 1. Remove mounting hardware

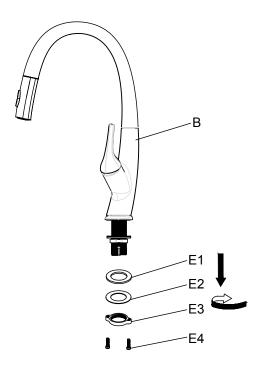

Shut off the water supply. Remove the old faucet. Clean the mounting surface. Remove mounting hardware (E) from faucet body (B).


Step 2A. Install the faucet assembly (with deckplate)

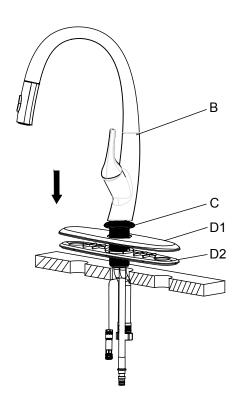

Insert the faucet assembly (B) through the hole in the deck plate assembly (D).


NOTE: Skip this step if installing without deckplate.

Step 2B. Install the faucet assembly (without deckplate)

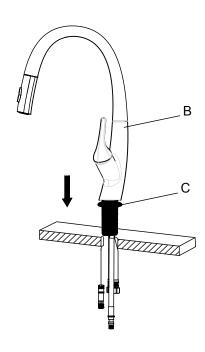


For single-hole installation, deck plate assembly (D) and silicone sealant are NOT required.

Step 3. Secure the faucet assembly

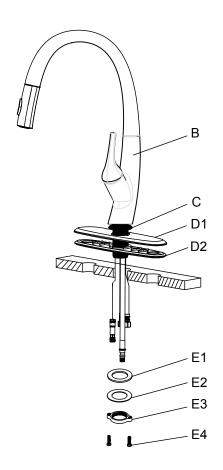


Insert faucet body (B) into hole on countertop or deck plate assembly (D) with base o-ring (C) attached. Attach mounting hardware (E).

Step 4. Secure the faucet assembly

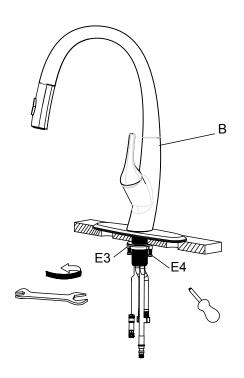


Adjust faucet body (B). Tighten mounting nut (E3) with wrench and mounting screws (E4) with Phillips head screwdriver.

Step 5. Attach spray hose and counterweight

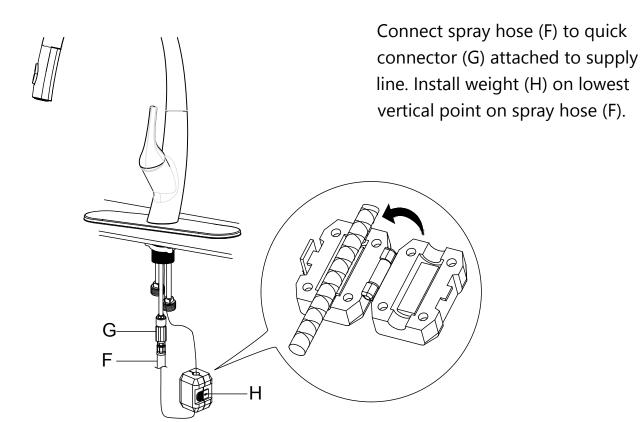


Step 6. Connect waterlines

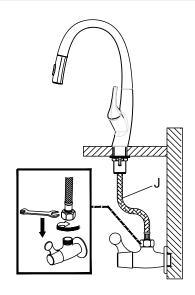

Thread hot & cold waterlines (J) onto angle stops. Tighten with adjustable wrench until snug. Turn on the angle stops and check for leaks.


(DO NOT TURN FAUCET ON)

Step 7. Flush spray hose

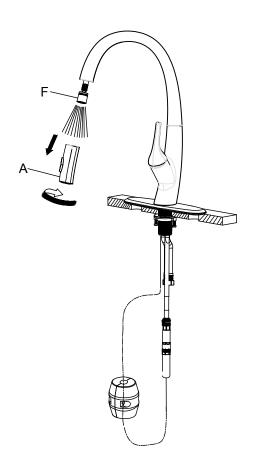


Remove spray head (A). Hold tip of spray hose (F). Turn faucet on for 1 minute to flush any debris.

Step 8. Attach spray head

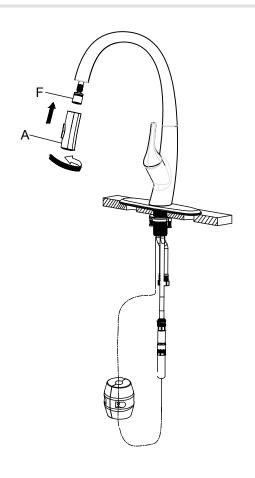


Attach spray head (A) to spray hose (F).

Step 9. Check spray head

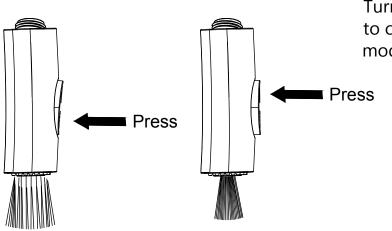

Turn faucet on. Press rocker switch to check if spray head (A) switches modes properly.

Step 10. Flow regulator replacement

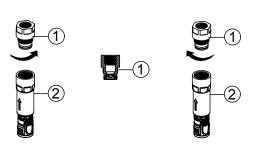


This faucet ships with a 1.8 GPM flow restrictor installed. An optional 2.2 GPM flow restrictor is also included in the box.

To switch the flow rate of the faucet:

- 1. Disassemble the quick connect assembly by separating the connector (1) (Black) and quick connect (2) (White) using an adjustable wrench.
- 2. Replace 1.8 GPM connector (Black) with the 2.2 GPM connector (White).
- 3. Reinstall the quick connect assembly.

NOTE: In compliance with CEC standards, this faucet is designed with a 1.8 gpm flow rate. At your discretion, you may modify the product with the included 2.2 gpm restrictor. Please note that doing so will remove the capability of this product to meet specific low-flow standards. Kraus is not liable for any alterations made to the product post-sale, and highly advises that you consult with your local or statewide plumbing enforcement agency prior to any modification.

Replacement Parts

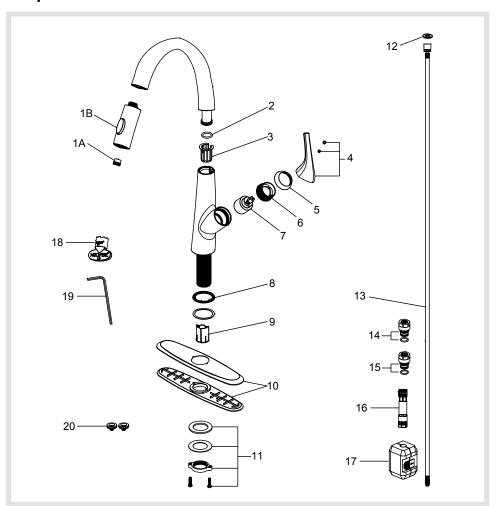

- *Denotes faucet component color options:
- SFS Spot Free Stainless Steel
- MB Matte Black
- BL Black
- WH White

Replacement Parts List	Finish/ Color	Part #	Replacement Parts List	Finish/ Color	Part #
1A. Aerator		KP26000	10. Escutcheon	SFS,MB*	KP26058
1B. Spray Head	SFS,MB*	KP26001	11. Mounting Hardware		KP26054
2. O-ring		KP26002	12. Washer		KP26053
3. Spout Clip		KP26003	13. Spray Hose		KP26019
4. Handle Assembly	SFS,MB*	KP26057	14. 2.2GPM Flow Restrictor	WH*	KP26055
5. Cartridge Cover	SFS,MB*	KP26007	15. 1.8GPM Flow Restrictor	BL*	KP26056
6. Locking Nut		KP26008	16. EZ-Connect		KP26020
7. Cartridge		KP26009	17. EZ-Weight		KP26059
8. Base O-ring		KP26022	18. Aerator Key		KP26052
9. Hose Clip		KP26010	19. Hex Wrench		KP26027
			20. Filter Washers		KP26060

Trouble-Shooting

If you have followed the instructions carefully and your faucet still does not work properly, take the following corrective steps:

CAUSE	ACTION		
Locking nut has come loose	Remove cap. Loosen set screw with a hex wrench. Remove the handle and unscrew cartridge cover by hand. Tighten locking nut with an adjustable wrench.		
Cartridge may be defective	Remove cap. Loosen set screw with a hex wrench. Remove the handle and unscrew cartridge cover by hand. Unscrew the locking nut with an adjustable wrench. Remove ceramic disc cartridge. Check for cracks.		
Spray head may be loose, or washer may not be seated correctly in hose	Tighten spray head by hand until snug. Make sure washer is seated correctly.		
EZ-Connect (21) may be clogged with debris	Remove EZ-Connect from supply hose and spray hose. Soak quick connect in vinegar & warm water 50/50 solution for 5 - 10 minutes.		
Weight may be installed incorrectly	Readjust weight on hose.		
	Cartridge may be defective Spray head may be loose, or washer may not be seated correctly in hose EZ-Connect (21) may be clogged with debris		

Care & Maintenance

To keep the product clean & shining, follow the steps below:

- 1. Rinse with clean water & dry with a soft cloth
- 2. Do not clean with soaps, acid, polish, abrasives or harsh cleaners
- 3. Do not use cloth with a coarse surface
- 4. Unscrew the aerator and clean when necessary

Codes/Standards Applicable:







ASME A112.18.1 1.8GPM 6.8L/min maximum

FAUCET WARRANTY

Kraus products are manufactured and tested to the highest quality standards by Kraus USA Inc. ("Kraus").

Kraus extends this warranty to the original purchaser for personal household use of the "Faucet" in its original location. The warranty is non-transferable.

Kraus warrants the structure and finish of the product to be free from defects in material and workmanship under normal usage for the lifetime of the product. The warranty commences from the initial date of purchase by the owner or trade professional, from an authorized Kraus dealer, through the lifetime of the original owner or end-user.

Kraus warrants the mechanical components such as but not limited to sprayhead assembly (includes engine, aerators, structure, restrictors, back flow preventers, sprayer hoses, braided supply line hoses which encompasses nylon, silicon and stainless steel,etc) of the product to be free from defects in material and workmanship under normal usage for a period of one (1) year. The warranty commences from the initial date of purchase by the owner or trade professional, from an authorized Kraus dealer, through the one (1) year term of the original owner or end-user.

Kraus warrants the mechanical component (cartridge) of the product to be free from defects in material and workmanship under normal usage for a period of five (5) years. The warranty commences from the initial date of purchase by the owner or trade professional, from an authorized Kraus dealer, through the five (5) year term of the original owner or end-user.

Any product reported to the authorized dealer or to Kraus as being defective within the warranty period will be repaired or replaced with a product of equal value at the option of Kraus. This warranty extends to the original owner or end-user, and is not transferable to a subsequent owner.

RESTRICTIONS

This warranty does not cover antediluvian, discontinued, or display products, whether such items are purchased at discount outlets, unauthorized dealers, and/or sold on clearance.

This warranty does not cover instances of negligence, misuse, abuse, improper installation, carelessness, accident, hard water or mineral deposits, exposure to corrosive materials, misapplication, damages caused by improper maintenance, alteration of the product, or failure to follow care or installation instructions enclosed with your product. Avoid using abrasive cleaners such as powders, bleach, ammonia, alcohol, or chlorine. Avoid using abrasive pads, steel wool, or wire brushes, as these will damage and wear down the finish.

This warranty does not apply to Products that have not been installed or operated in accordance with instructions supplied by Kraus and all applicable rules, regulations, and legislation pertaining to such installations.

This warranty does not apply unless the Kraus product is installed by a fully insured and licensed trade professional. Kraus insists that such professionals have experience in the installation of bathroom and kitchen manufactured goods.

This warranty does not cover labor charges or costs of removal and reinstallation of said product. This warranty does not allow recovery of incidental or consequential damages, such as loss of use, delay, property damage, or other consequential damages, and Kraus accepts no liability for such damages.

This warranty does not cover Marine or Outdoor Installation.

Except as otherwise provided above, Kraus makes no warranties, expressed or implied, including warranties of merchantability and fitness for a particular purpose, or compliance with any code.

Shipping charges will be covered for the first (1) year of the warranted replacement part or product (HI, AK, and Puerto Rico shipping charges may apply). International shipping fees are not included.

COMMERCIAL WARRANTY

Kraus extends the above warranty for a period of one (1) year to purchasers of products for industrial, commercial, and business use.

All incidental or consequential damages are specifically excluded. No additional warranties, express or implied, are given, including but not limited to any implied warranty of merchantability or fitness for a particular purpose.

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

KRAUS USA has the right to change, modify, and/or update the warranty policy at any time. For the latest, most up to date comprehensive warranty, go to www.kraususa.com/warranty

If you are a homeowner please contact a Kraus Customer Service Representative at:

Kraus USA, Inc.
12 Harbor Park Drive
Port Washington, NY 11050
Toll-free 800-775-0703
Customerservice@kraususa.com

If you are a plumbing contractor or trade professional please contact a Kraus Pro Representative at:

Kraus USA, Inc. 12 Harbor Park Drive Port Washington, NY 11050 516-801-8955 Proservice@kraususa.com

If you are an Authorized Partner please contact a Partner Support Representative at:

Kraus USA, Inc.
12 Harbor Park Drive
Port Washington, NY 11050
516-801-8954
Partnersupport@kraususa.com

In requesting warranty service, please be ready to provide:

- 1. Proof of purchase.
- 2. A description of the problem.

Download the Kraus Care & Maintenance Guide at:

http://www.kraususa.com/maintenance

IMPORTANT

Register Your Kraus Product

Activate Your Warranty

Access Premium Customer Support

Get Product Information

REGISTER TODAY

http://www.kraususa.com/registration



