



Pressure Balance Bath or Shower Trim and Rough With Diverter

Michael Berman Bath

MB1939LM (Metal Lever)
MB1939XM (Cross Handle)

FEATURES


- Pressure balanced concealed bath and shower mixer trim for R2014D rough valve with volume and temperature control
- Complete with plate, escutcheon, diverter, and handle
- Components made of brass
- Rotate handle clockwise for hot, counterclockwise for cold
- Move handle up for on, down for off
- MUST order R2014D rough to complete


COLORS/FINISHES

- Polished Chrome
- Polished Nickel
- Satin Nickel
- Tuscan Brass

WARRANTY

- Limited Lifetime*
- * No Warranty on Tuscan Brass Finish (TCB)

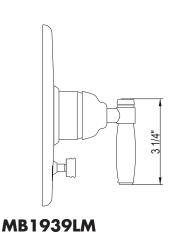

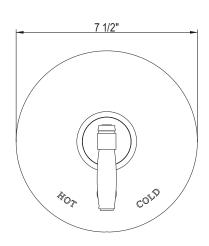






Installation Instructions

MB1938 & MB1939 Pressure Balance Trim Installation Instructions

MB1938 Pressure Balance trim without diverter/ MB1939 Pressure Balance Trim with diverter


MB1939 Pressure Balance Trim with Diverter breakdown shown below

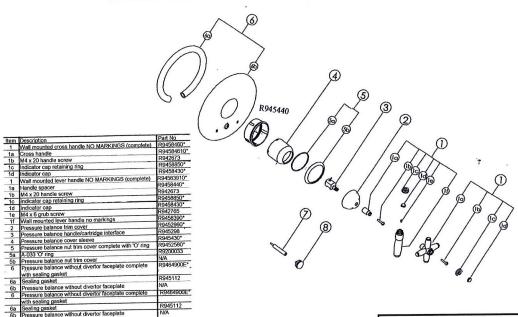

Trim Parts Instructions:

- Mount Sealing Gasket (6a) into Faceplate (6b)
- Thread on Diverter Rod (7) if applicable
- Remove faceplate nut (R945440) from valve and install faceplate (6b)
- Thread on faceplate nut (R945440)
 - Please note: faceplate nut is provided on the rough valve not with the trim
- Use Cover Sleeve (4) as a wrench to tighten the faceplate nut into place
- SlideTrim Ring (5) onto Cover Sleeve (4) to hide the edge of the Faceplate nut (R945440)

 Please note: O-ring (5a) is installed on the inner diameter of the Trim Ring (5b)
- Install Cartridge Interface (3) onto stem of cartridge Use of 2MM Allen key is needed
- Slip Trim cover (2) against cartridge interface (3)
- Install Handle Spacer (1a) and tighten screw (1b)
- Install lever or cross handle onto Handle Spacer (1a)
 - Use of 2MM Allen key is needed
- Thread on Diverter button (8)
- Test. Adjust if necessary.
- 3/8" Extension Nut available; part # R945440/2
- Extended stem available; part # 30134

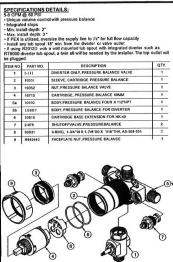

pg. 1



Installation Instructions

GUARANTEE TO THE CONSUMER

WARRANTY

ROHLLLC warrants this product to be free from defects in materials or workmanship for as long as the original consumer purchaser owns their home.

ROHLLLC will provide free of charge, at its option, replacement part(s) or product (or a comparable alternative product) to replace those which have proven defective in materials or workmanship. We will not assume liability for labor expended or damages accruing from the use of material purchased from us. If material is defective, the limit of damage is the price of the defective material.

Proof of purchase (original sales receipt) from the original consumer purchaser must be made available to ROHLLLC for all warranty claims. The warranty is not transferable and is extended solely to the original purchaser of the product.

WARRANTY EXCLUSION

This warranty is for normal domestic use only and excludes defect or injury caused by or resulting from misuse, abuse or neglect, accidental damage or improper installation. The lifetime limited warranty does not apply to replacement of components where damage is caused by normal wear and tear.

WARRANTY WILL BE INVALID IF:

- A. The product has not been correctly installed (whether by a plumber, contractor, service provider or member of the purchaser's household) in accordance with the manufacturer's instructions.
- B. The surface finish of the product has been damaged by use of unsuitable cleaning agents or improper materials, i.e. damage by agents containing acidic, corrosive, abrasive or alcohol-based substances or through scouring the surface by abrasive cloths.
- C. Damage has occurred to component parts due to foreign materials in the water supply (e.g. stones, metal shavings). All water lines must be flushed clear of all debris prior to installing the product. It is strongly recommended that in areas where foreign materials may be present in the water supply, an inline filter be fitted on both the Hot and Cold inlets. This will ensure your warranty remains valid.
- D. The product has been exposed to excessive high water temperature (above 80° Celsius or 175° Fahrenheit).

PARTS ONLY WARRANTY

This warranty does not cover labor charges incurred and / or damage sustained in installation, repair or replacement, nor incidental or consequential damages.