

INSTALLATION INSTRUCTIONS

Contempo II Wall Mounted Accessories

Part #'s: 3501-RH, 3501-DRH, 3501-TR, 3501-TH, 3501-SD, 3501-3VTP, 3501-LTP, 3501-STP, 3501-DBTP, 3501-TB-18, 3501-TB-24, 3501-GS, 3501-GSW, 3501-HR



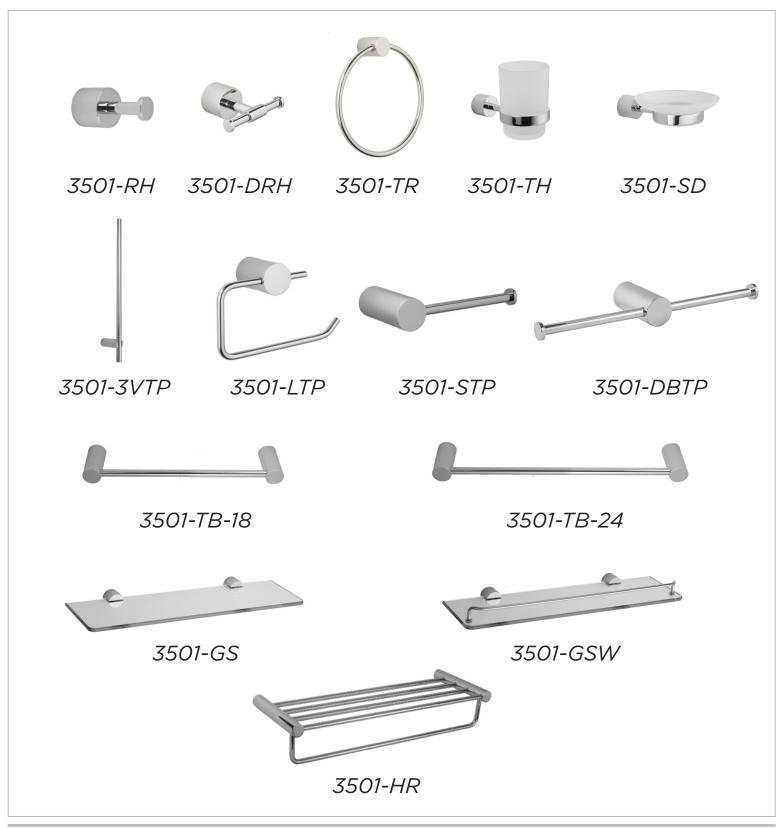

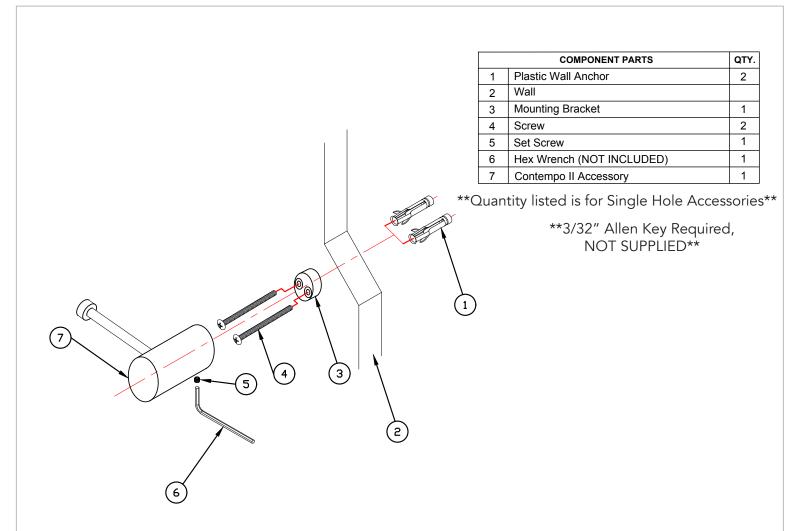

Single Hole Accesories Installation (3501-RH, 3501-DRH, 3501-TR, 3501-TH, 3501-SD, 3501-LTP, 3501-STP, 3501-DBTP)


- 1. Determine desired location of accessory.
- 2. Remove mounting bracket from accessory using 3/32" allen wrench (Not supplied). Place set screw in secure location.
- 3. Drill ¼" hole and insert plastic anchors in wall.
- 4. Insert screw through mounting base and HAND tighten, ensuring set screw cavity is on bottom.
- 5. Place accessory over mounting base and secure with set screw. Correct install will have set screw flush with accessory.

Double Hole Accessories Installation (3501-TB-18, 3501-TB-24, 3501-GS, 3501-GSW, 3501-HR)

- 1. Determine desired location of accessory.
- 2. Using level and pencil, draw level line length of towel bar/glass shelf.
- 3. Measure center to center of holes in mounting bracket while mounting brackets are in place. And mark location on wall.
- 4. Drill ¼" hole and insert plastic anchors in wall.
- 5. Remove mounting brackets from accessory using 3/32" allen wrench (Not supplied). Place set screws in secure location.
- 6. Insert screws through mounting brackets and HAND tighten, ensuring set screw cavities are level and on bottom.
- 7. Place accessory over mounting bases and secure with set screws. Correct install will have set screws flush with accessory.


JACLO INDUSTRIES | 129 Dermody Street Cranford, NJ 07016 **P** 908.653.4433 | **F** 908.653.1717

3501-3VTP INSTALL ONLY

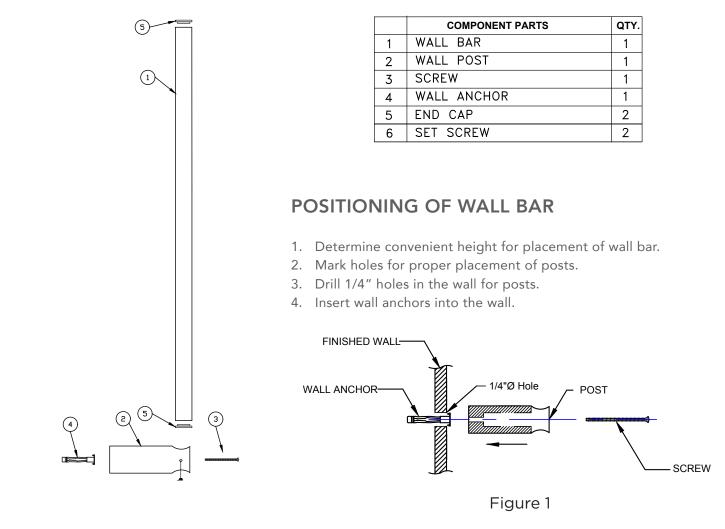

PREPARING FOR INSTALLATION

- 1. Fasten bottom wall post by putting screw through post and securing it to the bottom wall anchor. (Fig. 1)
- 2. Remove end caps from wall bar and put in safe/clean location. Place O-rings in caps if not pre-installed.
- 3. Slide wall bar through the top of the bottom post going below the top wall anchor. (Fig. 2)
- 4. Tighten set screw. (Fig. 3)
- 5. Replace end caps onto bar. (Fig. 4)

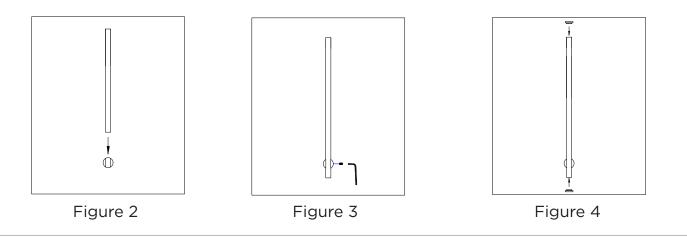

To learn more about JACLO's warranty, please visit **jaclo.com**