MODEL: 618125 INSTALLATION SHEET Accessories

MATERIALS NEEDED:

PHILLIPS SCREWDRIVER LEVELING TOOL DRILL DRYWALL SAW

WOOD SCREWS HOLLOW WALL ANCHORS STUD FINDER

Step 1: Using a pencil and a level, draw the perimeter of the backside of the cabinet in the desired wall location.

See Figure 1.

Step 2: Cut a hole along the drawn perimeter using the appropriate tools.

See Figure 2.

ROUGH OPENING SIZE: 21-11/16"(55.1cm) W 29-3/4"(75.5cm) H


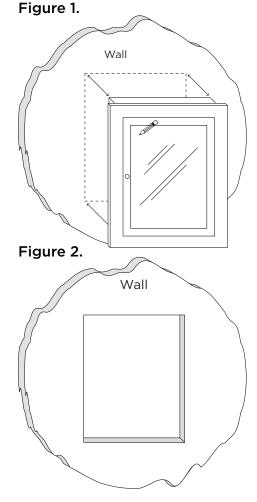


Figure 3.

Step 3: Create a frame using frame studs and frame blocks that will fit the width and height of the backside of your medicine cabinet

See Figure 3.

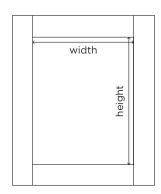

MODEL: 618125 INSTALLATION SHEET Accessories

Step 4: Carefully complete the frame with studs and frame blocks inside the cutout, making sure the edges align.

See Figure 4.


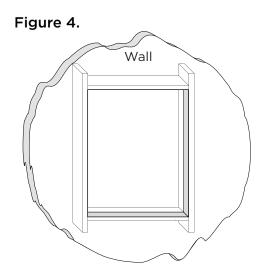


Figure 5.

Step 5: Place an appropriate amount of wood glue on the inner sides of the frame. Position the cabinet into the cutout and into the frame.

See Figure 5.

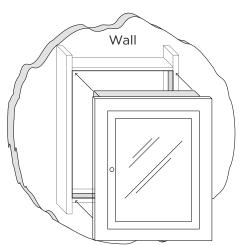

Step 6: The finished installation should have the medicine cabinet front concealing the edges of your wall cutout.

See Figure 6.

