artos
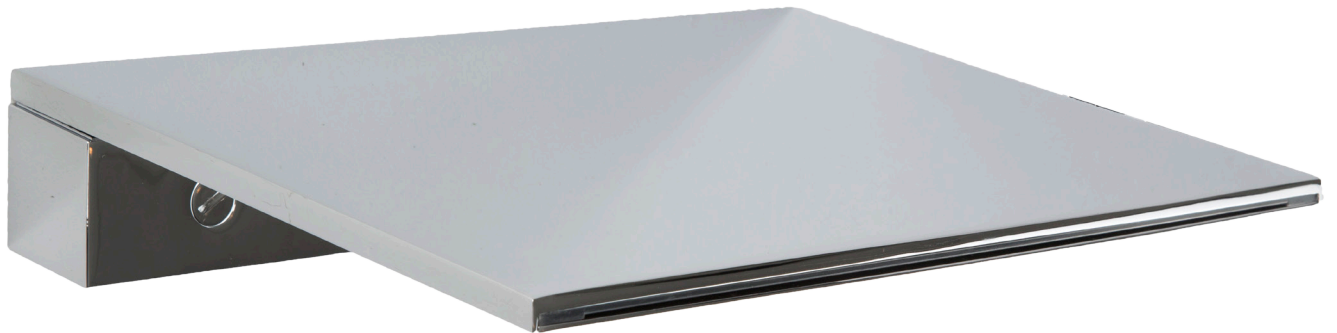
BRUSHED NICKEL(BN)

CHROME(CH)   BLACK(BK)

artos

F402-4

wall mount tub filler squ

OPERATING PRESSURE
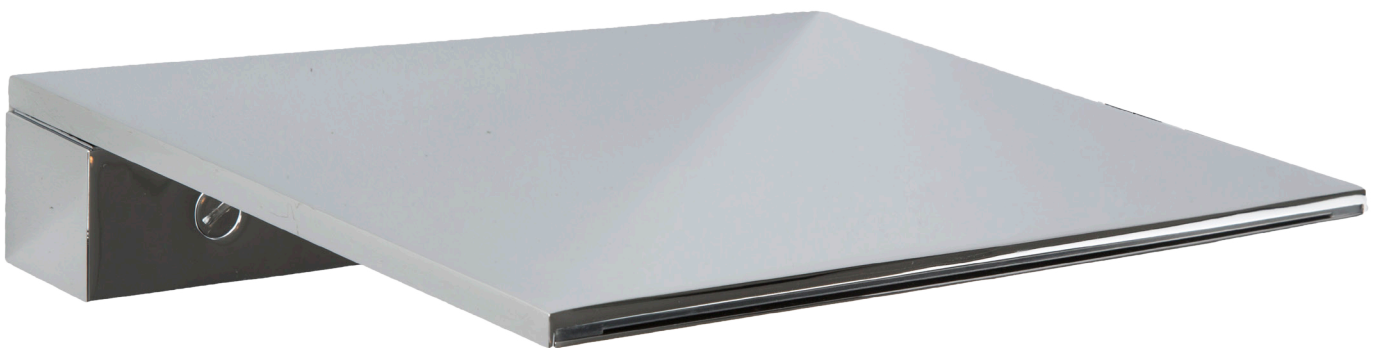Minimum: 15 psi
Maximum: 75 psi
Above 90psi it may be necessary to install a pressure reducer

OPERATING TEMPATURE
Maximum: 176°

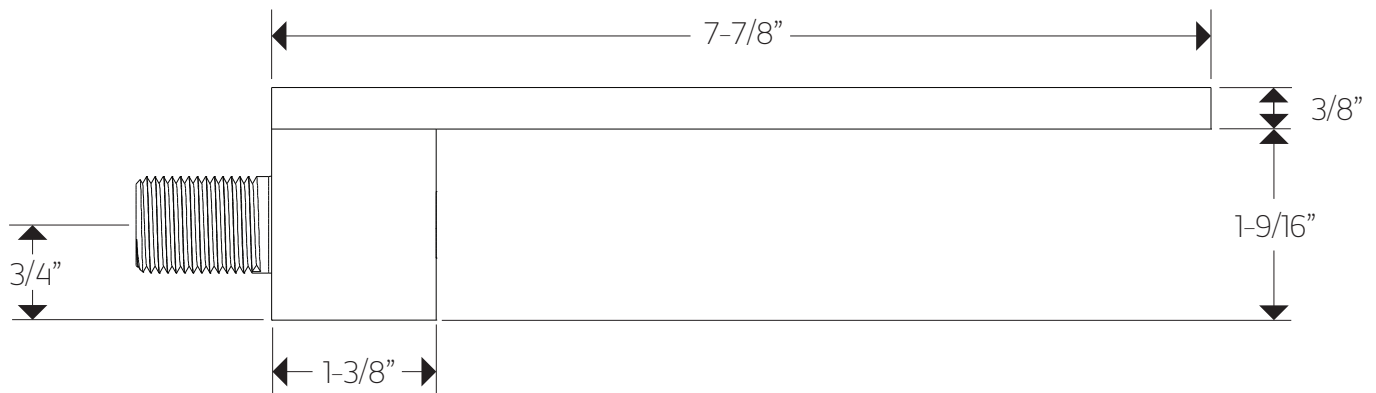**INLET/OUTLET**
1/2" Male NPT- Wall Connections

artos

F402-4
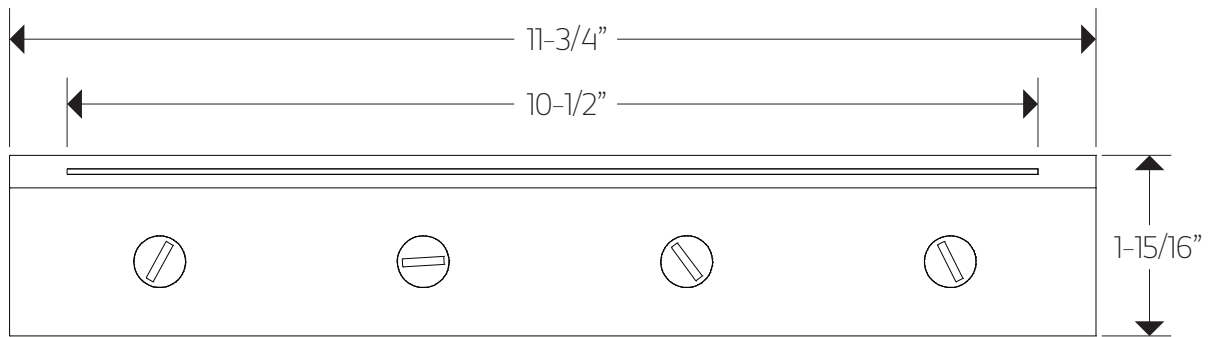
wall mount tub filler squ

11-3/4"

10-1/2"

1-15/16"

7-7/8"

3/8"

1-9/16"

3/4"

1-3/8"

artos

F402-4

wall mount tub filler squ

STEP 1

SUGGESTED MINIMUM 2"

1-3/8" DIAMETER THROUGH FINISHED WALL

MIXED WATER FROM CONTROL

STEP 2

1-3/8" DIAMETER THROUGH FINISHED WALL

MIXED WATER FROM CONTROL

STEP 3

10 mm

STEP 4

MIN= 3/4"
MAX= 1"
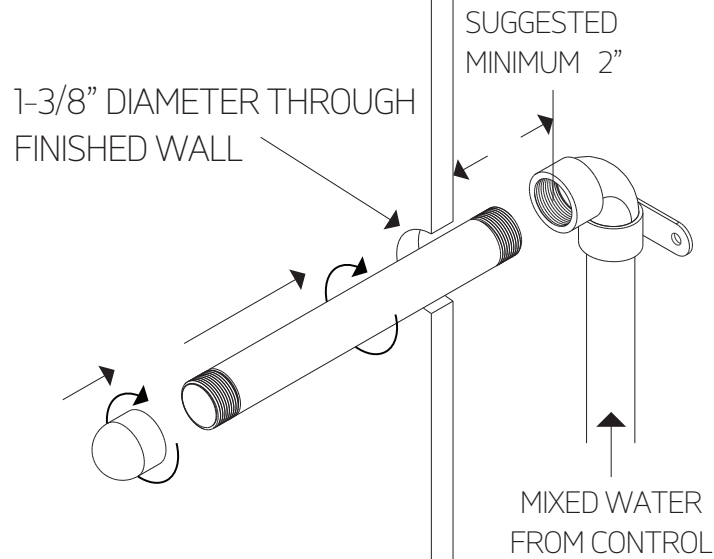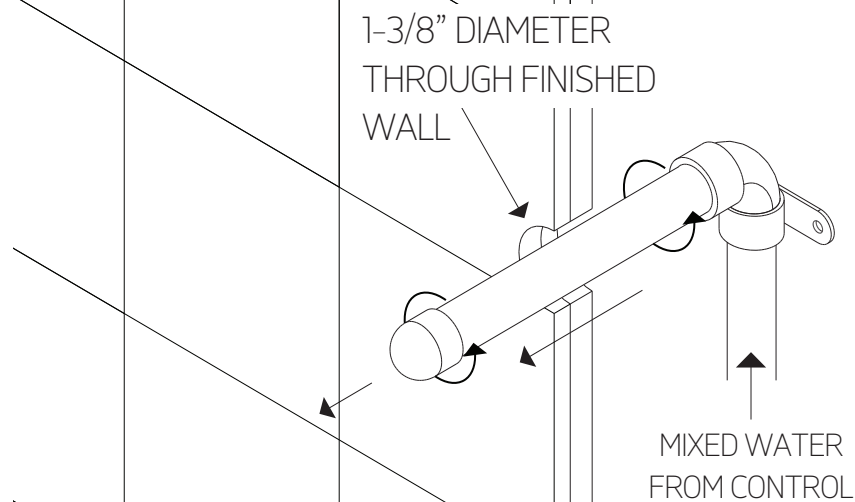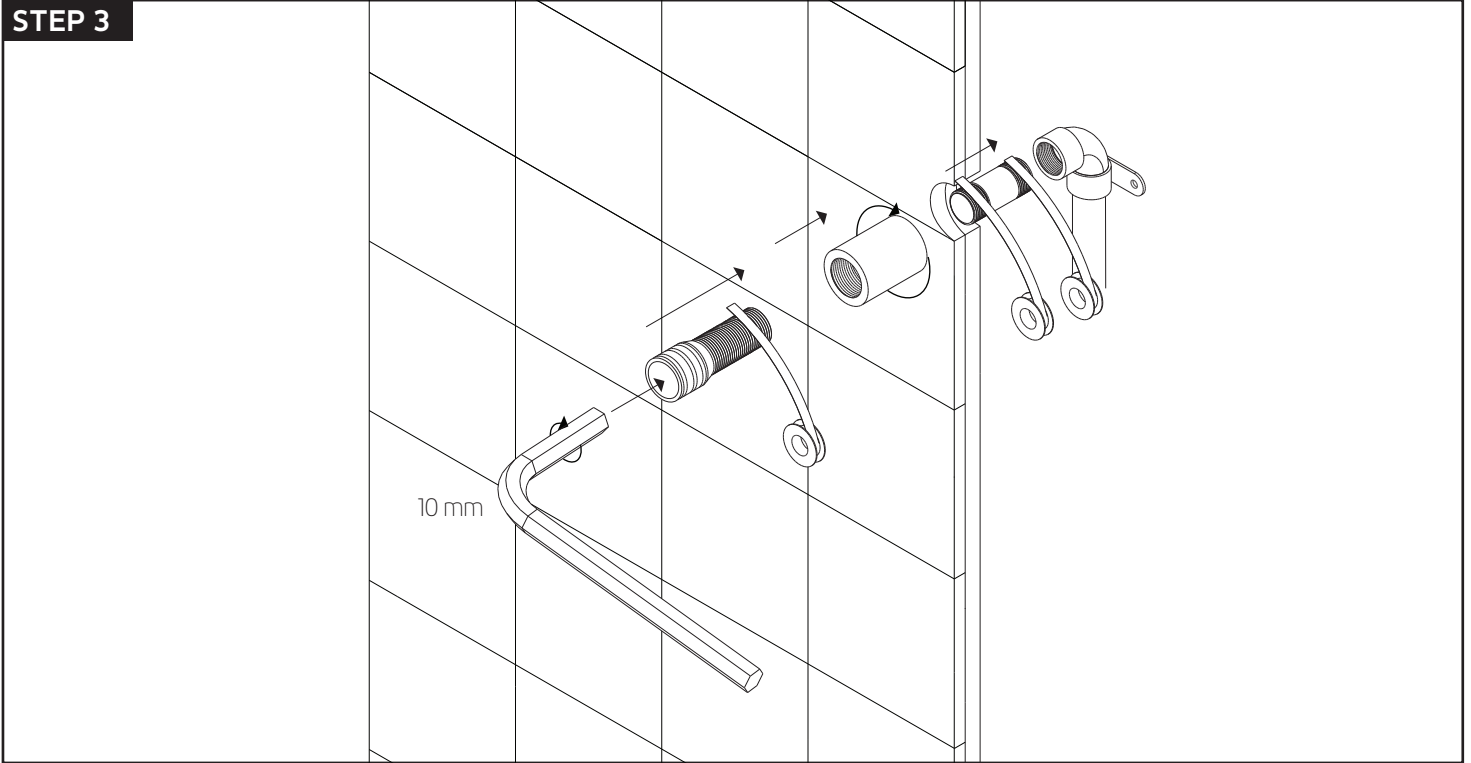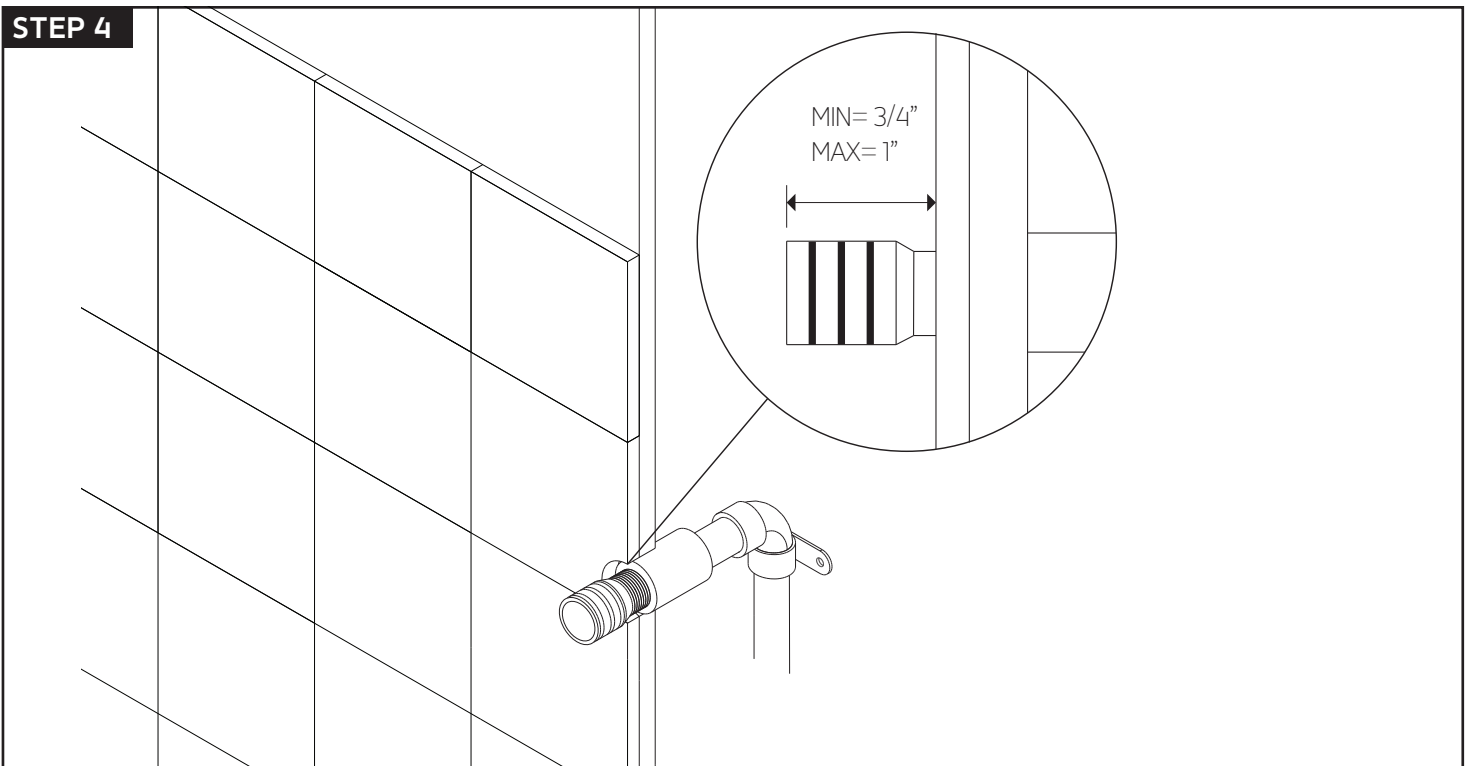
artos

F402-4
wall mount tub filler squ

STEP 5

STEP 6

COIN
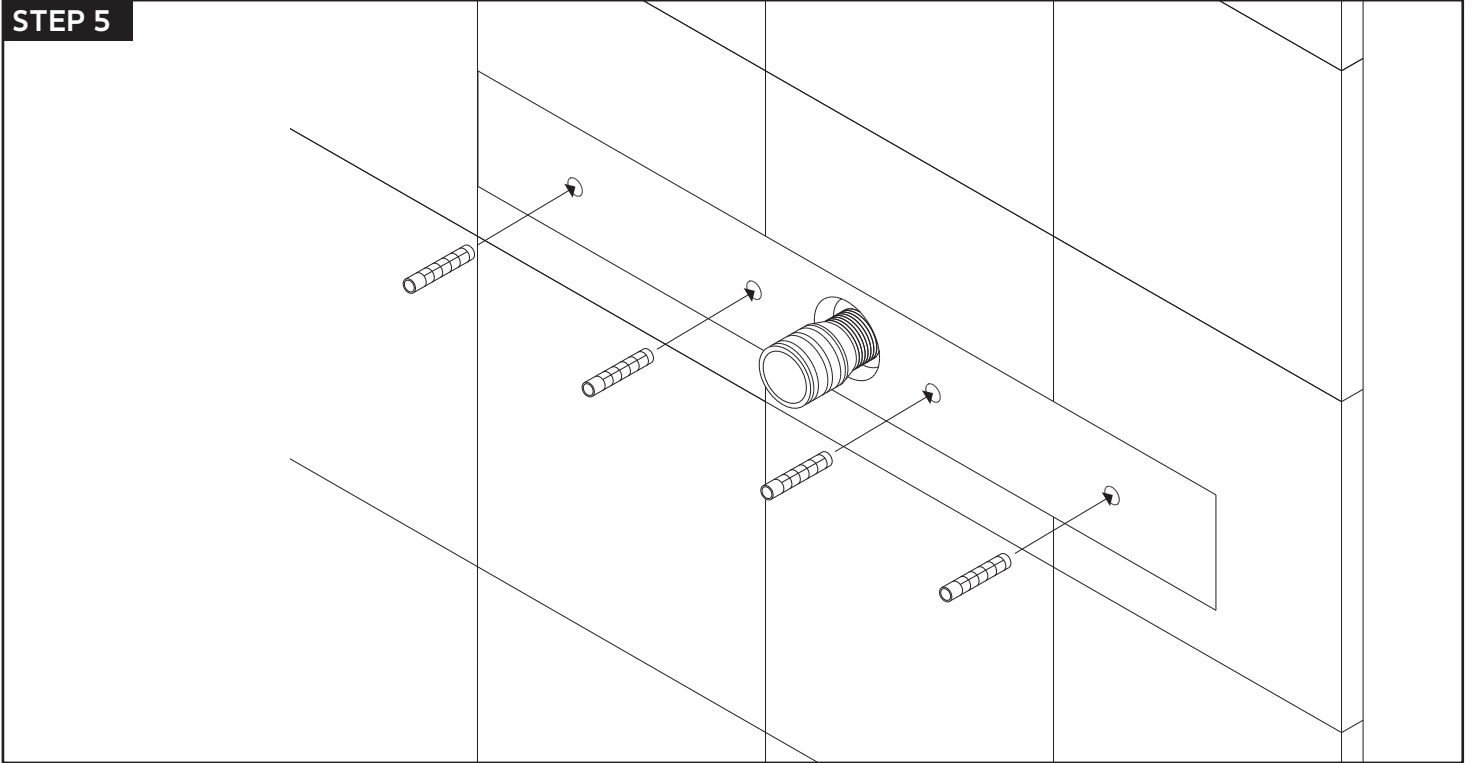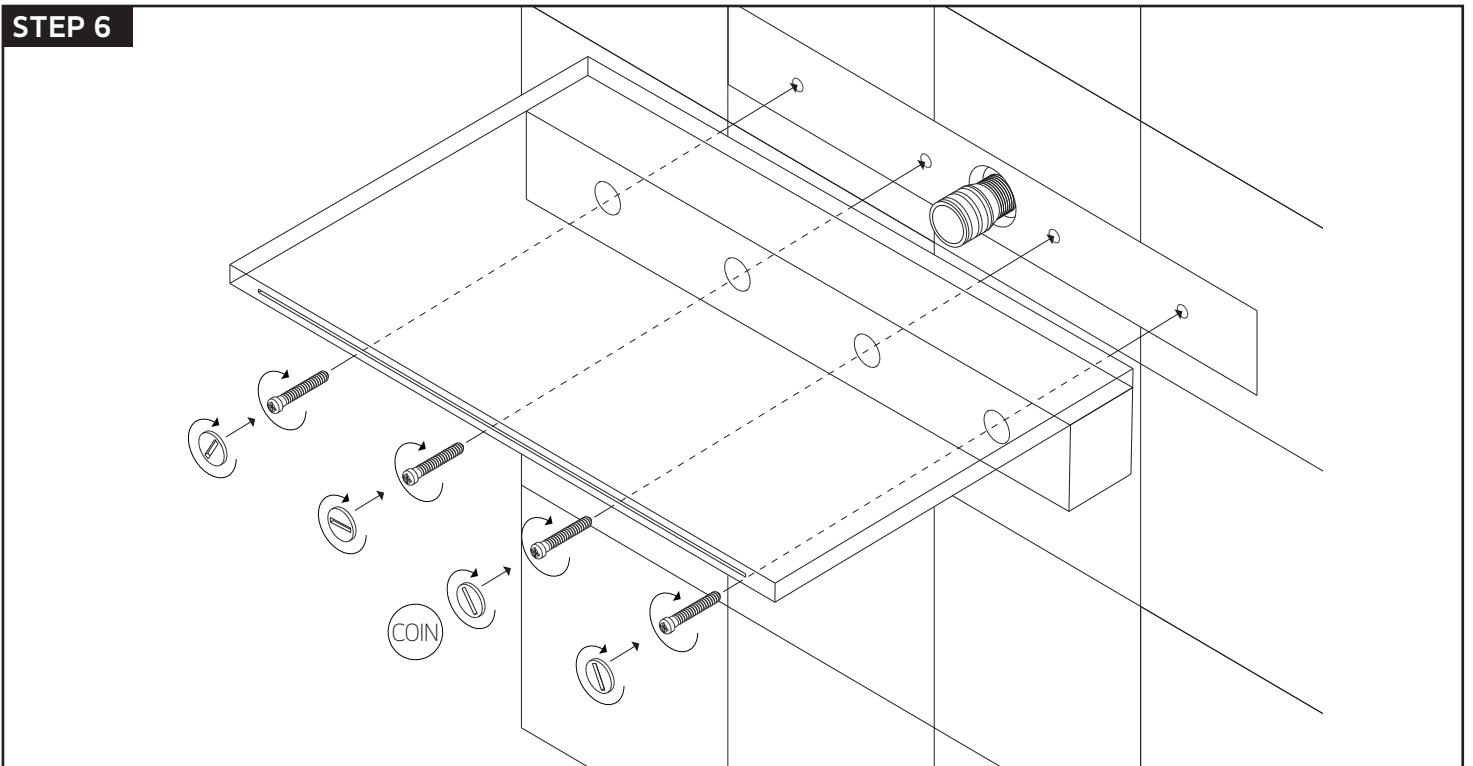
STEP 7
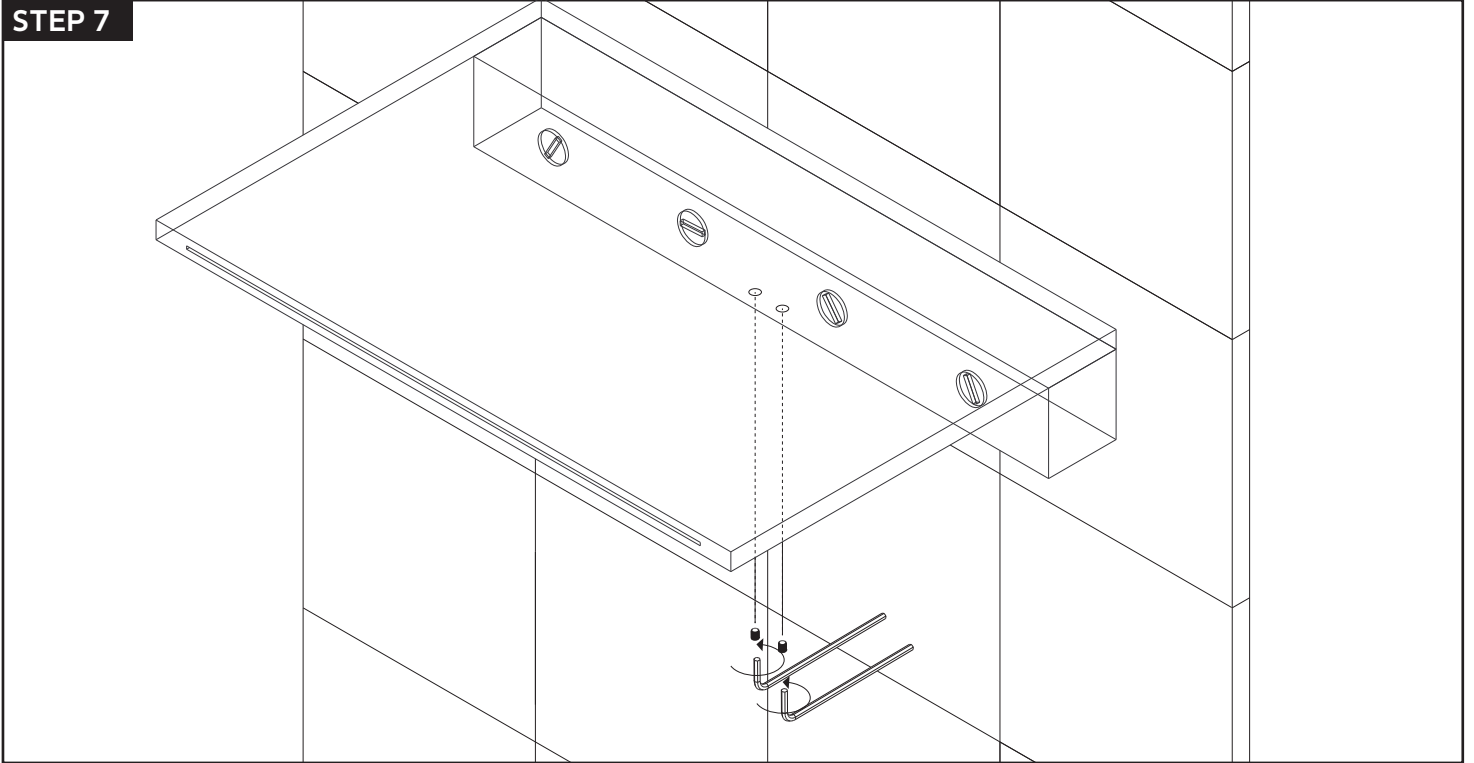
artos

F402-4

wall mount tub filler squ

UPPER SPOUT PANEL(TOP VIEW)

1. **UPPER SPOUT PANEL** F402-4 XP1
2. **LOWER SPOUT PANEL** F402-4 XP2
3. **LOWER SPOUT PANEL SCREWS** F402-4 XP3
4. **SPOUT BODY SEALS** F402-4 XP4
5. **SPOUT BODY** F402-4 XP5
6. **INSTALLATION SCREWS** F402-4 XP6
7. **INSTALLATION SCREW CAPS** F402-4 XP7
8. **SET SCREWS** F402-4 XP8
9. **ALLEN WRENCHES** F402-4 XP9
10. **SPOUT BODY SCREWS** F402-4 XP10
11. **SPOUT BODY WASHERS** F402-4 XP11
12. **WALL CONNECTOR** F402-4 XP12
13. **INSTALLATION TEMPLATE** F402-4 XP13
14. **DRYWALL ANCHORS** F402-4 XP14
15. **LOWER SPOUT PANEL TO BODY SCREWS** F402-4 XP15

UPPER SPOUT PANEL
(BOTTOM VIEW)
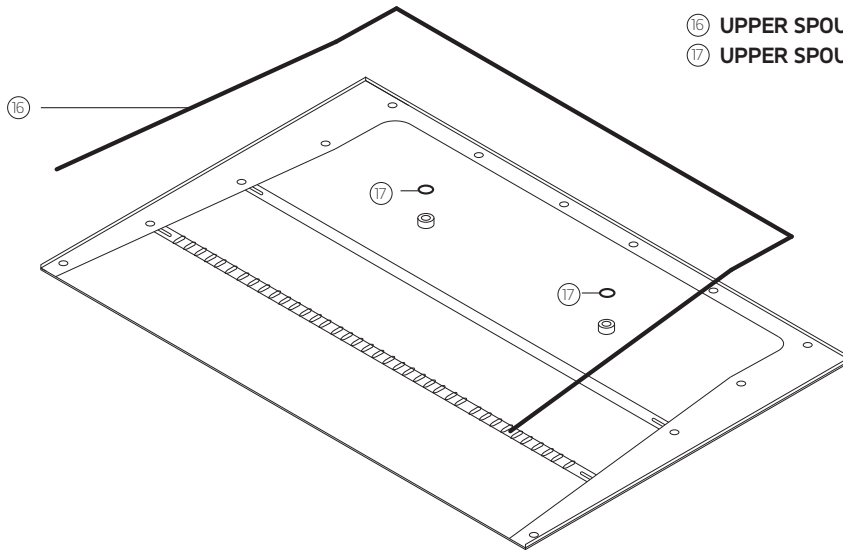
⑯ **UPPER SPOUT PANEL OUTER GASKET**   F402-4 XP16
⑰ **UPPER SPOUT PANEL FIXING GASKET**   F402-4 XP17

artos

CARE & MAINTENANCE

For best results, keep the following in mind to retain the high quality finish of your artos® faucets:

- Use a soft, dampened sponge or cloth. On no account should you use an abrasive material such as a brush, scouring pad or steel wool to clean surfaces.
- Test your cleaning agent solution on an inconspicuous area before applying to the entire faucet.
- Wipe surfaces clean and rinse completely with water immediately after applying cleaning agent.
- An ideal cleaning technique is to rinse faucet thoroughly and blot dry any water from the surface after each use.

LIMITED LIFETIME WARRANTY

artos® faucets are guaranteed for life against leaks and finishing defects for as long as the original purchaser owns it.

Damage caused by accident, misuse, abuse, improper installation, improper cleaning or alteration will void the warranty. This warranty does not cover replacement parts where damage is caused by normal wear and tear. Westover, Inc is not responsible for labor charges, installation or other incidental or consequential costs. Proof of purchase must be provided with all claims.

Please register this product online at WWW.ARTOS.US.COM

ITEM NO. **F402-4**
SERIAL NO.